

# 安装指导手册

单相 低压 混合逆变器 -Isuna 3000S-6000S




本指南仅适用于安装过程的指导说明  
请在安装前详细阅读用户手册


## 安装工具




冲击钻：墙面打孔

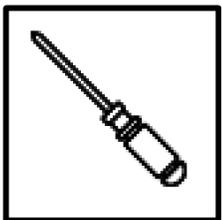

M6十字螺丝刀：拆卸、安装螺丝和接线

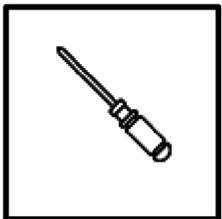


M4十字螺丝刀：拆卸、安装负载端子螺丝

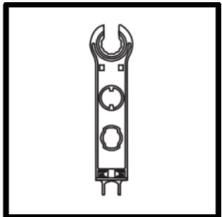


拆卸工具：拆卸PV、BAT线端端子



剥线钳：剥线

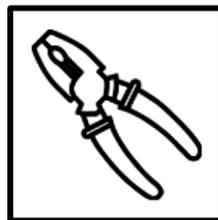

压线钳：压接PV、BAT电缆线


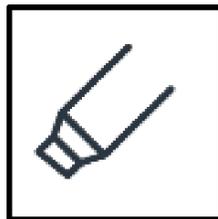


记号笔：打孔记号




卷尺：测量距离


Installation of wall mounts and inverters

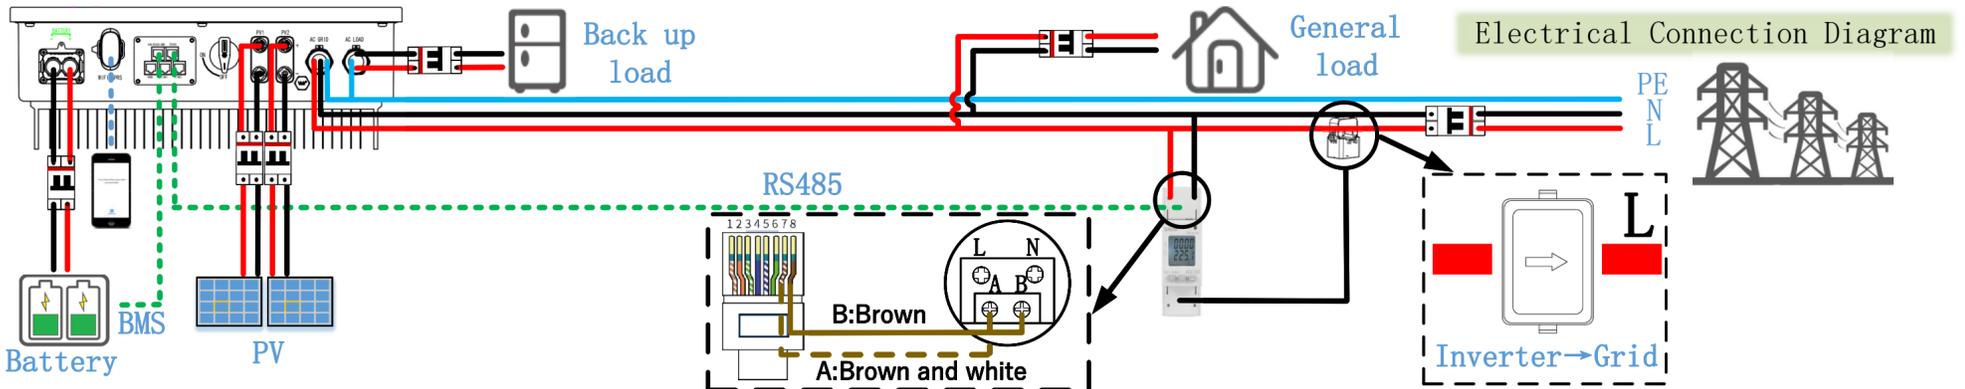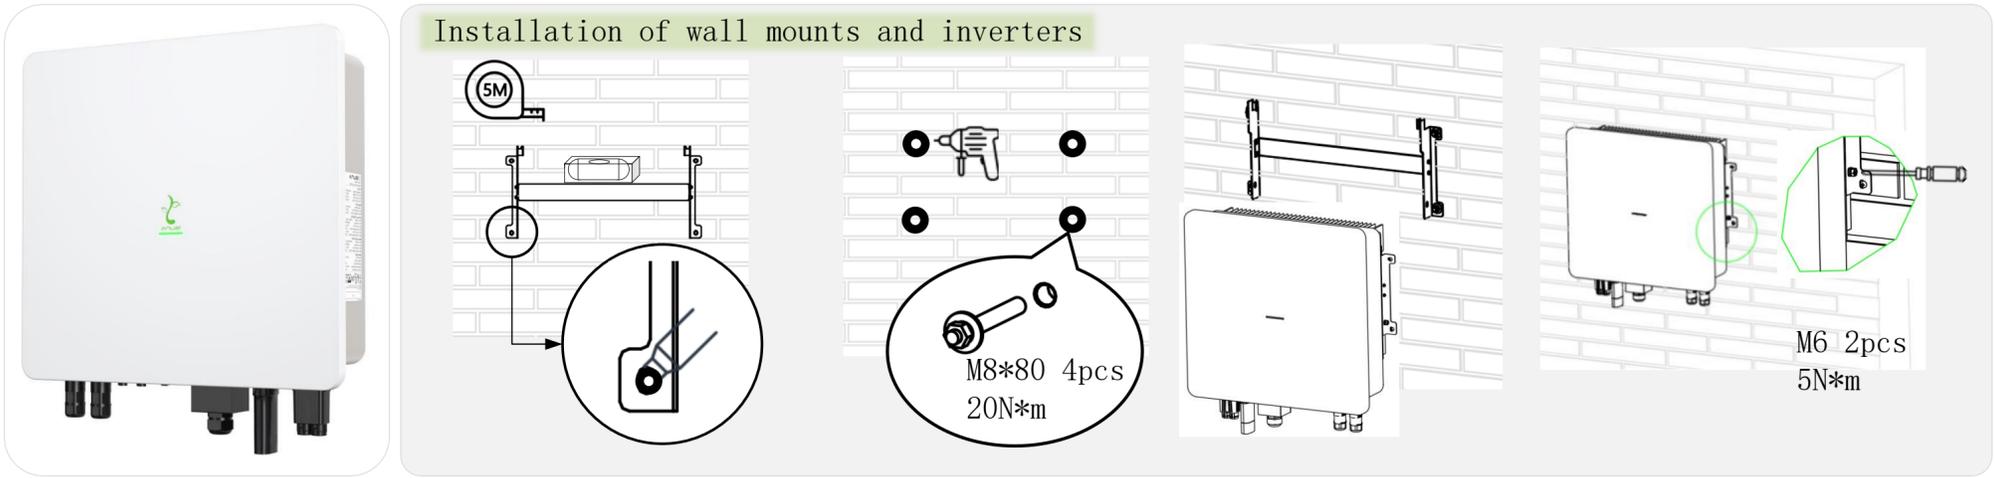

Inverter grounding

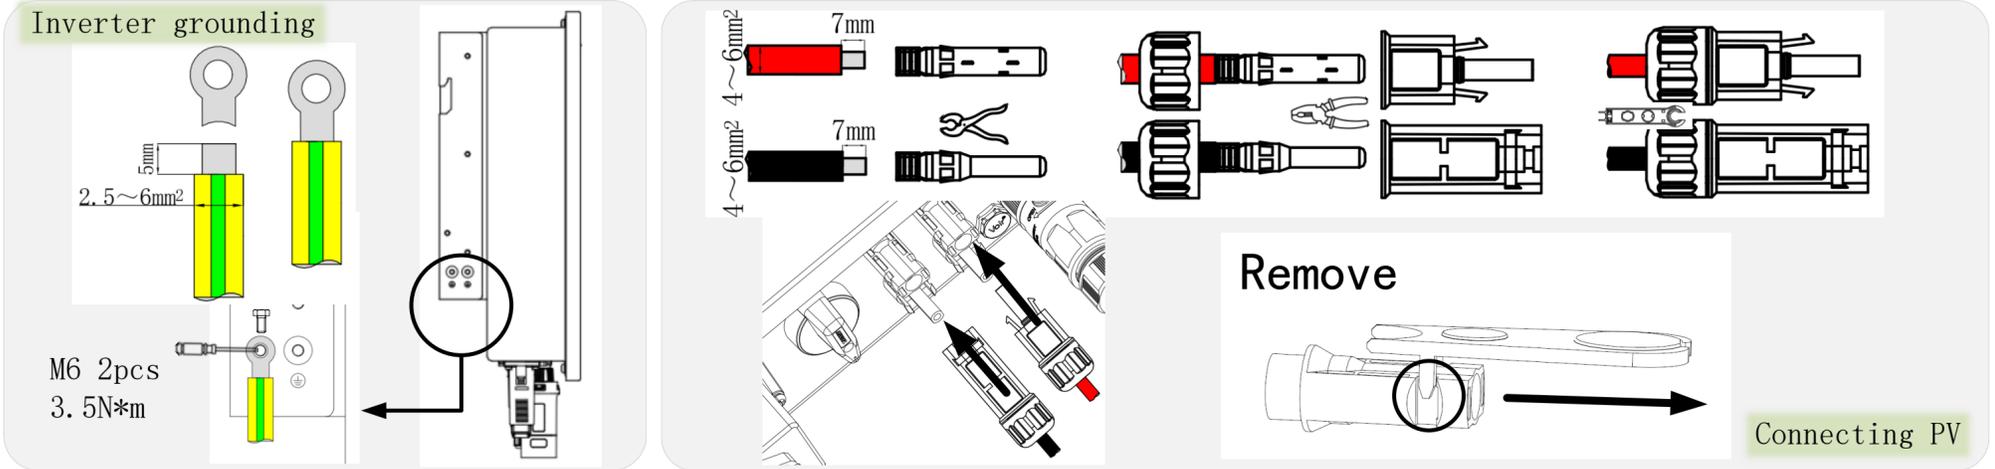


Connecting the battery

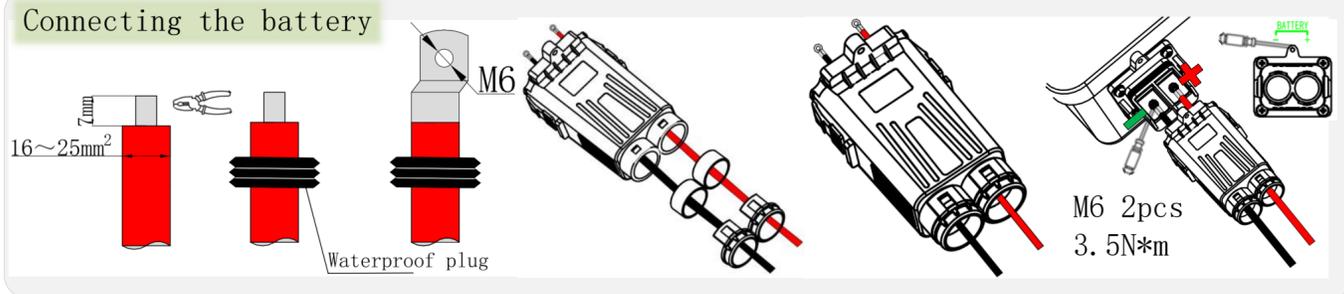


**Avoid incorrect connection between positive and negative!!!**

Connecting the AC Terminal

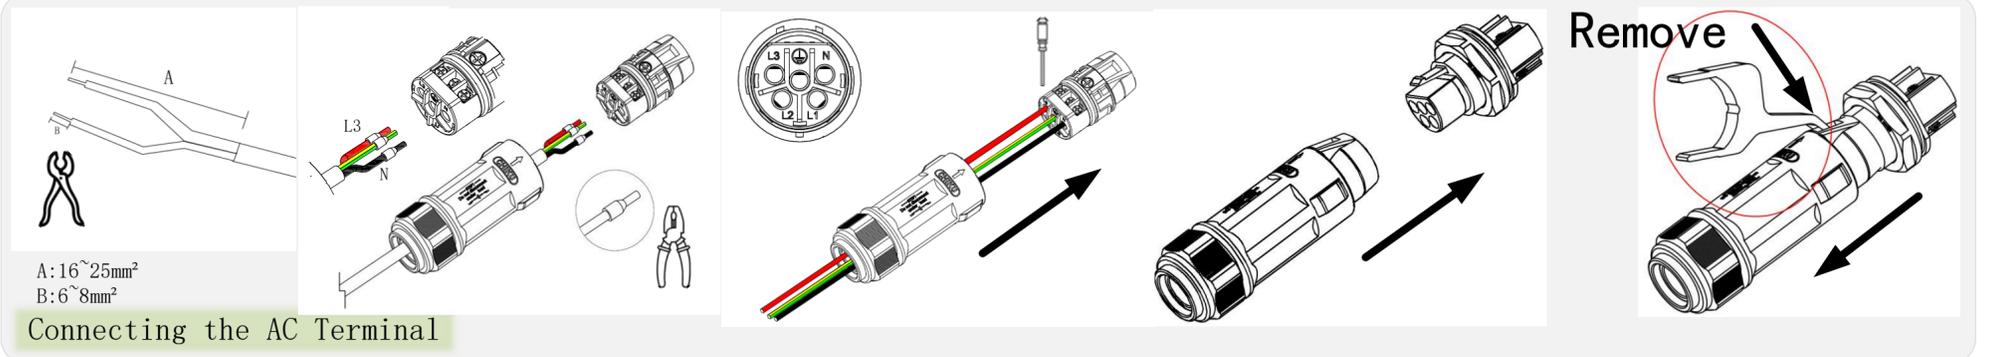

Connecting the WIFI module

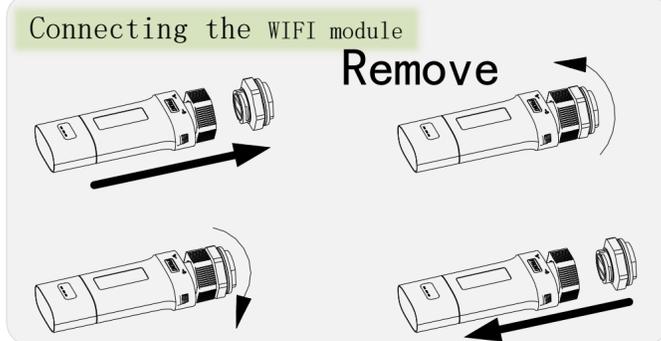

Connecting the waterproof cover of communications port

PIN	Define
4	CAN_A_H
5	CAN_A_L
7	RS485_A_BMS
8	RS485_B_BMS

M4 4pcs 1.2N\*m

ESS Link Download



User Manual Download

