

# 安装指导手册


单相低压混合逆变器 Isuna S3K-SL-S~S6K-SL-S

本指南适用于安装过程的指导说明  
请在安装前仔细阅读用户手册


## 安装工具




冲击钻：墙面打孔

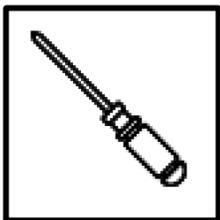

M6十字螺丝刀：拆卸、安装螺丝和接线

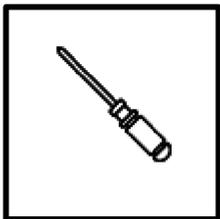


M4十字螺丝刀：拆卸、安装负载端子螺丝

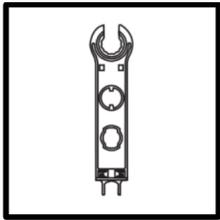


拆卸工具：拆卸PV、BAT线端端子



剥线钳：剥线

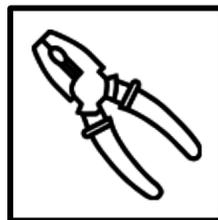

压线钳：压接PV、BAT电缆线

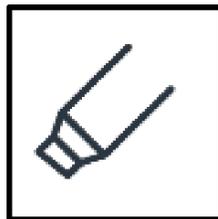


记号笔：打孔记号




卷尺：测量距离


# Electrical Connection Diagram

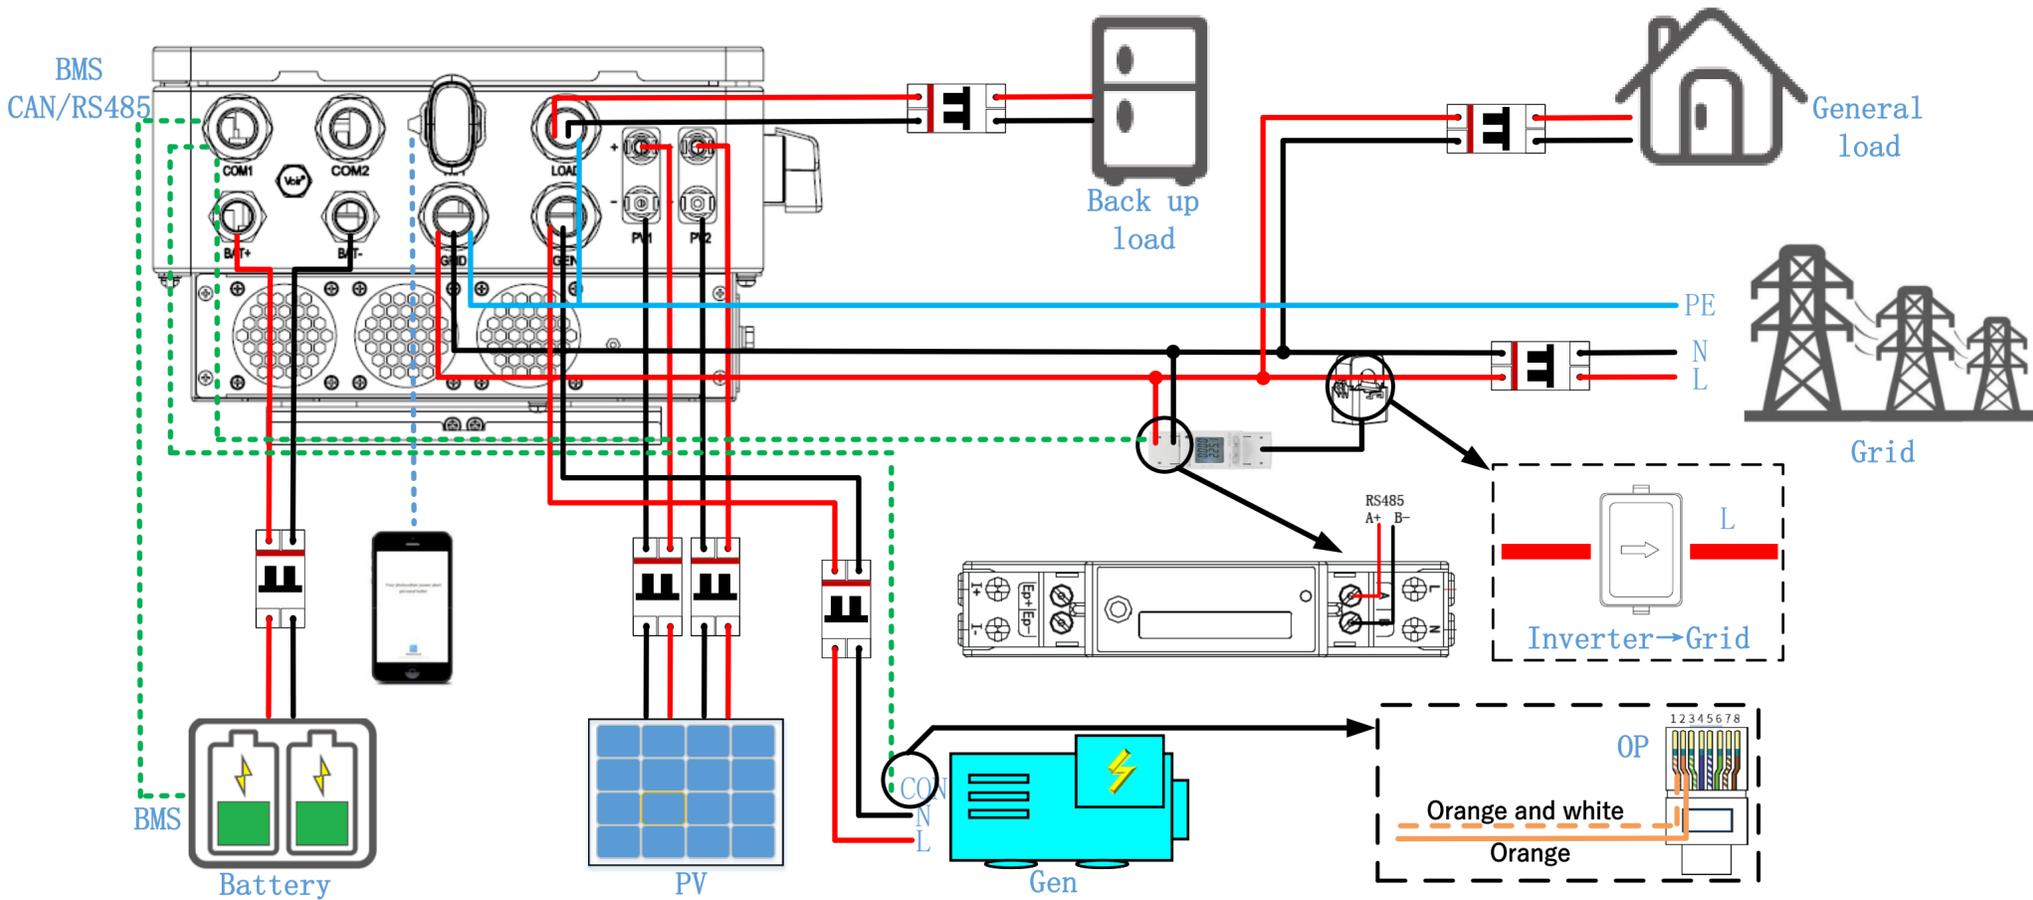


## Installation of wall mounts and inverters

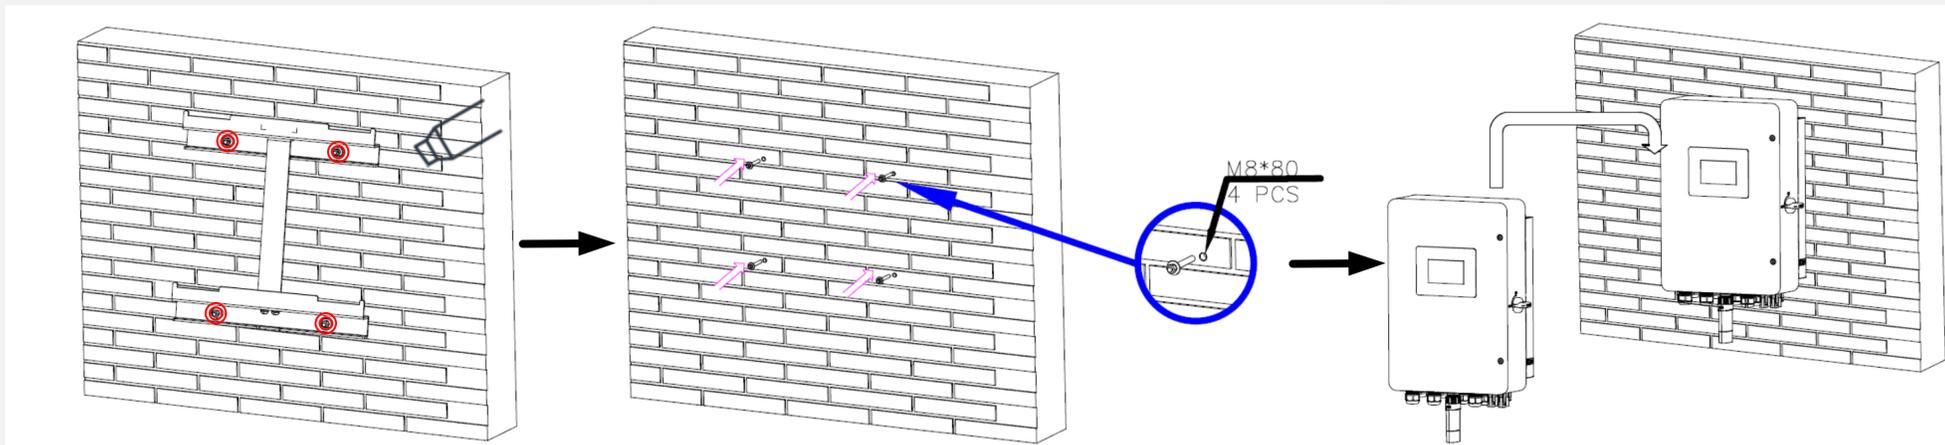


### Connecting the battery

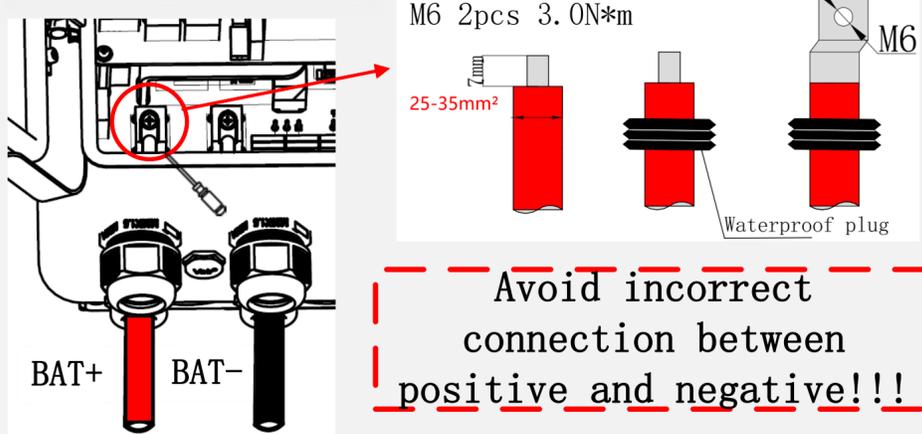


### Connecting the AC Terminal

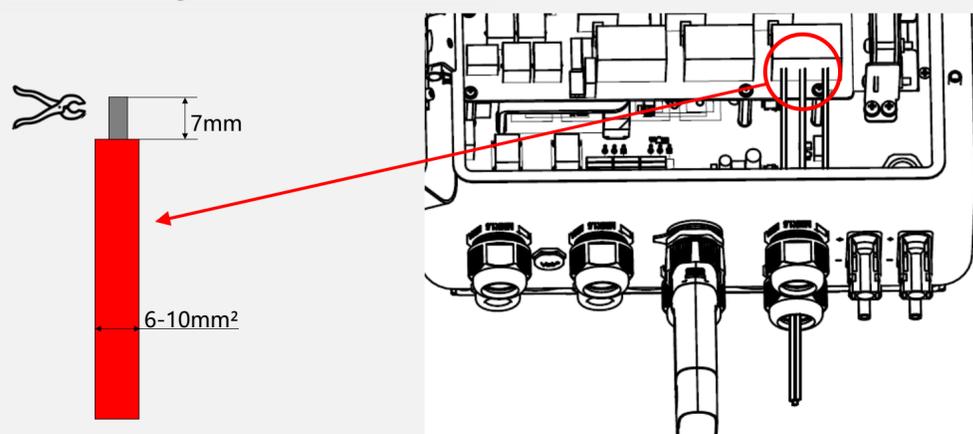


### Inverter grounding

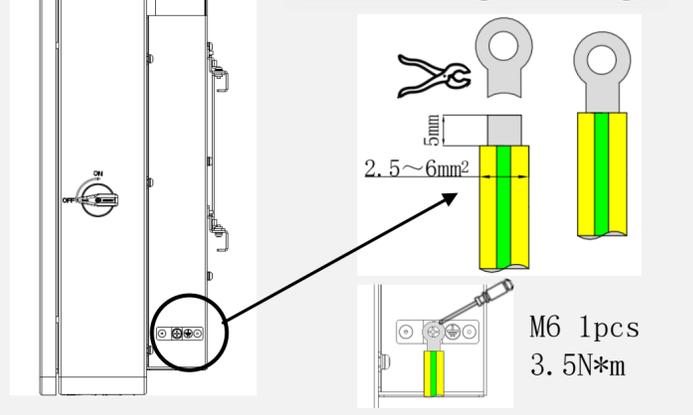

### Connecting PV

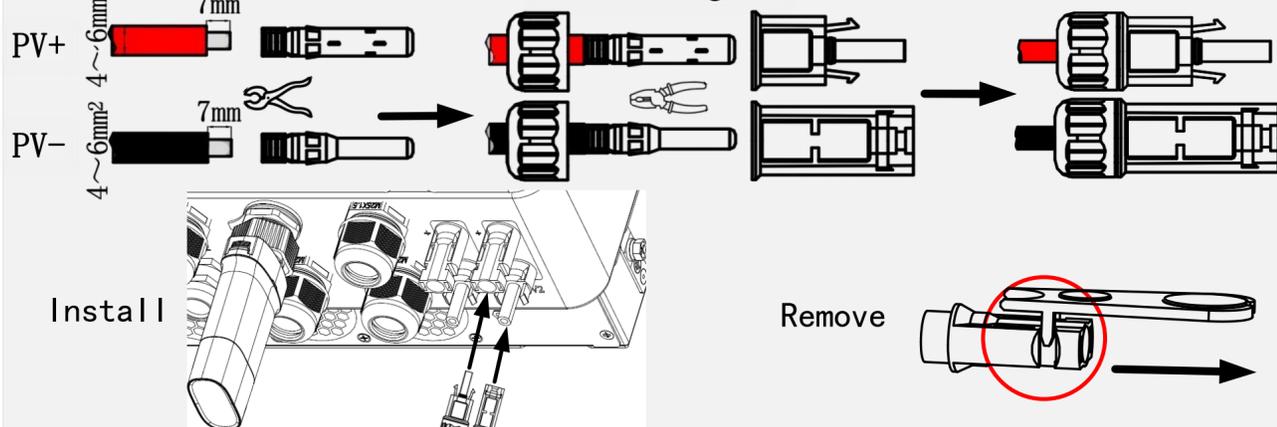

### Connecting the WIFI module

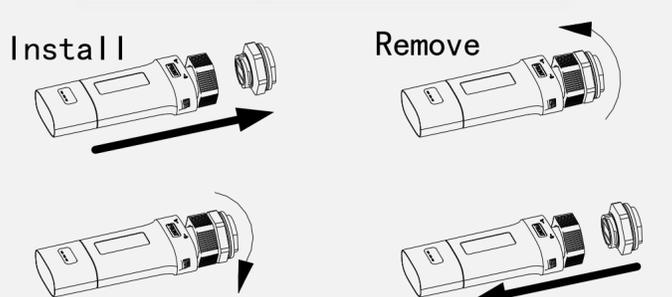

### ESS Link Download



Android QR Code

Google Play Code

App Store Code

Download the user manual for details:  
[www.sinexcel-isuna.com/Download/](http://www.sinexcel-isuna.com/Download/)