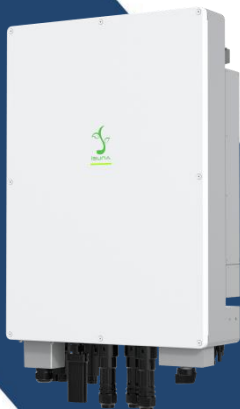


User Manual

Single phase LV Hybrid Inverter

Isuna D5K~D12K-SL



Shenzhen Sinexcel Isuna
Energy Technology Co.,LTD

V1.2

Catalogue

1. Overview	1
1.1 Scope of Application	1
1.2 Applicable Personnel	1
1.3 Symbol Definition	1
2. Safety Precautions	2
2.1 Operation Safety	2
2.2 PV String Safety	3
2.3 Battery Safety	3
2.4 Inverter Safety	4
2.5 Personnel Requirements	4
2.6 Description of Symbols	5
3. Equipment Inspection and Storage	6
3.1 Pre-signing Inspection	6
3.2 Packing List	6
3.3 Equipment Storage	9
4. Product Description	9
4.1 Product Overview	9
4.2 Application Scenario	10
4.3 Appearance Description	11
4.3.1 Appearance Description	11
4.3.2 Size Description	13
5 Installation	14
5.1 Installation Requirements	14
5.1.1 Installation Environment Requirements	14
5.1.2 Mounting Carrier Requirements	15
5.1.3 Mounting Angle Requirements	15
5.2 Mounting Tools	17
5.3 Inverter Transportation	19
5.4 Wall Mounted	20

6. Electrical Connection	21
6.1 Electrical System Connection Diagram	21
6.2 External Port Wiring Instructions	24
6.3 Connecting the Ground Cable (PE)	26
6.4 Connecting the PV Cable and the Battery Cable	27
6.5 Connect battery cable	31
6.6 Connect AC Load/grid/Diesel generator Cable	32
6.7 Installation of Communication Dongle	33
6.8 Connecting the Communication Port	36
6.8.1 Smart Meter Connection	37
6.8.2 BMS Communication Connection	39
6.8.3 DRMS/DI Connection	40
6.8.4 Paralleling	42
7 Inverter Operation	45
7.1 Pre-power-on Inspection	45
7.2 Initial Power-on	45
7.3 Working Mode	46
7.3.1 Self-use Mode (default mode)	46
7.3.2 Timed Charge/Discharge Mode	47
7.3.3 Backup Mode/Disaster Recovery Mode	50
7.3.4 Priority Feed to Grid Mode	51
7.4 Operation Mode	52
7.4.1 Operation Mode Description	52
7.4.2 Indicator Light Description	53
8 App Introduction	56
9. Troubleshooting and Maintenance	57
9.1 Alarm and Processing	57
9.2 Regular maintenance	63
10. Technical Parameters	64

1. Overview

This document describes the product information, installation, electrical connection, configuration and commissioning, troubleshooting and maintenance, and technical specifications of the hybrid inverter. Before installing and using the product, read this manual carefully to familiarize yourself with the safety information and functions and features of the product. Manuals may be updated from time to time, please obtain the latest version from the official website for more product information.

1.1 Scope of Application

This manual is applicable to the following inverters:

Model	Rate output power	Rated output voltage
Isuna D5K-SL	5000W	L/N/PE, 220V/230V/240V
Isuna D6K-SL	6000W	
Isuna D8K-SL	8000W	
Isuna D10K-SL	10000W	
Isuna D12K-SL	12000W	

Note: Since the product will be overload protected at an ambient temperature above 40 °C, the high temperature mode test in the Italian Grid Specification certification will be carried out at an ambient temperature of 40 °C.





1.2 Applicable Personnel

This document is intended for only professional and technical personnel who are familiar with local regulations, standards, and electrical systems, and have professional training and knowledge about this product.

1.3 Symbol Definition


In order to ensure the personal and property safety of users when using hybrid inverters, as well as the efficient use of this product, the manual provides relevant safe operation information and uses corresponding symbols to highlight. To avoid personal injury and property damage, please fully understand and absolutely comply with these stressed information. The symbols used in this manual are listed below.

Isuna D5K~D12K-SL


 Danger
Indicates a highly hazardous situation which, if not avoided, will result in death or serious injury.
 Warning
Indicates a hazard with a medium level of risk that could result in death or serious injury if not avoided.
 Caution
Indicates a hazard with a low level of potential that, if not avoided, could result in moderate or minor injury.
 Attention
Indicates a potentially hazardous situation that, if not avoided, may cause equipment failure or property damage.

2. Safety Precautions

The safety precautions contained in this document must be followed when operating the device.

 Attention
<ul style="list-style-type: none">➤ The inverter has been designed in strict accordance with safety regulations and has passed the tests. However, as an electrical device, you must comply with relevant safety instructions before performing any operation on the device. Improper operation may result in serious injury or property damage.

2.1 Operation Safety

 Attention
<ul style="list-style-type: none">➤ Read this manual carefully before installing the device to understand the products and precautions.➤ All operations on the equipment must be carried out by professional electrical technicians who are familiar with the local standards and safety regulations.➤ When operating inverters, use insulation tools and wear personal protective equipment. Wear ESD gloves, an ESD wrist strap, and an ESD suit when touching electronic

components to prevent damage caused by static electricity.

- The manufacturer shall not be liable for inverter damage or personal injury caused by failure to install, use, or configure the equipment in accordance with the requirements of this manual.

2.2 PV String Safety



Danger

- Use the DC wiring terminal delivered with the chassis to connect the DC cables of the inverter. Use of other types of DC terminals may cause serious consequences. Therefore, the manufacturer is not responsible for the damage to the device.



Warning

- Ensure that the assembly frame is properly grounded to the support system.
- After connecting DC cables, ensure that the cables are securely connected.
- Use a multimeter to check whether the positive and negative DC wiring terminals of the battery are connected correctly and the voltage is within the allowable range.
- Do not connect the same PV series to multiple inverters; otherwise, the inverters will be damaged.

2.3 Battery Safety



Warning

- Read the battery safety contents in the user manual carefully before installing the device, and strictly follow the instructions in the user manual.
- The battery current may be affected by external environment, such as temperature and humidity, which may cause battery current limiting and affect battery on-load performance.
- If the battery does not start, contact the after-sales service center as soon as possible. Otherwise, the battery may be permanently damaged.
- Use a multimeter to check whether the positive and negative DC wiring terminals of the battery are connected properly and the voltage is within the allowable range.
- Do not connect the same battery string to multiple inverters. Otherwise, the inverters may be damaged.

2.4 Inverter Safety



Warning

- Ensure that the voltage and frequency of the grid-connected access point comply with the inverter grid-connected specifications.
- A protection device, such as a circuit breaker or fuse, is recommended for the AC side of the inverter. Ensure that the protection device is greater than 1.25 times the maximum AC output current of the inverter.
- The GND cable for the inverters must be securely connected. When multiple inverters are combined, ensure that the protection ground points on all inverters' chassis shells are equipotential connected.
- If the battery is not configured in the photovoltaic system, it is not recommended to use the off-grid function, and the resulting system electricity risk will not be covered by the equipment manufacturer's warranty.

2.5 Personnel Requirements








Attention

- When the inverter is running, some components may be charged or hot. Improper use, incorrect installation, or operation may result in serious injury to person or property. Transportation, loading, unloading, installation, starting and maintenance operations must be performed by qualified electrical engineers.

2.6 Description of Symbols

There are some safety-related labels on the hybrid inverter. Please read and fully understand these labels before installing the product.

Symbol	Symbol name	Symbol meaning
	It indicates the danger of residual voltage in the inverter.	Please wait for 5 minutes until the capacitor is completely discharged after the DC side of the inverter has been disconnected with power for a period of time.
	It indicates the danger of high voltage.	High voltage exists during inverter operation. If you need to operate the inverter, please make sure the inverter is disconnected.
	It indicates to be careful of high temperature surface.	The temperature of inverter housing is high during operation, so do not touch it, otherwise it may cause burns.
	It indicates grounding terminal.	Connect the inverter to ground for grounding protection purpose.
	It indicates reading the manual.	Please read and understand this manual carefully before installing the inverter.

3.Equipment Inspection and Storage

3.1 Pre-signing Inspection

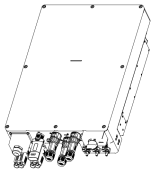




Before signing for the product, please check the following:

- Check the outer packing for holes, distortions, cracks, or other signs that may cause damage to the equipment in the packing case. If so, do not open the packing and contact your distributor.
- Check whether the inverter type is correct. If not, do not open the package and contact your dealer.
- Check whether the type and quantity of the delivered package are correct and whether the appearance is damaged. If damaged, please contact your dealer.







3.2 Packing List

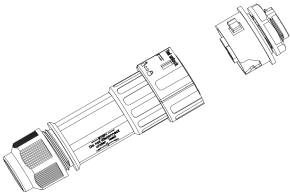 After the inverter is unpacked, check whether the delivered package are complete. If any components are found missing or incomplete, contact the dealer in time.


 
 

 
 
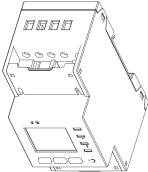

Table 3-1 Components and mechanical parts to be delivered

No.	photos	descriptions	quantity
1		Inverter	1 PCS
2		WiFi dongle (optional)	1 PCS
3		e-user manual	1 PCS
4		Certificate, Quality assurance card	1 PCS
5		Delivery inspection report	1 PCS





Isuna D5K~D12K-SL

6		AC load terminal AC grid terminal AC generator terminal	3 PCS
7		Blue 16.0mm ² cable lugs (for load/grid/generator side wiring)	9 PCS
8		BAT input terminal protective cover	5 PCS
9		PV+ wire end input terminal plastic case	3 PCS
10		PV- wire end input terminal plastic case	3 PCS
11		PV-&BAT-wire end input terminal metal core	3 PCS

Isuna D5K~D12K-SL

12		PV+ & BAT+ wire end input terminal metal core	3 PCS
13		Wall-mounted rear cover	1 PCS
14		M8*80 expansion bolt	3 PCS
15		Waterproof cover	1 PCS
16		Cross recessed hexagon head combination screw M6*12	1 PCS
17		Cross recessed hexagon head combination screw M6*10	2 PCS
18		Smart meter	1PCS
19		CT (used with the meter)	3PCS

Isuna D5K~D12K-SL

20		Meter communication line	1 PCS
21		BMS communication line	2 PCS
22		PV & BAT Disassembly wrench	1 PCS
23		Desiccant	1 PCS

3.3 Equipment Storage

If the inverter is not put into use immediately, store it according to the following requirements:

- Ensure that the outer packing case is not removed and the desiccant is not lost.
- Ensure that the storage environment is clean and within appropriate temperature and humidity ranges.
- Ensure that inverters are placed in the height and direction according to the labels on the packing cases.
- Ensure that there is no tilt and fall risk after inverters are stacked.
- After the inverter is stored for a long time, check and confirm the inverter before it can be used.

4.Product Description

4.1 Product Overview

Hybrid inverter is a photovoltaic grid-connected inverter and battery energy storage as one, with a variety of built-in working modes to suit the diversified needs of users. In the period of rising energy costs such as oil and coal, the continuous decline of energy subsidies for

photovoltaic grid-connected systems, mountain areas or base stations without grid, uninterrupted power supply and emergency power supply needs, hybrid inverters can provide a complete solution.

4.2 Application Scenario



Warning

- The photovoltaic system is not suitable for devices that rely on stable power supply, such as life-sustaining medical devices. Ensure that no personal injury is caused when the system is powered off.
- Do not use a load with a high starting current in the photovoltaic system. Otherwise, the off-grid output may fail due to excessive instantaneous power.
- When the inverter overload protection occurs for a single time, the inverter can automatically restart; If it happens several times, the inverter will stop, and after the fault is rectified, the inverter can be restarted immediately through the App.
- If the load capacity exceeds the rated power of the inverter during power failure, the off-grid function of the inverter automatically shuts down. To start, turn off the large load and ensure that the load power is smaller than the rated power of the inverter.
- When the inverter is in off-grid mode, it can be used normally for ordinary household load.
- Inductive load: 1.5P non-variable frequency air conditioners are supported. The standby mode may be unstable if two or more non-variable frequency air conditioners are connected.
- Capacitive load: total power $\leq 0.7 \times$ rated output power of inverter.

Isuna D5K~D12K-SL

4.3 Appearance Description

4.3.1 Appearance Description

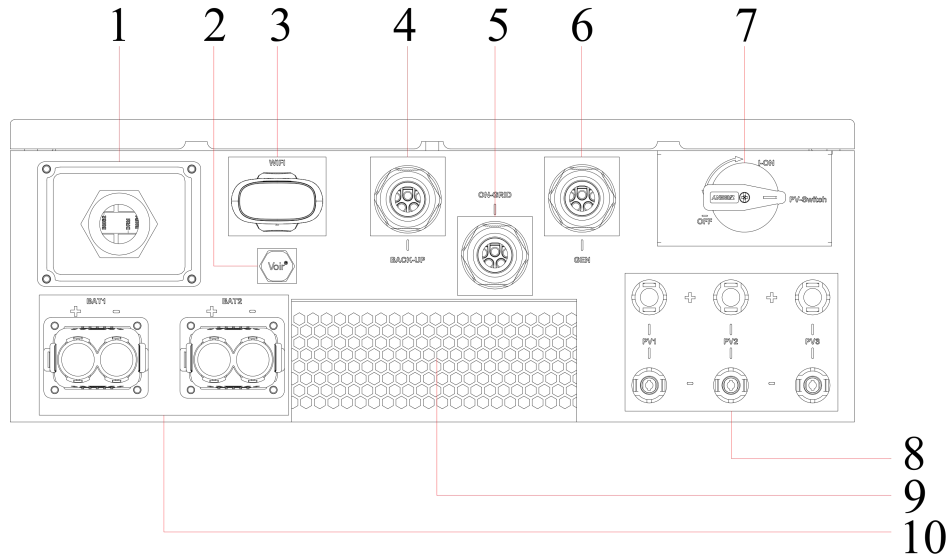


Figure 4.1 Illustration of the appearance of the inverter

Isuna D5K~D12K-SL

Table 4-1 Appearance of the inverter

1	Communication module interface	2	Waterproof and breathable device
3	WiFi/4G interface	4	Off-grid AC wiring port
5	Grid-connected AC wiring port	6	Generator-connected AC wiring port
7	PV DC input switch	8	PV DC input port (PV+/-)
9	Fan assembly	10	Battery DC input port (BAT+/-)

4.3.2 Size Description

Figure 4.2 Overall size of inverter

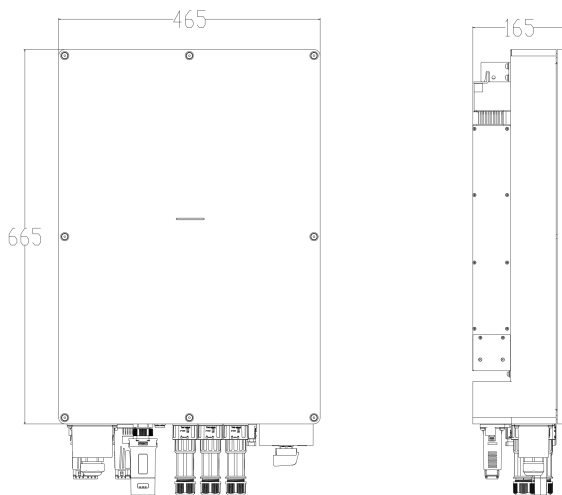


Figure 4.3 Dimensions of wall mount

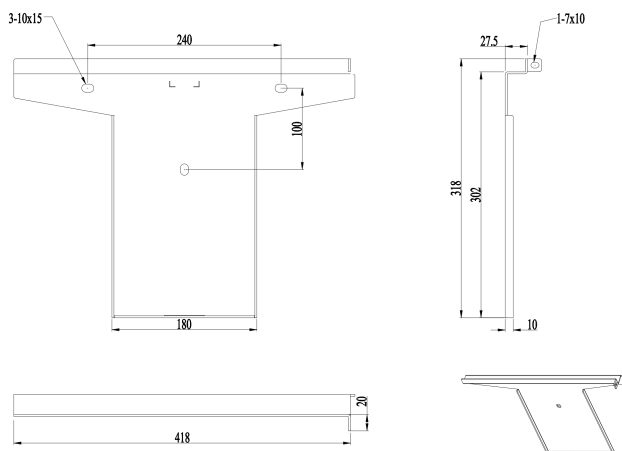



Figure 4.3 Dimensions of wall mount

5 Installation

5.1 Installation Requirements

5.1.1 Installation Environment Requirements

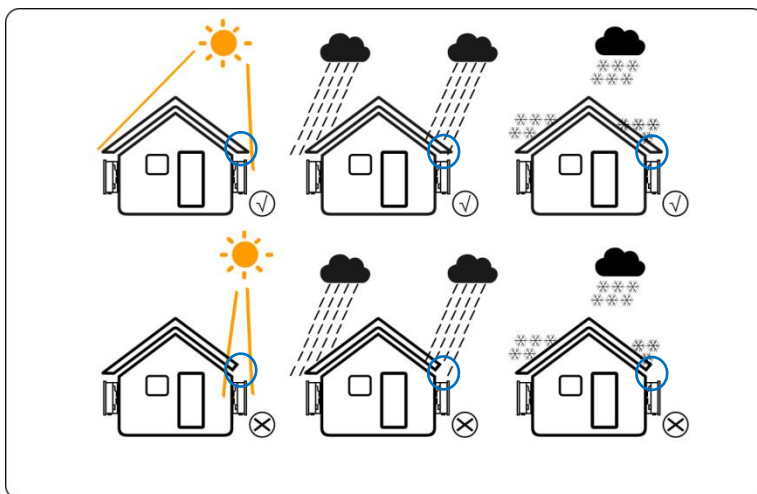- 1) The equipment must not be installed in flammable, explosive, corrosive and other environments.
- 2) The installation position should be away from water pipes and cables in the wall to avoid danger during drilling.
- 3) The installation position should be out of the reach of children, and avoid installation in a position that is easy to touch. There may be high temperature on the surface of the equipment during operation to prevent burns.
- 4) The inverter should avoid the installation environment such as sun, rain, snow, etc. It is recommended to install it in a sheltered installation position. If necessary, an awning can be built.
- 5) The installation space must meet the requirements of ventilation, heat dissipation and operation space.
- 6) The protection level of the equipment complies with the requirements for indoor and outdoor installation, and the installation environment temperature and humidity must be within the appropriate range.
- 7) Make sure that the inverter indicator light and all labels are easy to view and that the terminal is easy to operate.
- 8) The inverter installation altitude should lower than the maximum working altitude 4000m.
- 9) Stay away from strong magnetic field environment to avoid electromagnetic interference. If a radio station or a wireless communication device below 30MHz is located near the installation location, install the device according to the following requirements:
 - Add a ferrite core with multi-turn winding at the inverter DC input line or AC output line, or add a low-pass EMI filter.
 - The distance between the inverter and the wireless electromagnetic interference device exceeds 30m.




5.1.2 Mounting Carrier Requirements

- 1) The installation carrier must not be flammable material and must have fire resistance.
- 2) Please ensure that the installation carrier is solid and reliable, and can carry the weight of the inverter.
- 3) When the equipment is running, it will make noise. Do not install it on the carrier with poor sound insulation, so as to avoid the noise emitted by the equipment when it is working, which will cause trouble to residents in the living area.

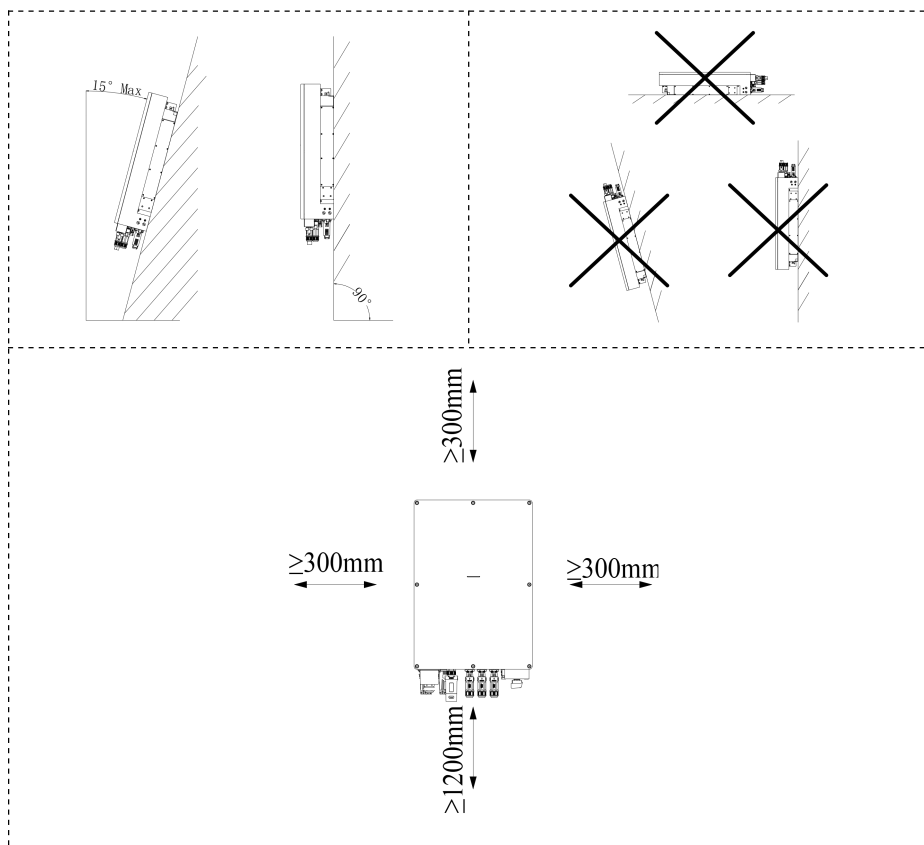5.1.3 Mounting Angle Requirements

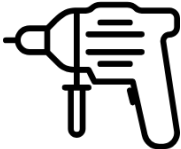

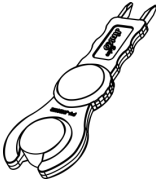

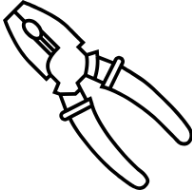

- 1) Recommended inverter installation Angle: vertical or backward $\leq 15^\circ$.
- 2) Do not invert, tilt forward, tilt back beyond the Angle, horizontal installation.
- 3) At least 1.2m from the ground below the inverter, about at least 300mm.

Isuna D5K~D12K-SL




 




5.2 Mounting Tools


Table 5-1 List of installation tools

Series No.	Tools	Description	Function
1		Percussion drill Recommended 10mm drill	Wall drilling
2		6mm cross-head screwdriver	Removing, installing screws and wiring
3		Removal tool	Removal of PV, line end terminals
4		Wire strippers	Stripping wire
5		Crimping pliers	Crimping PV and BAT cables
6		Crimping pliers	Pressure welding grid, load end cable

Isuna D5K~D12K-SL

7		Multimeter	Check whether the cable wiring is correct, the positive and negative battery terminals are correct and voltage, and grounding is reliable
8		Marking pen	Drilling mark
9		Tape	Measurement distance
10		Protective gloves	Wear when setting up the inverter
11		Goggles	Wear when drilling holes
12		Dust mask	Wear when drilling holes

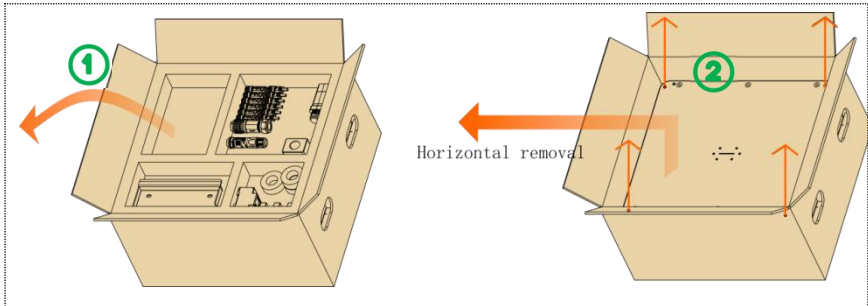5.3 Inverter Transportation



Caution

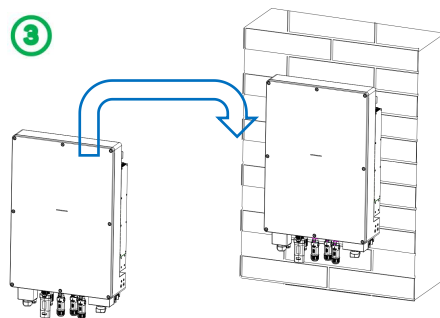
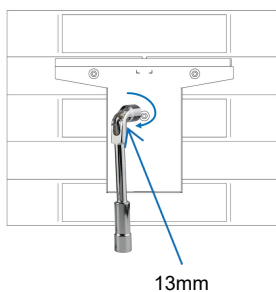
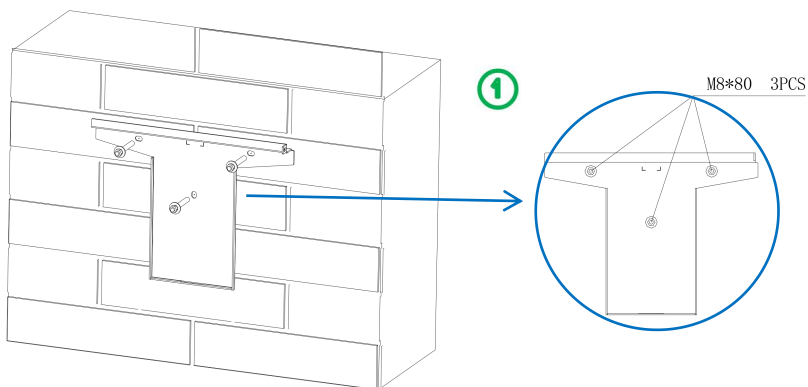
- When transporting, turning around, installing and other operations, it must comply with the laws and regulations and relevant standards of the country or region where it is located.
- The inverter is heavy. Please keep it balanced during handling to prevent the inverter from falling and injuring the operator.
- The power cable and signal cable ports at the bottom of the inverter cannot bear any weight. Do not touch wiring terminals directly. Place the inverter horizontally.
- When the inverter is placed on the ground, put foam or paper under it to avoid damage to the shell.

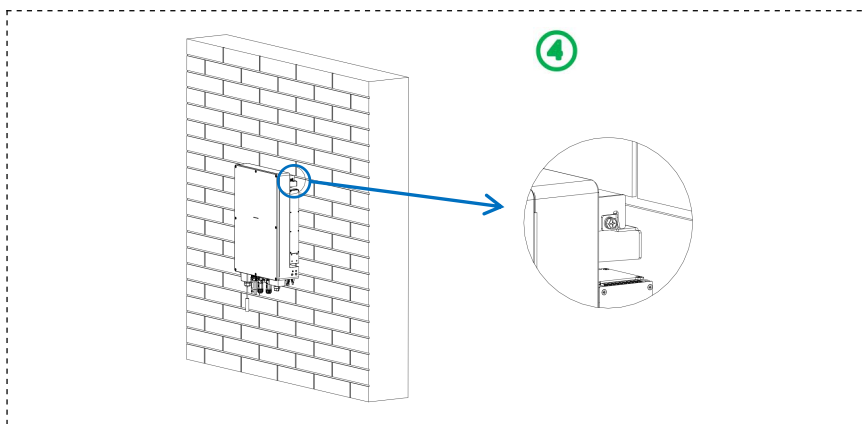
5.4 Wall Mounted



Attention

- When drilling holes, ensure that the holes are drilled away from water pipes and cables in the wall to avoid dangers.
- When drilling holes, wear goggles and a dust mask to prevent dust from inhaling into the respiratory tract or falling into the eyes.





6. Electrical Connection

Before installation and maintenance, ensure that the AC/DC side is not powered on. The capacitors are still powered on for a period of time after the inverter is powered off. Therefore, wait at least five minutes to ensure that the capacitors are fully discharged. Hybrid inverters are used in battery energy storage photovoltaic systems. Equipment can be damaged if not used as intended.

6.1 Electrical System Connection Diagram



Attention

- Connect the N and PE cables to the ON-GRID and BACK-UP ports of the inverters in different regions according to local regulations. For details, see local regulations.
- If the BACK-UP AC port is powered on after the inverter is started, power off the inverter to maintain the backup load. Otherwise, electric shocks may occur.
- Inverter ON-GRID and BACK-UP AC ports have built-in relays. When the inverter is in off-grid state, the built-in ON-GRID relay is in disconnected state; When the inverter is in the on-grid state, the built-in ON-GRID relay is in the closed state.

NOTE:

- 1、Recommended parameters for DC circuit breakers on the battery side: Rated voltage $\geq 100\text{V}$, rated current $\geq 150\text{A}$
- 2、Power grid side AC circuit breaker parameters recommended: rated voltage $\geq 500\text{V}$, rated

Isuna D5K~D12K-SL

current $\geq 80\text{A}$



3、 Back-up AC circuit breaker parameters recommended: rated voltage $\geq 500\text{V}$, rated current $\geq 80\text{A}$

4、 Diesel generator side AC circuit breaker parameters recommended: rated voltage $\geq 500\text{V}$, rated current $\geq 80\text{A}$





6.2 External Port Wiring Instructions

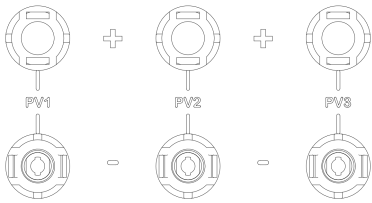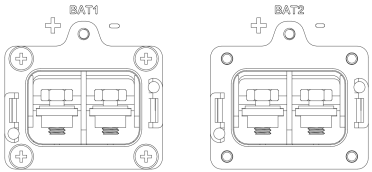
Table 6-1 Cable Model and Specification Descriptions

Port	Definition	Cable type	Cable specification
	+: Connect to PV positive pole	Outdoor Multi-Core Copper Cable	Recommended 6mm ² cross-sectional area of conductor, maximum current through the wire is 30A
	-: Connect to PV negative pole		
	+: Connect to battery positive pole	Outdoor Multi-Core Copper Cable	Recommended 35mm ² cross-sectional area of conductor, the maximum current through the wire shall be 150A
	-: Connect to battery negative pole		

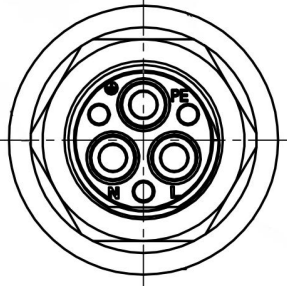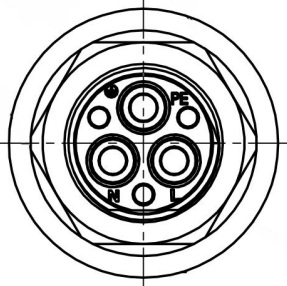
Isuna D5K~D12K-SL

	AC load port	L	Outdoor Multi-Core Copper Cable	Recommended 8AWG cross-sectional area of conductor, maximum current through the leading wire is 60A, grounding cable specifications are the same as the phase conductor
		N		
		PE		
	AC grid port	L	Outdoor Multi-Core Copper Cable	Recommended 6AWG cross-sectional area of conductor, maximum current through the wire is 80A, grounding cable specifications are the same as the phase conductor
		N		
		PE		

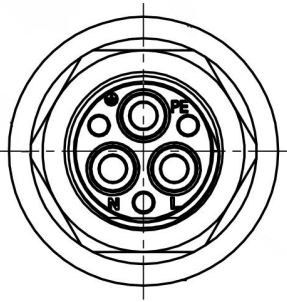Isuna D5K~D12K-SL

	AC grid port	L	Outdoor Multi-Core Copper Cable	Recommended 6AWG cross-sectional area of conductor, maximum current through the wire is 80A, grounding cable specifications are the same as the phase conductor
		N		
		PE		

6.3 Connecting the Ground Cable (PE)


 Attention

➤ Since the inverter is a transformer-less type, it is required that the positive and negative electrodes of the photovoltaic array cannot be grounded, otherwise the inverter will fail. In the photovoltaic power system, all non-current-carrying metal components (such as brackets, distribution cabinet enclosures, inverter enclosures, etc.) should be connected to the ground.

Figure 6.2 Schematic diagram of protection grounding

For yellow-green outdoor cables, use a wire stripper to strip the insulation layer of the ground cable to an appropriate length. Insert the wire core stripped of the insulation layer into the conductor crimping area of the OT terminal, and press it tightly with wire crimping pliers.

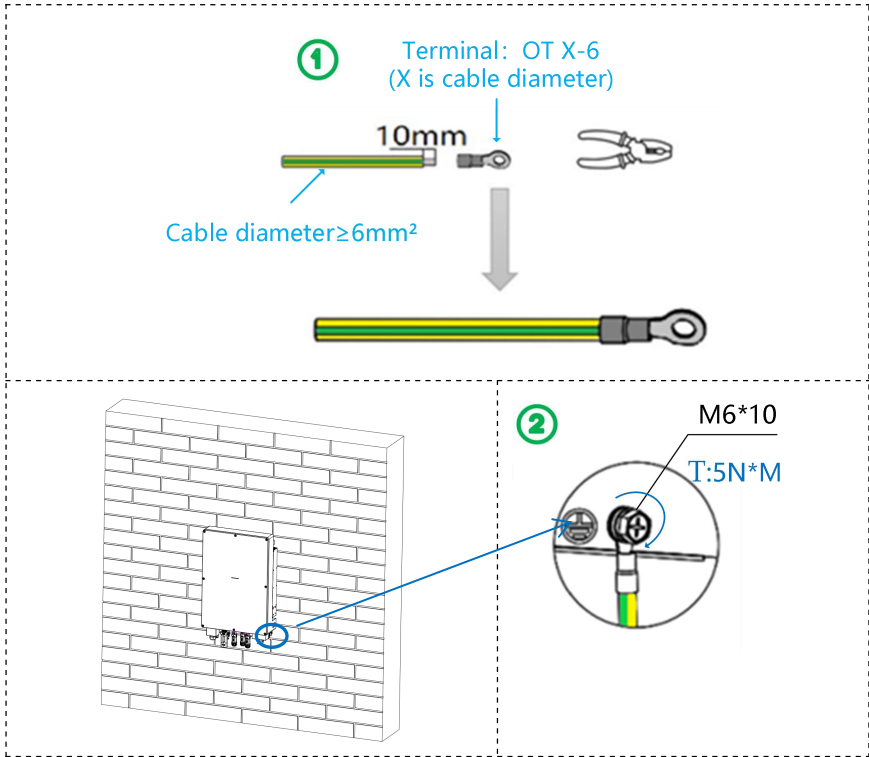Isuna D5K~D12K-SL



6.4 Connecting the PV Cable and the Battery Cable



Danger

PV series connection:

- Do not connect the same PV series to multiple inverters. Otherwise, the inverters may be damaged.
- Before connecting the PV series to the inverter, confirm the following information. Otherwise, the inverter may be permanently damaged or fire may occur, which may cause personal and property loss.
- Ensure that the maximum short circuit current and maximum input voltage of each PV

Isuna D5K~D12K-SL

are within the allowable range of the inverter.

- Ensure that the positive terminal of the PV string is connected to the PV+ of the inverter, and the negative terminal of the PV string is connected to the PV- of the inverter.



Warning

PV series connection:


- The PV string output does not allow for grounding. Before connecting the PV string to the inverter, ensure that the minimum insulation resistance to the ground of the PV string meets the minimum insulation impedance requirement..

NOTE:

1.Before crimping the PV cables, ensure that the PV knob switch is set to OFF and the battery is powered off.


2.The photovoltaic module used to connect to the inverter should meet the IEC 61730 certification of grade A standard requirements, each photovoltaic series and battery input from the external circuit breaker allowed through the maximum current should be more than or equal to 30A.

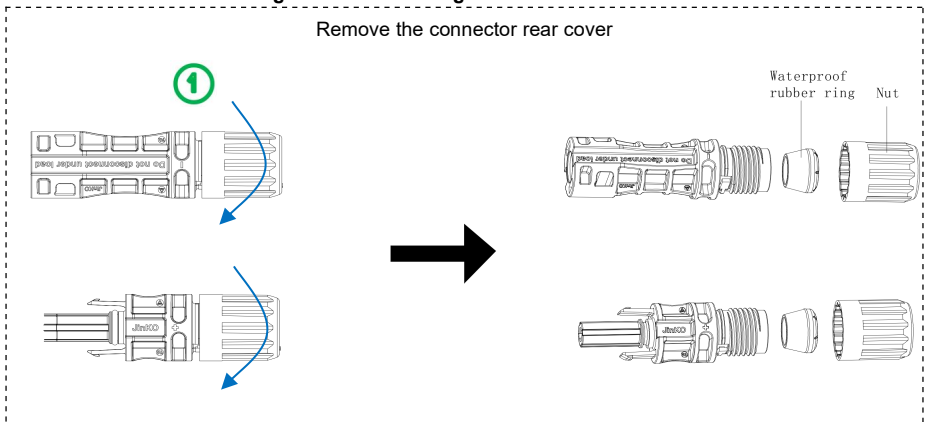Figure 6.3 Connecting PV&BAT cables




Isuna D5K~D12K-SL

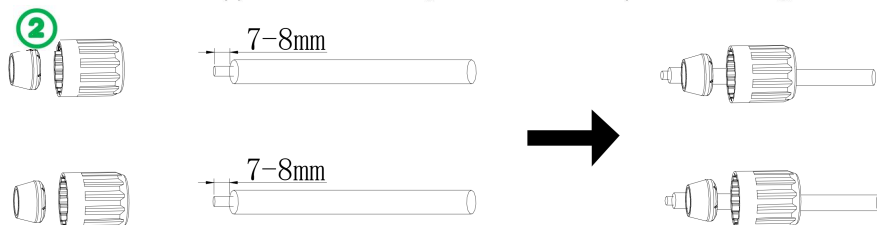
Route the stripped DC cable through the nut and waterproof rubber ring



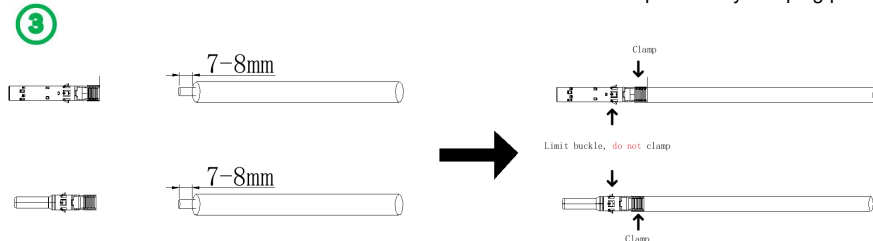Part of the DC cable conductor is connected to the metal DC terminal and pressed by crimping pliers




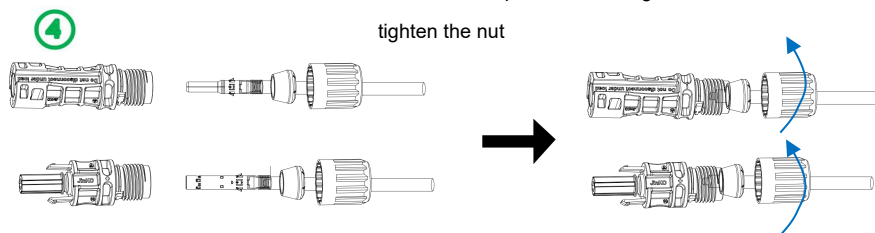Insert the DC cable into the DC terminal, insert the waterproof rubber ring into the DC terminal, and



After hearing a click sound, gently pull the cable to check whether it is fastened

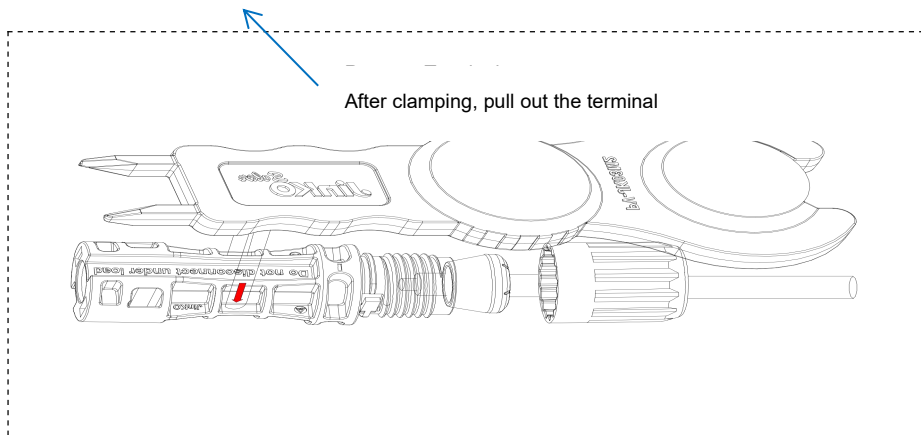Isuna D5K~D12K-SL



6.5 Connect battery cable



Danger

Battery cable connection:

- A battery short circuit may cause personal injury. However, a short circuit may release a large amount of energy, which may cause fire.
- Before connecting the battery cable, ensure that the inverter and battery are powered off, and the front and rear switches of the device are off.
- Do not connect or disconnect battery cables when the inverter is running. Improper operations may result in electric shock.
- Do not connect the same battery string to multiple inverters. Otherwise, the inverters may be damaged.
- Do not connect loads between the inverter and the battery.
- When connecting battery cables, use insulation tools to prevent accidental electric shock or battery short circuit.
- Ensure that the open circuit battery voltage is within the allowable range of the inverter.




Warning

Battery cable connection:

- When connecting cables, the battery cable matches BAT+ and BAT- on the battery terminal.
- Ensure that the cable core is fully connected into the wiring hole of the terminal.
- Ensure that the cables are securely connected. Otherwise, the terminal may overheat and damage the device.

Isuna D5K~D12K-SL

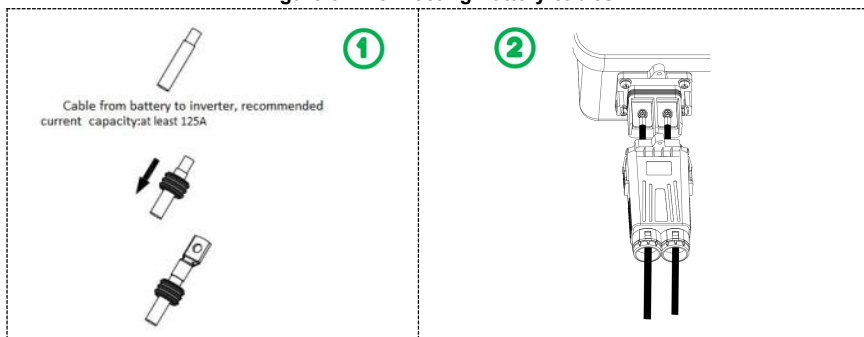
Figure 6.4 Connecting Battery cables




The maximum current allowed to pass through the circuit breaker used for external connection of batteries should be greater than or equal to 150A

6.6 Connect AC Load/grid/Diesel generator Cable

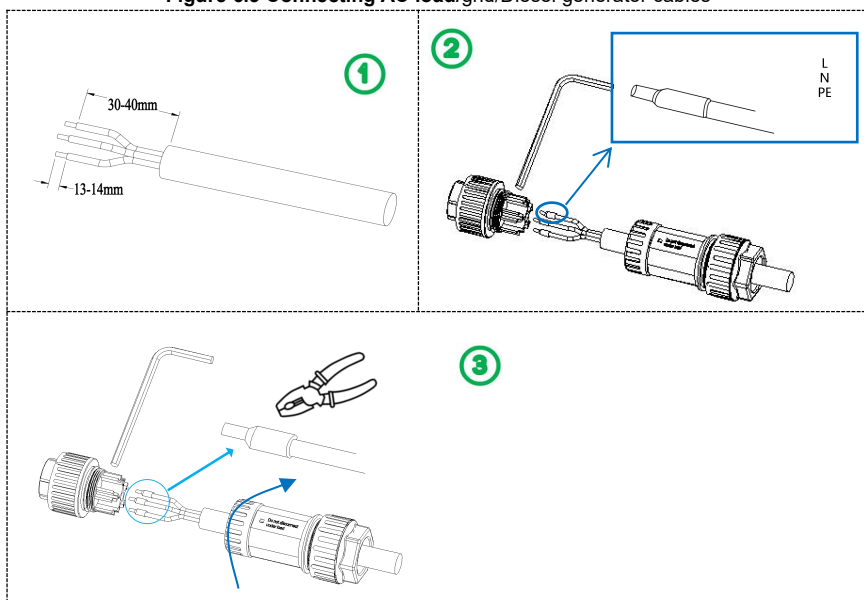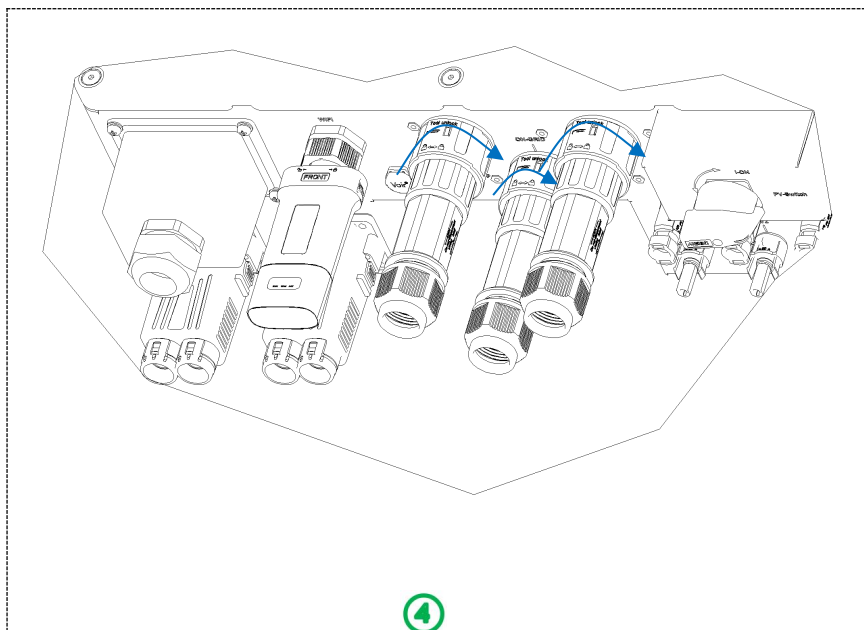Figure 6.5 Connecting AC load/grid/Diesel generator cables





The maximum current allowed through the circuit breaker for off-grid load to the external connection should be greater than or equal to 80A.

The maximum current allowed through the circuit breaker for grid or Diesel generator to the external connection should be greater than or equal to 80A.

6.7 Installation of Communication Dongle

The communication collector is an external component that you need to select by yourself.

The collector is connected. The default WIFI/ Bluetooth module is used for remote monitoring and control of the inverter.

Figure 6.6 Communication interface and installation and disassembly diagram

Isuna D5K~D12K-SL

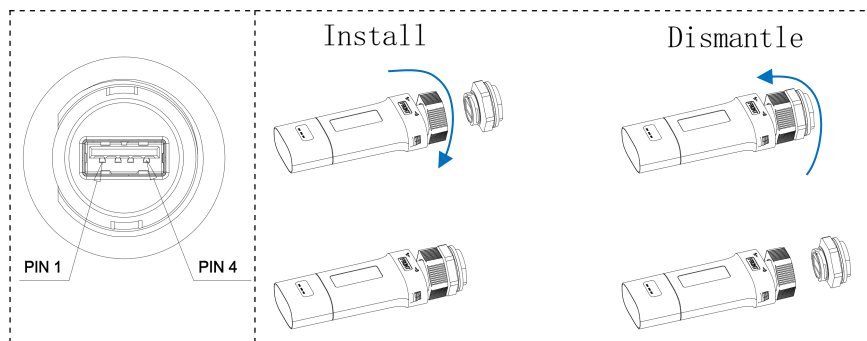


Table 6-2 Indicators on the AGN8 WIFI Dongle

LED	state	Specific meanings
RUN&COM&NET	Alternating flashing (cycle 1500ms, each light flashes for 500ms in sequence)	Self test mode
	Flashing together (cycle 1 second, off 900ms, on 100ms)	Dongle is currently upgrading (including Bluetooth App upgrade)
	Illuminate together for 5 seconds	Dongle upgrade failed
RUN	Slow flashing (on for 1 second and off for 1 second)	Dongle is running normally
	Light off	Dongle running abnormally
	Twice flashing (on (off) 100ms, off (on) 100ms, twice)	Dongle sends Bluetooth data to the app
COM	Flash (on for 200ms, off for 200ms)	Dongle time not synchronized (scanning will not start)
	Light off	Abnormal southbound communication
	Flashing once (on (off) 100ms, off (on) 100ms,	Normal southbound

Isuna D5K~D12K-SL

	once)	communication
NET	Flash	Connecting to WiFi
	Light off	Connecting to MQTT
	Slow flashing	Connecting to platform
	Always on	Successfully connected to the platform
	Twice flashing	Dongle sends platform data

Table 6-3 Meaning of AGN9 4G Dongle indicator light

LED	state	Specific meanings
RUN&COM&NET	/	/
RUN	Always on	The process from power on to initialization
	Flash (with an interval of 100ms)	Gateway initialization completed, flashing for 5 seconds
	Twice flashing (on (off) 100ms, off (on) 100ms, twice)	Slow flashing (with an interval of 1 second)
COM	/	/
NET	Always on	Looking for the internet or on a call
	Flash (interval 200ms)	Data connection established or network registered
	Slow flashing (with an interval of 800ms)	2G/3G network registered
	Light off	Shutdown or module sleep

6.8 Connecting the Communication Port

Multifunctional communication port, including meter communication, BMS communication, DRMS, parallel communication and external dry contact signal.

Step 1: Route the communication cables through the waterproof cover and waterproof plug of the signal port, and connect the cables to the communication port on the corresponding device.

Step 2: Fasten the waterproof cover with screws and tighten the waterproof nut.

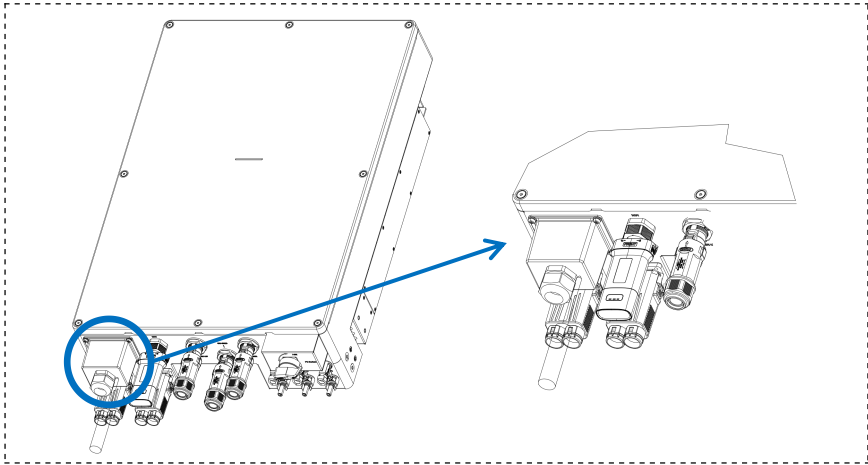


Figure 6.7 Interface diagram

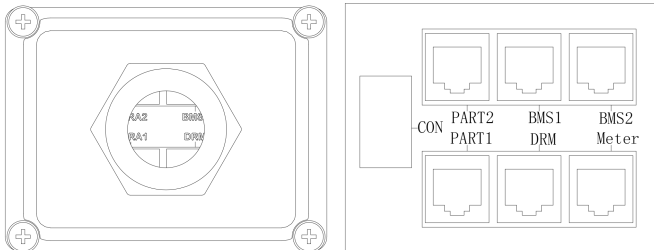


Table 6-4 Port description

PIN	Definition
CON	Function of heat pump/diesel generator multiplexed DO&DI interface
METER	Electric meter communication interface
BMS1	BMS1 CAN port &EMS RS485 multiplex port
BMS2	BMS2 CAN port &EMS RS485 multiplex port
DRM	DRMs/ diesel generator/lead-acid battery temperature sampling function multiplex interface
PARA1	Parallel communication interface
PARA2	Parallel communication interface

Figure 6.8 Sequence of RJ45 crystal terminals

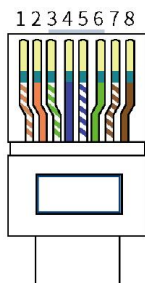


Table 6-5 RJ45 cable sequence colors

1	2	3	4	5	6	7	8
Orange & White	Orange	Green & White	Blue	Blue & White	Green	Brown & White	Brown


6.8.1 Smart Meter Connection

L1, L2, L3, and N on the meter are respectively connected to L1, L2, L3, and N of the power grid.

The current measurement needs to be connected with the current transformer. I1+ and I1- on the meter are connected to the positive and negative leads of the current transformer


respectively, and then the current transformer is connected to the L1 phase of the power grid. Similarly, I2+ and I2- connect to the current transformer and connect to the L2 phase, and I3+ and I3- connect to the current transformer and connect to the L3 phase. EP+ and EP- are institutional verification ports. Users do not need to access these ports. The wiring diagram is shown in Figure 6.9. (For the system power distribution diagram, refer to Figure 6.1 Electrical connection diagram.)

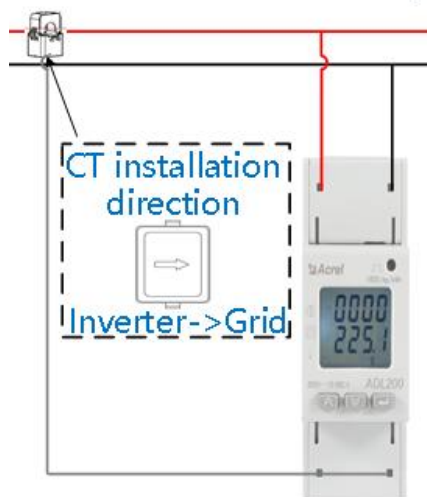Figure 6.9 Smart meter terminal wiring diagram



The grooves of the current transformer have arrows for current flow, as shown in Figure 6.7. The tip of the arrows points to the power grid.

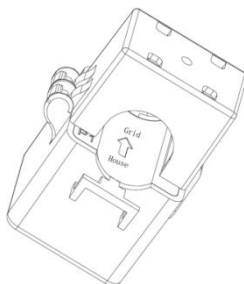Figure 6.10. Direction of current transformer cable



According to Table 6-6, connect ports 8 and 7 of the RJ45 cable terminals on the METER corresponding to RS485-A and RS485-B on the meter corresponding to Figure 6.10.

Table 6-6 Smart meter interface description

PIN	Colour	Definition	Function	Note
1-6	/	/	/	/
7	Brown & White	RS485_B-EEM	RS485 differential signal B	Smart meter 485 communication
8	Brown	RS485_A-EEM	RS485 differential signal A	

6.8.2 BMS Communication Connection

Table 6-7 Description of BMS1 ports

PIN	Color	Definition	Function	Note
1	Orange & White	RS485-A1-BMS	RS485 differential signal A1	BMS1 CAN port & EMS RS485 multiplex port
2	Orange	RS485-B1-BMS	RS485 differential signal B1	
3	/	/	/	

Isuna D5K~D12K-SL

4	Blue	CANA-H1-BMS	CAN high level data	
5	Blue& White	CANA-L1-BMS	CAN low level data	
6	Green	GND	GND	GND
7~8	/	/	/	

Table 6-8 Description of BMS2 ports

PIN	Color	Definition	Function	Note
1	Orange & White	RS485-A2-BMS	RS485 differential signal A2	BMS1 CAN port &EMS RS485 multiplex port
2	Orange	RS485-B2-BMS	RS485 differential signal B2	
3	/	/	/	
4	Blue	CANA-H2-BMS	CAN high level data	
5	Blue & White	CANA-L2-BMS	CAN low level data	
6	Green	GND	GND	GND
7~8	/	/	/	

Note: Communication with lithium batteries requires attention to the battery's communication port sequence and pin definition.

6.8.3 DRMS/DI Connection

Table 6-9 Description of DRM ports

PIN	Color	Definition	Function	Note
1	Orange & White	DRM1/5	① The DRMS interface is applicable to the Australian	DRMs/diesel generator/lead-acid

Isuna D5K~D12K-SL

2	Orange	DRM2/6	AS-NZS-4777.2 (some European requirements) safety standard ②Diesel generator function DI input ③Lead-acid battery temperature sampling	temperature sampling function multiplexed port
3	Green& White	DRM3/7		
4	Blue	DRM4/8		
5	Blue& White	REF GEN		
6	Green	COM LOAD		
7	Brown& White	/	/	/
8	Brown	/	/	/

NTC connection for lead acid battery:

- ① Cut one end of the standard network cable
- ② Strip the green, green&white, and blue wires at the fracture by 5mm
- ③ Weld it together with the NTC pin as shown in the following figure (After confirming that the welding is solid, wrap the welding place with insulation tape respectively, pay attention to avoid contact with bare metal, prevent short circuit, and affect normal use)
- ④ Insert the finished NTC crystal head into the DRMS connector, and attach the NTC to the outside of the lead battery

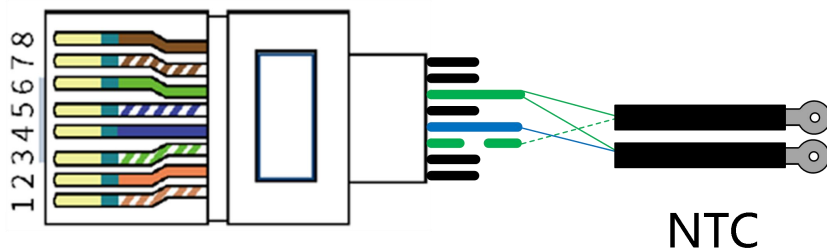


Table 6-10 Description of dry contact ports

	PIN	Definition	Note
DO 1	2	OP1_NO	External dry contact port
	4	OP1_COM	

Isuna D5K~D12K-SL

DO 2	1	OP2_NO	
	3	OP2_COM	
/	5-6	/	/


6.8.4 Paralleling

If multiple inverters are used, connect the terminal of the network cable to Pa1 of the first inverter, connect the other end to Pa2 of the second inverter, and so on. Table 6-11 describes the signal of the network cable. Figure 6.11 shows the sequence of the network cable connection.

Table 6-11 Description of parallel ports

PIN	Colour	PARA 1	PARA 2	Note
1	Orange & White	CON1_AO	CON2_AO	Parallel signal
2	Orange	CON1_BO	CON2_BO	
3	Green & White	CON1_AI	CON2_AI	
4	Blue	CON1_BI	CON2_BI	
5-6	/	/	/	/
7	Brown & White	CON_SyncH	CON_SyncH	Simultaneous signal
8	Brown	CON_SyncL	CON_SyncL	

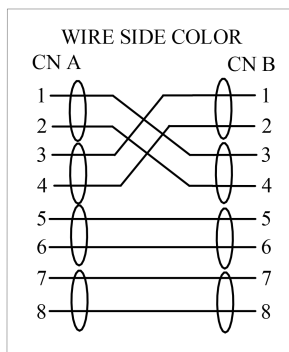Figure 6.11 Parallel communication line sequence diagram




Application note:

- Supports a maximum of 6 hybrid inverters in parallel;
- Ensure that the inverters are connected to parallel lines;
- Ensure that the load power is less than the maximum parallel power.
- The length of the cable connecting the load end of the inverter to the BACK UP end of each device must be the same to ensure loop impedance;

Parallel standard wiring is shown in the following figure, detailed operation see parallel system operation manual.

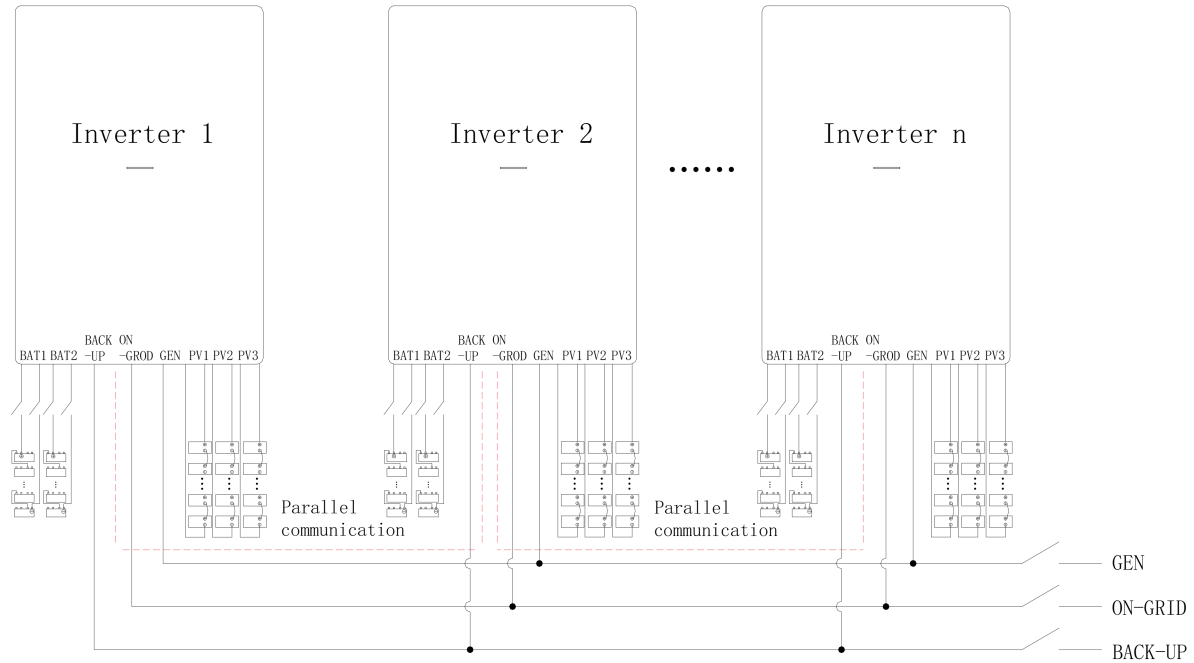Isuna D5K~D12K-SL



7 Inverter Operation

7.1 Pre-power-on Inspection

Serial	Check the entry
1	The inverter is firmly fixed to the mounting bracket on the wall.
2	Cables are bundled according to cable routing requirements, properly distributed, and without damage.
3	PV+/PV-, BAT+/BAT- cables are firmly connected, the polarity is correct, and the voltage is within the accessible range.
4	The DC switch is properly connected between the battery and the inverter, and the DC switch is off.
5	The AC circuit breaker is correctly connected between the inverter port and the power grid, and the circuit breaker is disconnected.
6	The AC circuit breaker is correctly connected between the inverter load port and the power grid, and the circuit breaker is disconnected.
7	For lithium batteries, ensure that the communication cables are properly connected.

7.2 Initial Power-on

Follow these steps to turn on the inverter

- 1) Ensure that the inverter is not working;
- 2) Close the AC circuit breaker between the inverter On Grid port and the Grid;
- 3) Turn on the PV DC switch on the inverter (when connected to PV);
- 4) Turn on the battery and close the DC switch between the battery and the inverter;
- 5) The inverter starts to run after the self-test is successful;
- 6) Close the AC circuit breaker between the inverter Back up port and the load.

7.3 Working Mode

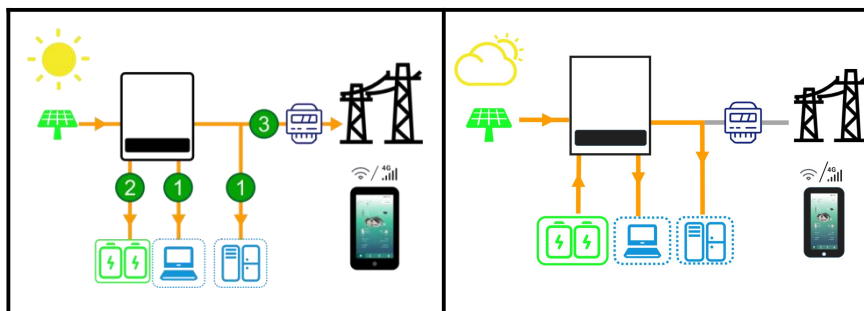
7.3.1 Self-use Mode (default mode)

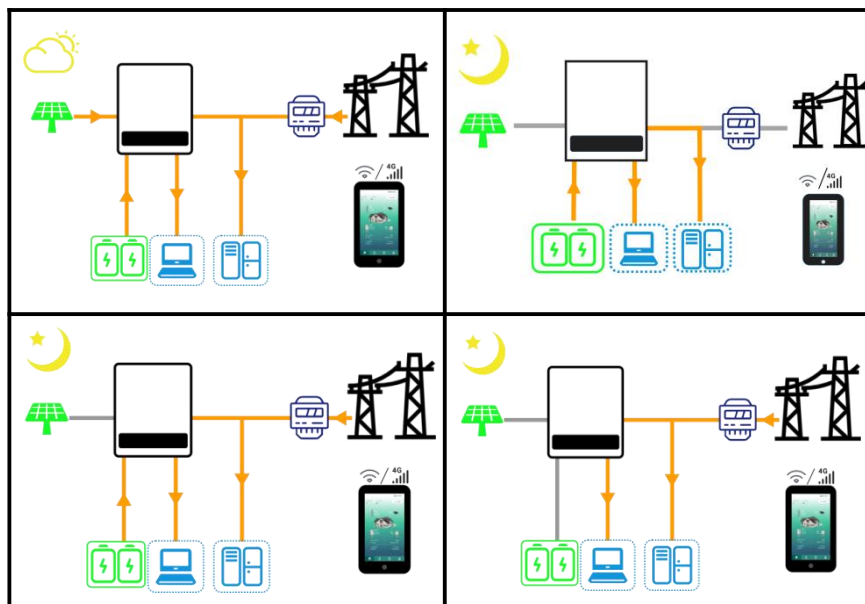
Function:

Give priority to the use of photovoltaic and battery energy, as far as possible not to use the energy of the grid. Photovoltaic energy is priority to supply loads, excess energy to charge the battery, and finally the remaining energy is fed to the grid.

Specific working mode:

- When the PV is sufficient, the PV prioritizes supplying power to the load, charging the battery with excess electricity, and the remaining electricity can be feedback to the grid.
- When the PV is insufficient, the PV and battery supply power to the load.
- When the PV and battery are insufficient, the PV, battery, and power grid work together to supply power to the load.
- When the PV is not working and the battery is sufficient, the battery supplies power to the load.
- When the PV is not working and the battery is insufficient, the battery and the grid work together to supply power to the load.
- When the PV and battery are not working, the power grid supplies power to the load, forming a bypass output.
- When the power grid is unable to supply power, the photovoltaic and battery jointly power the load.





7.3.2 Timed Charge/Discharge Mode

Function:

Set the charge and discharge period and power based on user requirements. For example, when the electricity price is high during the day, set discharge, and the electricity of batteries and photovoltaic is used to power the load; Set charging at night when the electricity price is low, and the electricity of the grid is used to charge the battery, so as to achieve the role of peak cutting and valley filling.

Specific working methods:

Charging time period:

- When the PV is sufficient, the PV charges the battery, and the remaining electricity supplies power to the load.
- When the PV is insufficient, the photovoltaic and grid work together to charge the battery and supply power to the load.

Isuna D5K~D12K-SL

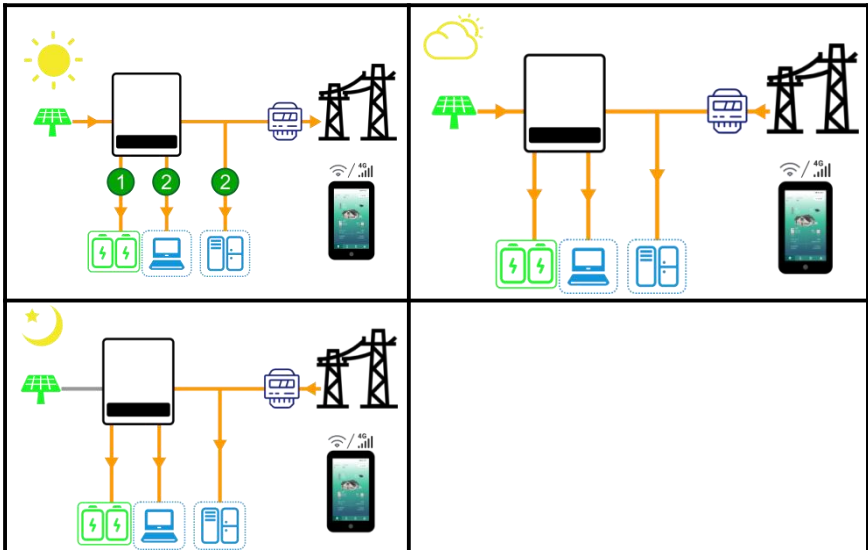
- When PV is not working, the grid charges the battery and supplies power to the load.

Discharge time period:

- When PV is sufficient, PV supplies power to the load.
- When the PV is insufficient, the PV and battery supply power to the load.
- When the PV is not working and the battery is sufficient, the battery supplies power to the load.
- PV does not work, and when the battery is insufficient, the battery and grid supply power to the load.
- When the PV is not working and the battery is not working, the grid supplies power to the load.


Note: The charging power is defined as the power of the inverter to charge the battery, and the discharge power is defined as the power of the inverter output.

Charging period:



Isuna D5K~D12K-SL

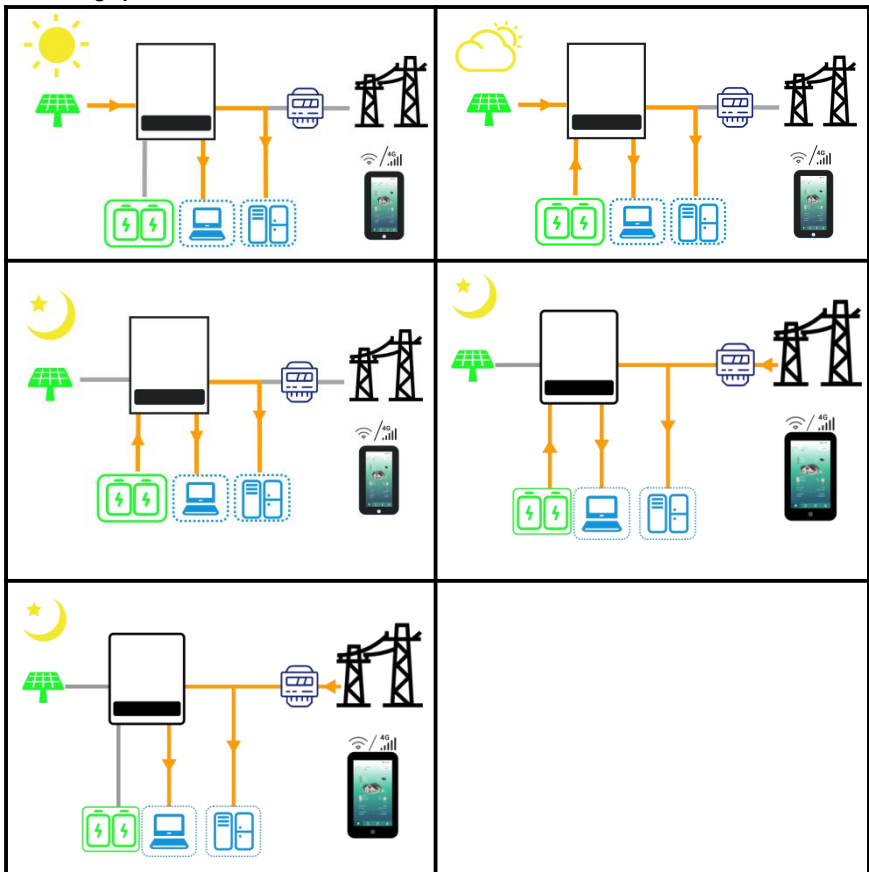Discharge period:




7.3.3 Backup Mode/Disaster Recovery Mode


Function:

When connected to the grid, the battery is always kept in a fully charged state to cope with sudden grid outages or other emergencies (photovoltaic and grid energy give priority to charge battery, excess energy to meet the load power supply needs, and finally the remaining energy is fed to the grid), so as to ensure that users can use the battery storage power to supply power to the load after an emergency (off-grid state) to avoid the situation of no power available.

Specific working mode:

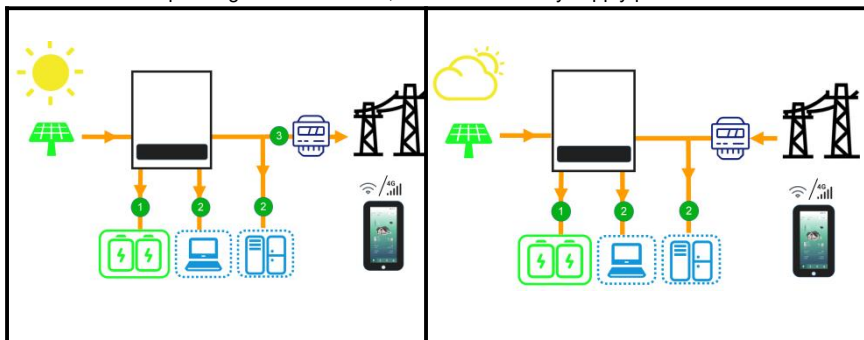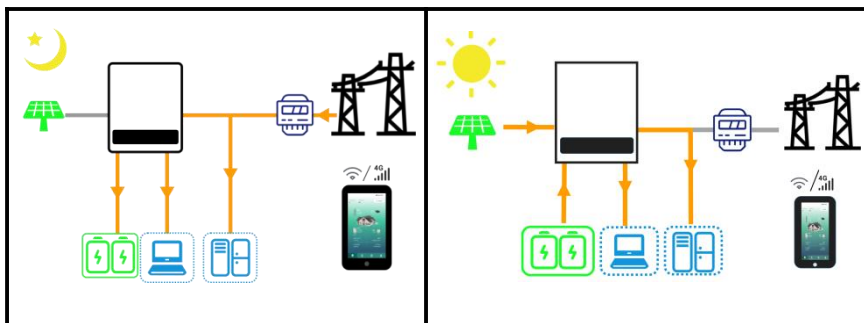- When PV is sufficient, PV prioritizes charging the battery before supplying power to the load, and the remaining electricity can be fed back to the grid.
- When PV is insufficient, the PV and the power grid charge the battery first, then supplies power to the load.
- When PV is not working, the grid charges the battery and supplies power to the load.
- When the power grid is unavailable, the PV and battery supply power to the load.






7.3.4 Priority Feed to Grid Mode

Function:

After meeting the load power consumption, excess photovoltaic energy is priority feed to the grid. Photovoltaic energy is given priority to meet the load power supply needs, followed by excess energy is fed to the grid, and finally the remaining energy is charged to the battery.

Specific working mode:

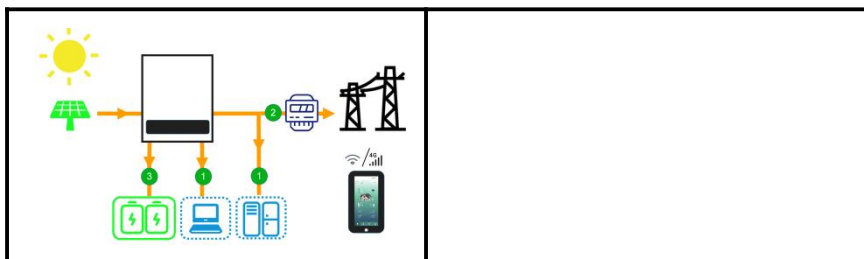- If sufficient PV is generated, the PV supplies power to the load first and then to the grid. The remaining power (the part where the PV power exceeds the inverter power) can be used to charge batteries.
- The other cases are in the same self-use mode.



7.4 Operation Mode

7.4.1 Operation Mode Description

Table 7-1 Inverter operating modes

Series No.	Mode	Description
1	Standby	<p>Waiting phase after the inverter is powered on.</p> <p>Enter the self-check state when the conditions are met.</p> <p>If a fault occurs, the inverter enters the fault state.</p>
2	Self-check mode	<p>Before the inverter starts, continue to self-check and initialize.</p> <p>If the conditions are met, the inverter enters the grid-connected state and starts grid-connected operation.</p> <p>If no power grid is detected, the inverter enters the off-grid state and runs off the grid.</p> <p>If the self-check fails, the system enters the fault state.</p>
3	On-grid mode	<p>The inverter is connected to the grid normally</p> <p>If it is detected that the power grid does not exist or the conditions do not meet the requirements for grid connection, it enters the off-grid working state.</p> <p>If a fault is detected, the system enters the fault state.</p> <p>If the power grid conditions do not meet the grid-connection requirements and the off-grid output function is not enabled, the system enters the waiting state.</p> <p>If after switching off the grid, it is detected that the grid conditions meet the grid-connected requirements, and the grid-connected function is enabled, it enters the grid-connected state</p>
4	Off-grid mode	<p>When the power grid is powered off or the grid conditions do not meet the grid-connected requirements, the inverter switches to the off-grid state and continues to supply power to the loads.</p> <p>If the grid conditions meet the grid-connected requirements, the</p>


Isuna D5K~D12K-SL

		<p>system enters the grid-connected state .</p> <p>Before running, the inverter works off the network when the working mode is set to off-network mode.</p> <p>If a fault is detected, the device enters the fault state.</p>
5	Fault mode	<p>If a fault is detected, the inverter enters the fault state. After the fault is rectified, the inverter recovers to its original running state.</p>


7.4.2 Indicator Light Description

The bar indicator in the middle of the device panel indicates the inverter status in red, green, and blue colors.

Table 7-2 Indicator status description

Display item	Indicator light status	Corresponding status description	Notes
<p>Green</p> 	Always on	Grid connection	<p>Indicates that the inverter is currently working in a grid connected state and can exchange energy with the power grid.</p> <p>The load can be powered on for operation.</p>
	Flashing 1s/time	Be ready	<p>Indicates that the inverter is in the power-on state and needs to wait until the power-on is completed before the load can be powered on and run.</p>

Isuna D5K~D12K-SL

	Flashing 0.1s/time	The inverter has just been powered on and the program is initialized/Code online upgrade	Indicates that the inverter has just been powered on and the program initialization will flash for 10s; Indicates that the current working status is in shutdown state, and it can be turned on and used normally after the code upgrade is completed.
Blue 	Always on	Off-grid	Indicates that the inverter is currently working in an off-grid state and cannot exchange energy with the power grid. the load can be powered on and run.
Red 	Always on	System error	Indicates that the inverter is currently in shutdown state, a serious alarm occurs on the inverter, and the load cannot be powered on and run.

Isuna D5K~D12K-SL

	Flashing for 0.5s/time	System error	Indicates that the inverter is currently in shutdown state, a relatively serious alarm has occurred on the inverter, and the load cannot be powered on.
	Flashes 2s/time	System error	Indicates that the inverter is currently in shutdown state, an alarm occurs on the inverter, and the load can't be powered on.

8 App Introduction

Users need to choose WiFi dongle or 4G dongle.

ESS LINK Operation and use Please contact the manufacturer and check the ESS LINK operation and use manual.

Android version: Please scan the QR code below to obtain.

IOS version: Please scan the QR code below to obtain or go to the App Store search ESS LINK to download.



Android apk



Google play



iOS

9. Troubleshooting and Maintenance

This section will help you determine the cause of the problem you may be experiencing.

9.1 Alarm and Processing

Faults not mentioned in the following table still exist after being powered on. Contact your dealer or after-sales service center.

Sequence number	Fault name	Note	Solutions
PV			
1	PV 1/2 is not connected	Remind	➤ Check whether the PV 1/2 is correctly connected and whether the photovoltaic DC circuit breaker of the inverter is closed.
2	PV 1/2 overvoltage	Fault	➤ Check whether the PV series voltage is higher than the maximum input voltage of the inverter. If so, adjust the number of series PV modules and reduce the PV string voltage to fit the input voltage range of the inverter. After correction, the inverter will automatically return to the normal state.
3	PV 1/2 overload time out	Alarm	➤ Check whether the inverter is in the overload state. The alarm is automatically cleared 10 minutes after the inverter is normal or the command is sent to clear the fault.
4	PV 1/2 reverse connection	Fault	➤ Check whether the PV 1/2 positive and negative terminals are reversed, and then power on again.
5	PV connection mode is incorrect	Alarm	➤ Check whether the PV connection mode set on the APP host is consistent with the actual PV connection mode.

Isuna D5K~D12K-SL

6	PV1/2 power tube is faulty	Fault	➤ Disconnect all AC and DC circuit breakers and close the disconnected circuit breakers after 5 minutes. If the fault persists, contact your dealer or after-sales service center.
7	PV 1/2 soft start failure	Alarm	
Battery			
8	Battery 1/2 is not connected	Remind	➤ Check whether the battery overvoltage is inconsistent with the battery specifications. ➤ Check whether the battery is correctly connected or the voltage is abnormal. If yes, the alarm is automatically cleared or the fault clearing command is sent.
9	Battery 1/2 overvoltage	Remind	
10	Battery 1/2 undervoltage	Remind	
11	Battery 1/2 power is insufficient	Remind	➤ Check whether the battery SOC is too high or too low. The fault is automatically rectified after the SOC returns to normal after the battery is discharged or charged.
12	Battery 1/2 do not charge	Alarm	
13	Do not discharge battery 1/2	Alarm	
14	Battery 1/2 discharge terminates	Alarm	
15	Battery is 1/2 full	Remind	
16	Battery 1/2 reverse connection	Fault	➤ Check whether the positive and negative battery 1/2 cables are reversed.
17	Temperature of the lead-acid battery is abnormal	Alarm	➤ Use the thermal imager to check whether the temperature of the lead-acid battery is too high. The fault will be automatically rectified when the temperature of the lead-acid battery is reduced to normal temperature. ➤ Check whether the wiring sequence between

Isuna D5K~D12K-SL

			<p>the NTC and the network cable is correct.</p> <p>Reinsert the network cable from the communication port.</p>
18	Battery connection mode is incorrect	Alarm	<p>➤ Check whether the battery connection mode configured on the APP host is consistent with the actual battery connection mode.</p>
19	Battery 1/2 overload timeout	Alarm	<p>➤ Please check whether the maximum battery charging current and maximum battery discharge current are set too high in the battery Settings of the APP, and reduce the values appropriately.</p>
20	Battery 1/2 power tube is faulty	Fault	<p>➤ Disconnect all AC and DC circuit breakers and close the disconnected circuit breakers after 5 minutes. If the fault persists, contact your dealer or after-sales service center.</p>
21	Battery 1/2 soft startup fails. Procedure	Alarm	
Others			
22	Grid voltage anomaly	Alarm	<p>➤ If the alarm is occasionally reported, the power grid may be abnormal for a short time. The inverter will resume normal operation after detecting that the power grid is normal, and no manual intervention is required.</p> <p>➤ If the alarm is generated frequently, check whether the power grid voltage frequency is within the allowable range. If yes, check whether the AC circuit breaker and AC cable connections of the inverter are correct, and whether the power grid is powered off.</p>
23	Network frequency anomaly	Alarm	<p>➤ If the power grid voltage/frequency is not</p>

Isuna D5K~D12K-SL

			within the acceptable range, the AC connection is correct, but the alarm is repeated, please contact technical support to change the power grid overvoltage and underfrequency protection value.
24	Power grid voltage reverse sequence	Alarm	<ul style="list-style-type: none"> ➤ Check the phase sequence, voltage, and wiring of the power grid.
25	Grid voltage is out of phase	Alarm	
26	Neutral wire anomaly	Fault	
27	Heat sink temperature is too high	Fault	<ul style="list-style-type: none"> ➤ Ensure that the inverter is installed in a place that is out of direct sunlight, and restart the inverter after the heat sink cools down to 60°C for 5 minutes. ➤ If the fault persists, contact your dealer or after-sales service center.
28	Ambient temperature is too high	Alarm	
29	The inverter is overheated. Procedure	Alarm	
30	Insulation fault	Fault	<ul style="list-style-type: none"> ➤ Check the impedance of the photovoltaic string to the protected area. If the resistance value is greater than 33 kΩ, it is normal. If the resistance value is less than 33 kΩ, check the short circuit point and rectify the fault. Check whether the PGND cable of the inverter is correctly connected. If no alarm is generated, the system automatically clears the fault or sends a command to clear the fault. ➤ If it is confirmed that the impedance is indeed lower than the default value in a cloudy and

Isuna D5K~D12K-SL

			rainy environment, reset the insulation impedance protection point.
31	Leakage protection failure	Fault	<ul style="list-style-type: none"> ➤ Please check whether the inverter is connected properly. ➤ Disconnect all AC and DC circuit breakers and close the disconnected circuit breakers after 5 minutes. If the fault persists, contact your dealer or after-sales service center.
32	Fan failure	Fault	<ul style="list-style-type: none"> ➤ Check whether the external fan is blocked. ➤ Disconnect all AC and DC circuit breakers and close the disconnected circuit breakers after 5 minutes. If the fault persists, contact your dealer or after-sales service center.
33	Model capacity fault	Fault	<ul style="list-style-type: none"> ➤ Please contact your distributor or after-sales service center to check whether the model capacity is set incorrectly in the APP.
34	Islanding protection	Alarm	<ul style="list-style-type: none"> ➤ Turn off the AC circuit breaker on the power grid and check whether the power grid quality is poor or abnormal. ➤ Disconnect all AC and DC circuit breakers and close the disconnected circuit breakers after 5 minutes. If the fault persists, contact your dealer or after-sales service center.
35	Dc bus undervoltage	Fault	<ul style="list-style-type: none"> ➤ Check whether the battery is exhausted or the power of the inverter is too large. ➤ Disconnect all AC and DC circuit breakers and close the disconnected circuit breakers after 5 minutes. If the fault persists, contact your dealer or after-sales service center.

Isuna D5K~D12K-SL

36	Bad earth	Fault	<ul style="list-style-type: none"> ➤ Check whether the ground cable connected to the inverter is damaged or the connection screws are not tightened, resulting in poor contact.
37	Parallel communication alarm	Alarm	<ul style="list-style-type: none"> ➤ Only in the case of parallel display, check the parallel communication line sequence is correct; If the sequence is correct, remove and reinsert the network cable from the communication port to prevent poor contact.
38	The system runs derated	Alarm	<ul style="list-style-type: none"> ➤ Check whether the external fan of the inverter is blocked. ➤ Whether the ambient temperature is too high.
39	The number of parallel modules is abnormal	Fault	<ul style="list-style-type: none"> ➤ Display only in parallel situations. Check whether the parameters related to parallel Settings in the App are set correctly.
40	The parallel module number is repeated	Alarm	
41	Parameters of parallel modules conflict	Alarm	
42	The meter is reversed	Fault	<ul style="list-style-type: none"> ➤ Check that the meter is connected correctly.
43	The electricity meter is connected abnormally	Alarm	
44	The DSP1/2 parameter Settings are faulty	Fault	<ul style="list-style-type: none"> ➤ Please contact your distributor or after-sales service center to check whether the parameters in the APP are set correctly or the software version is upgraded
45	The DSP/CPLD	Fault	

Isuna D5K~D12K-SL

	version is incompatible. Procedure		
46	The communication between the DSP and CPLD is faulty	Fault	

Table 9-1 Alarm list and troubleshooting measures

9.2 Regular maintenance


 Warning
<ul style="list-style-type: none"> ➤ Make sure that the inverter is disconnected from power. ➤ Wear personal protective equipment when operating the inverter.

Table 9-2 Maintenance Instructions

Maintenance content	Maintenance methods	Maintenance period
System cleaning	Check the heat sink, air inlet/outlet for foreign objects and dust.	1 time/half year~1 time/year
DC Switch	Turn the DC switch on and off 10 times continuously to ensure proper DC switch function.	1 time/year
Electrical connection	Check whether the electrical connection is loose, whether the cable appearance is broken, and whether there is copper leakage.	1 time/half year~1 time/year

Isuna D5K~D12K-SL

10. Technical Parameters

Table 10 Technical Parameters Description

(If 5-12kw models have certification requirements, please contact the inverter manufacturer)

Product model	Isuna D5K-SL	Isuna D6K-SL	Isuna D8K-SL	Isuna D10K-SL	Isuna D12K-SL
Battery parameter					
Number of battery input channels	2				
Battery type	Lithium battery/Lead-acid battery/Sodium battery				
Battery voltage range	33~60V				
Full load battery voltage range	48~60V	48~60V	48~60V	48~60V	48~60V
Maximum charge and discharge current	52.5A/25A	62.5A/62.5A	85A/85A	105A/105A	125A/125A
Peak charge/discharge current&duration	55A/55A (60s)	65A/65A (60s)	90A/90A (60s)	110A/110A (60s)	130A/130A (60s)
Nominal charge/discharge power	2.5kW/2.5kW	3kW/3kW	4kW/4kW	5kW/5kW	6kW/6kW
Communication Interface	RS485/CAN				
PV input parameters					

Isuna D5K~D12K-SL

Number of PV input channels	3				
Maximum input power	10000WP (5000WP/5000WP)	12000WP (6000WP/6000WP)	16000WP (8000WP/8000WP)	18000WP (90000WP/90000WP)	18000WP (15000WP/15000WP)
Maximum input voltage	800V				
MPPT voltage range	130~800V				
MPPT full load voltage range	130V~800V	130V~800V	160V~800V	180V~800V	240~800V
Starting voltage	140V				
Rated input voltage	600V				
Maximum input current per MPPT	20A/20A/20A				
Maximum short-circuit current per MPPT	24A/24A/24A				
MPPT quantity	3				
Maximum input strings per MPPT	1/1/1				
Parallel input and output parameters					

Isuna D5K~D12K-SL

Nominal output power	5kW	6kW	8kW	10kW	12kW
Maximum output apparent power	6kVA	7.2kVA	9.6kVA	12kVA	13.2kVA
Maximum grid input power	7.5kVA	9kVA	12kVA	15kVA	18kVA
Maximum output current	26A	32A	42A	52A	62A
Maximum grid input current	32.5A	40A	52A	65A	80A
Nominal voltage	L/N/PE, 220V/230V				
Grid voltage range	185-276V (P2N)				
Rated grid frequency	50/60Hz				
Grid frequency range	45Hz~55Hz/55Hz~65Hz				
power factor	-0.8~0.8				
THDi (@Nominal power)	<3%				
Off-grid output parameters					
Nominal output power	5kW	6kW	8kW	10kW	12kW
Maximum output apparent power	6kVA	7.2kVA	9.6kVA	12kVA	13.2kVA
Peak power, duration	6kW-60s	7.2kW-60s	9.6kW-60s	12kW-60s	14.4kW-60s
Maximum output current	26A	32A	42A	52A	62A

Isuna D5K~D12K-SL

Nominal output voltage	L/N/PE, 220V/230V				
Rated frequency	50/60Hz				
Thdu(@ linear load)	<3%				
On/off-grid switch-over time	<10ms~20ms				
Diesel generator interface					
Nominal input power	5kW	6kW	8kW	10kW	12kW
Maximum input power	7.5kVA	9kVA	12kVA	15kVA	18kVA
Maximum input current	32.5A	40A	52A	65A	80A
Nominal output voltage	L/N/PE, 220V/230V				
Generator voltage range	185-276V (P2N)				
Efficiency					
European efficiency	97.70%				
Maximum efficiency	98.20%				
Maximum battery charge/discharge efficiency	95%				
Protection					
DC Switch	Available				

Isuna D5K~D12K-SL

Input reverse	Available
Output overvoltage, overcurrent, short circuit	Available
Anti-islanding	Available
Residual current detection	Available
Insulation resistance detection	Available
Overvoltage Category	DC:II ; AC:III
Surge protection level	DC:II ; AC:III
Battery input reverse connection protection	Available
Integrate AFCI	Optional
PID repair circuit	Optional
Routine parameters	
Weight	34kg
Noise	<45dB
Topology	isolation
Working altitude	<4000m

Isuna D5K~D12K-SL

Derating Temperature	>40℃
Ambient Temperature	-25℃~60℃
Ambient Humidity	5%~95%
Cooling method	Air cooling
IP Degrees	IP65
Dimensions	465*665*165mm
Standby loss	<15W
Features	
DC terminal	MC4/busbar
AC output terminal	3P connector
interface	RS485/CAN/DRED/DO/Parallel port
Human-computer interaction mode	H5/LED/APP/WIFI/4G/Bluetooth
Scalability in Parallel function	Support
Standard Warranty	5 years
Certification	

Isuna D5K~D12K-SL

Safety regulations	IEC62109-1&2, IEC62040-1
EMC	EN61000-6-1, EN61000-6-2, EN61000-6-3,EN61000-6-4 EN 61000-4-16, EN 61000-4-18,EN 61000-4-29
Grid	VDE-AR-N 4105;VDE 0126-1-1 EN 50549-1;G98,G100; CEI 0-21;AS/NZS4777.2 NRS 097-2-1; G99