

## Isuna inverter Off-Grid with PV Only Instructions


### 1. Off-grid only PV with load safety instructions

The power output from the PV panels is unstable due to clouds, leaves and other items that will block the sun from shining on the PV panels. When this function is switched on, since only the PV power the load, if the PV output power is less than the load power, it will lead to the load blackout.

If the PV power fluctuates for a long period of time, the load may be damaged due to insufficient power supply. Therefore, when you turn on this function, please fully understand the possible impact of this function to avoid damage to home loads.


### 2. inverter Off-Grid with PV Only

When the system is not connected to the grid, the battery, or the battery is dead, then only PV power the load.

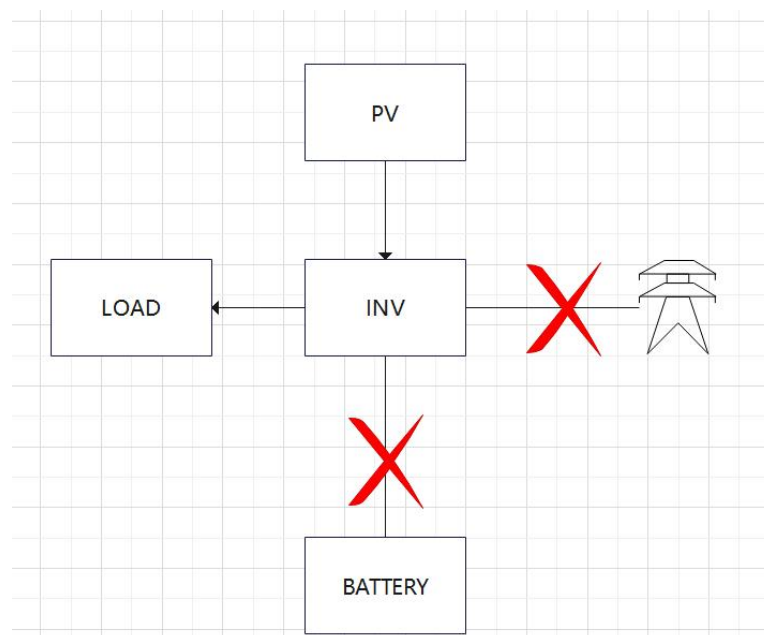

### 3. APP how to enable Off-grid with PV only function

APP>Admin.>Set up>Advanced Settings>Special Settings>Off-grid with PV only>Enable.

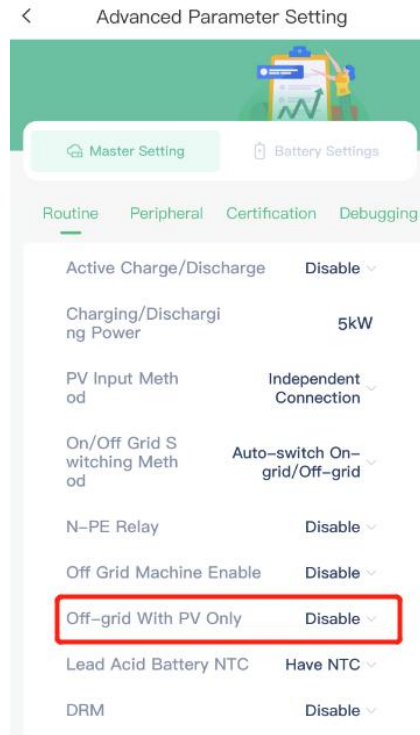

**Note: When this function is enabled, the inverter is not connected to the grid or battery, and the PV can supply power to the load alone. If this function is not enabled, the inverter is not connected to the grid or battery, and the PV will not supply power to the load alone..**