

# Installation Instructions


## Single Phase LV Hybrid Inverter Isuna S3K-SL-S~S6K-SL-S

This guide is only for step-by-step reminders during the installation process, please read the user manual in detail before installation


### Mounting tools




Electric drill: for drilling holes in walls.

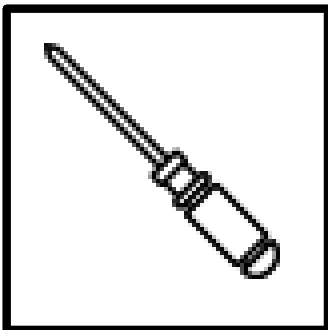


M6 screwdriver: Removal and installation of screws and wiring.

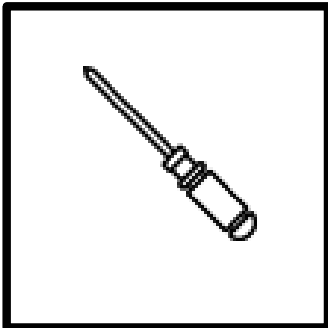


M4 screwdriver: Removal and installation of screws and wiring.

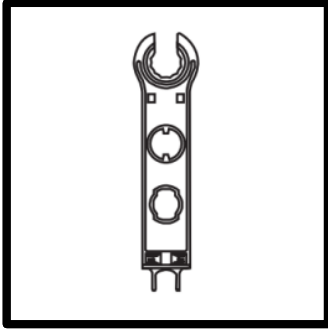


Removal tool: Remove and install the PV terminal.

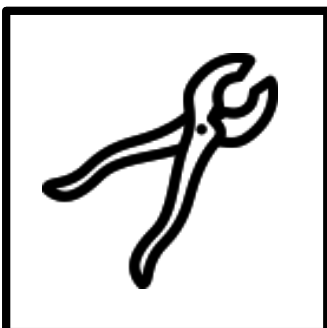


Wire strippers: Strip wires.

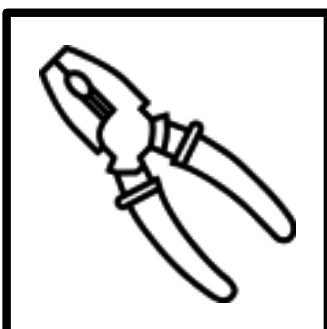

Crimping pliers: Crimp PV, BAT cable wires.

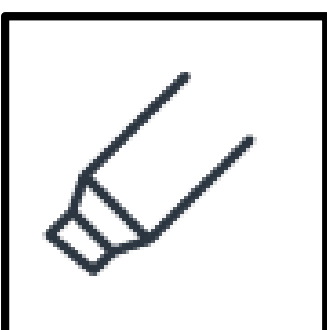


Marker: Punch marking.

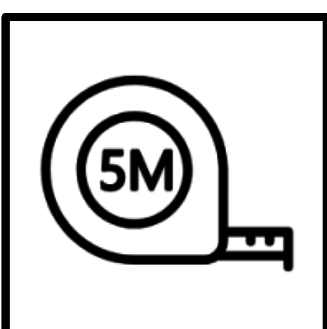


Tape measure: Measuring distances.




## Electrical Connection Diagram

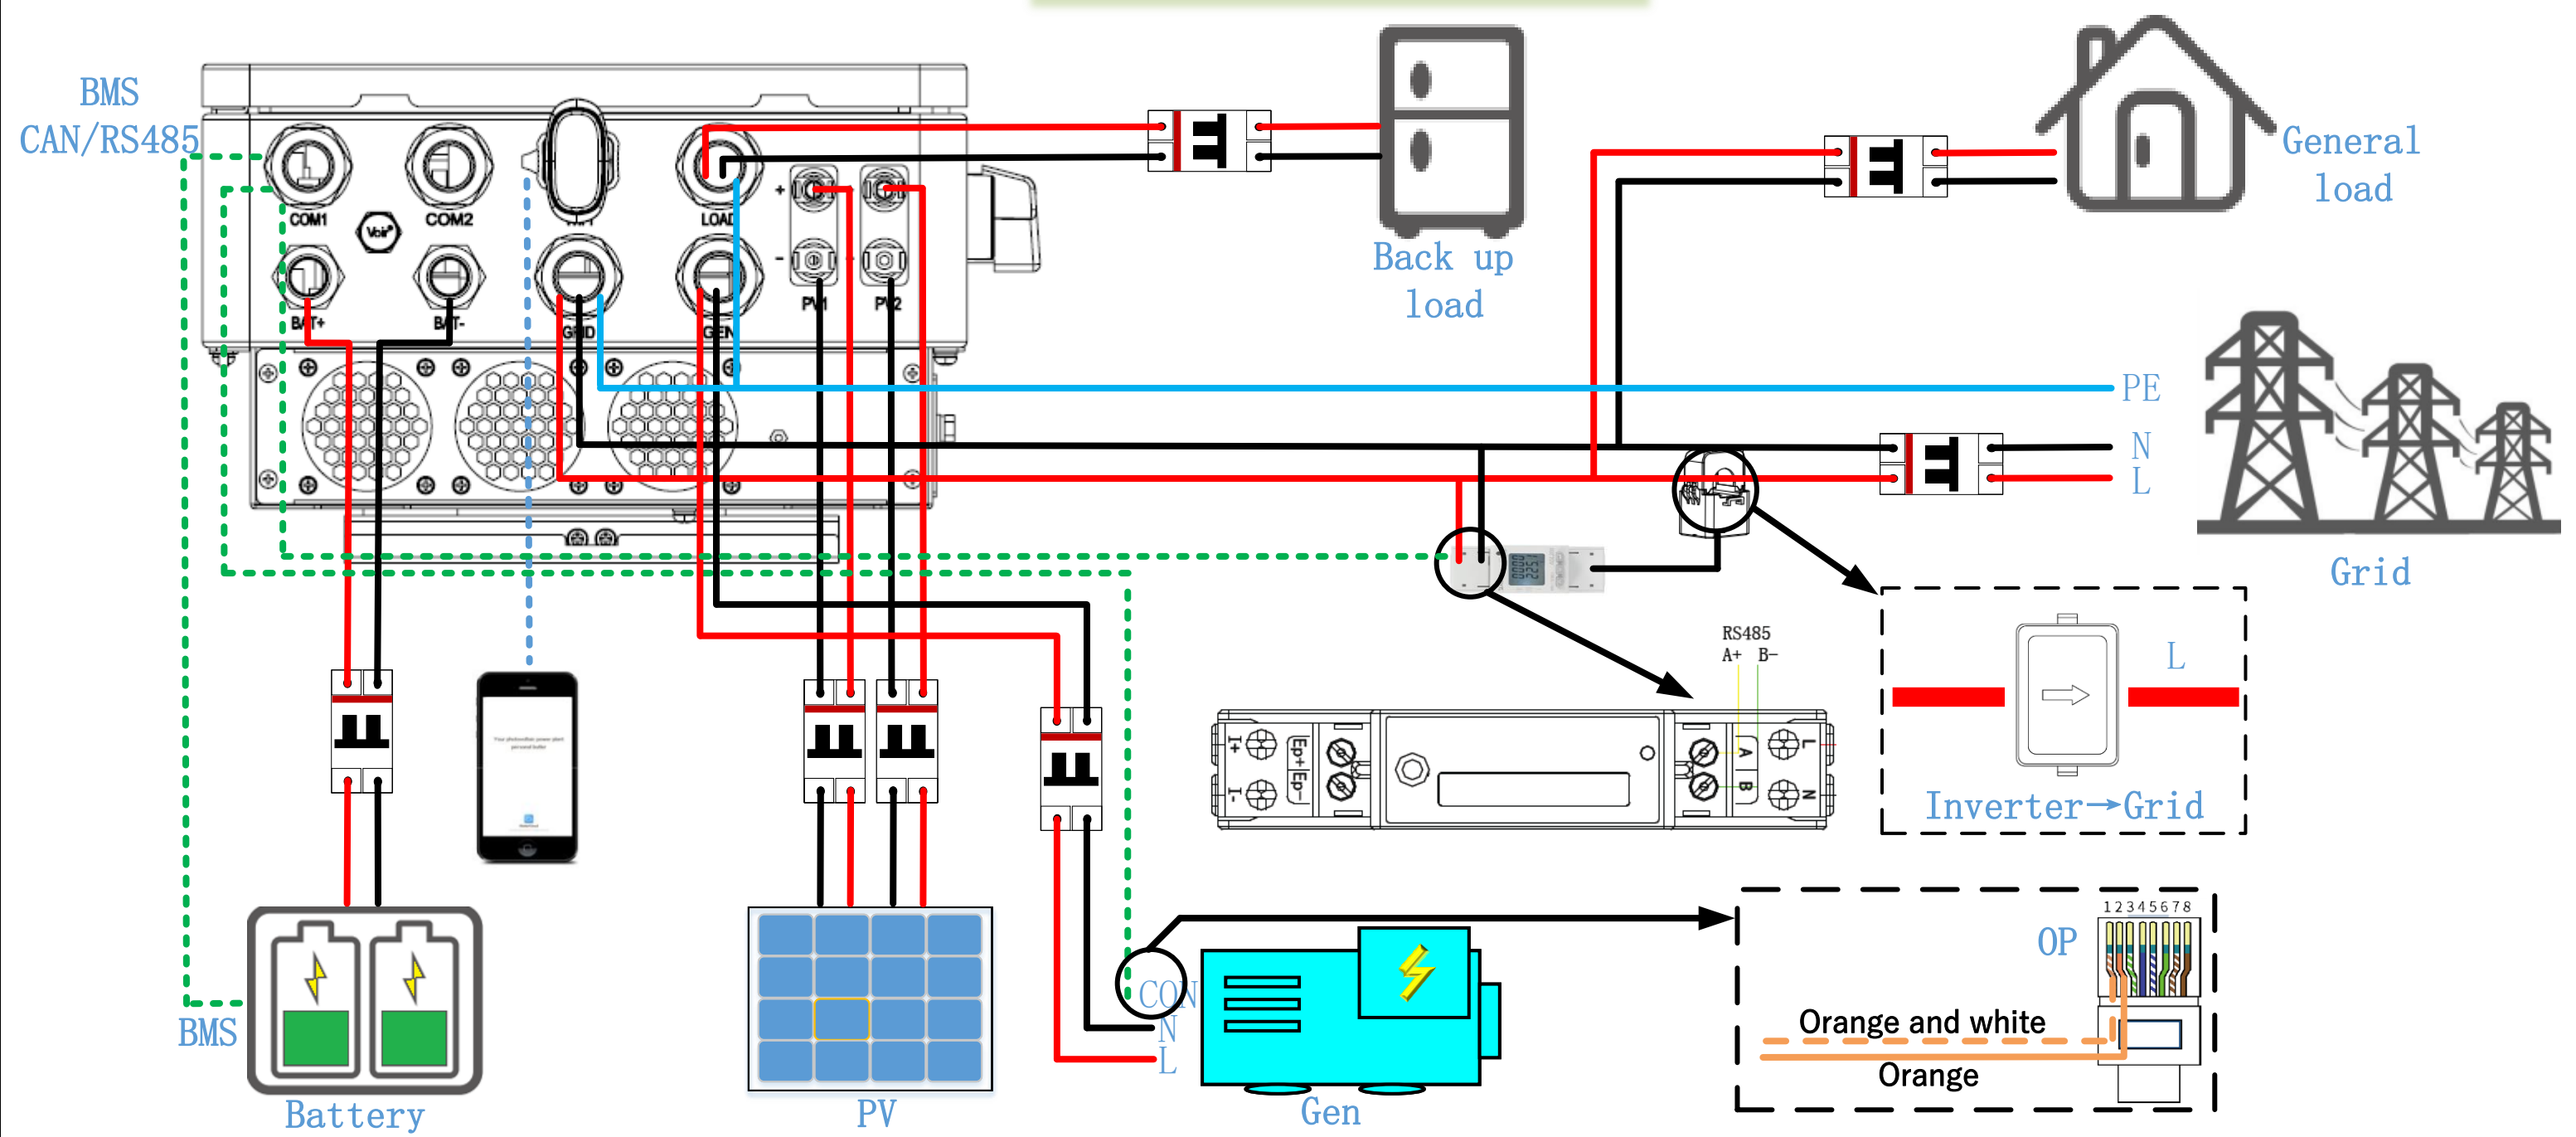


## Installation of wall mounts and inverters

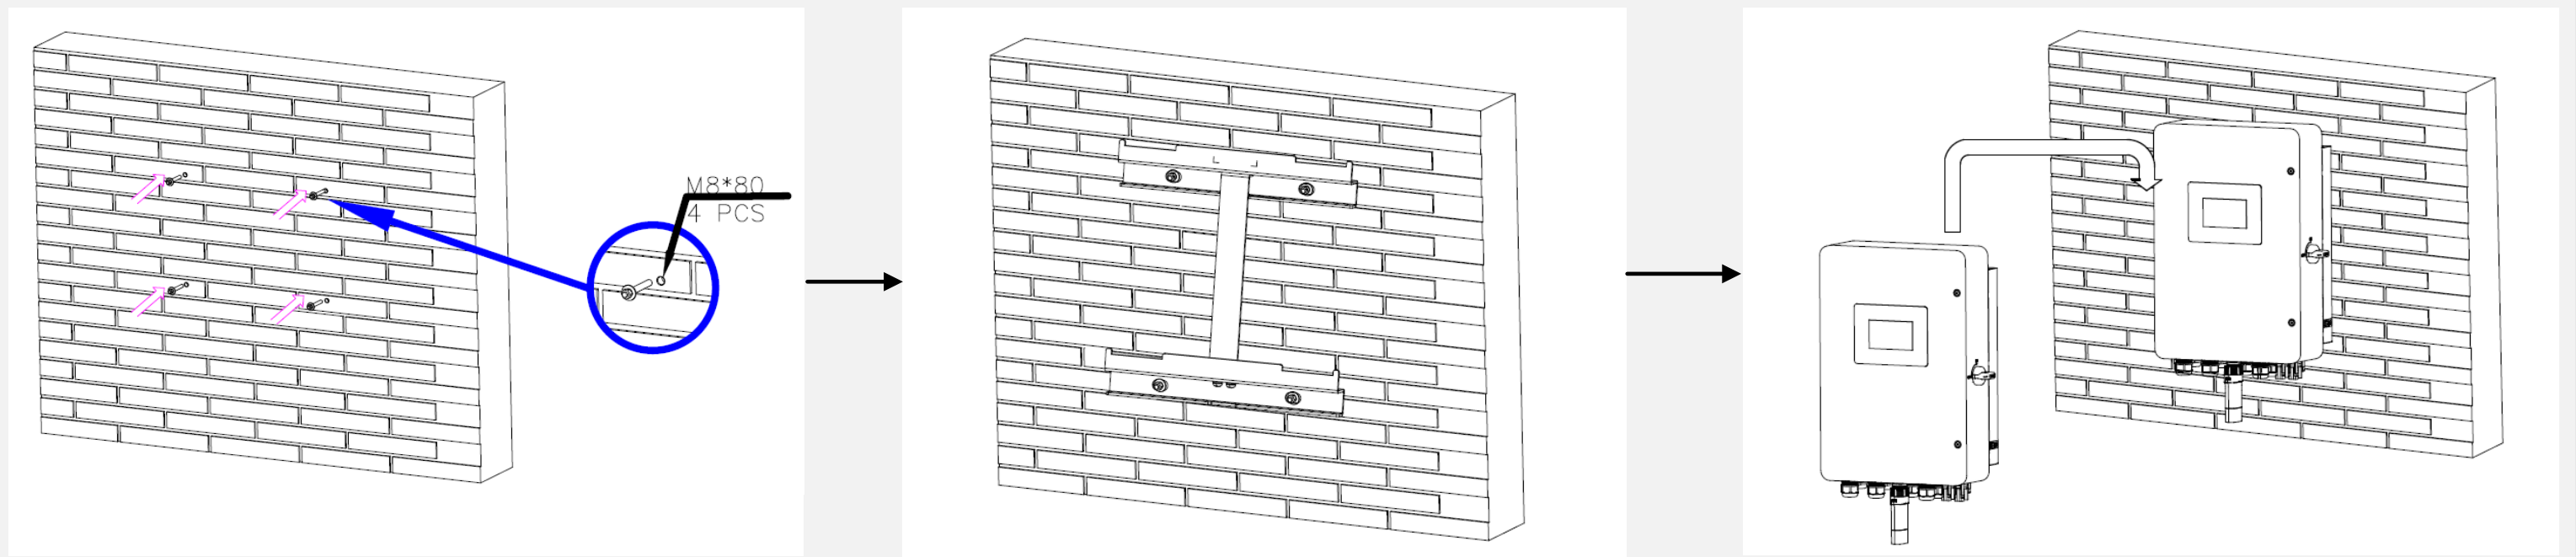


## Connecting the battery

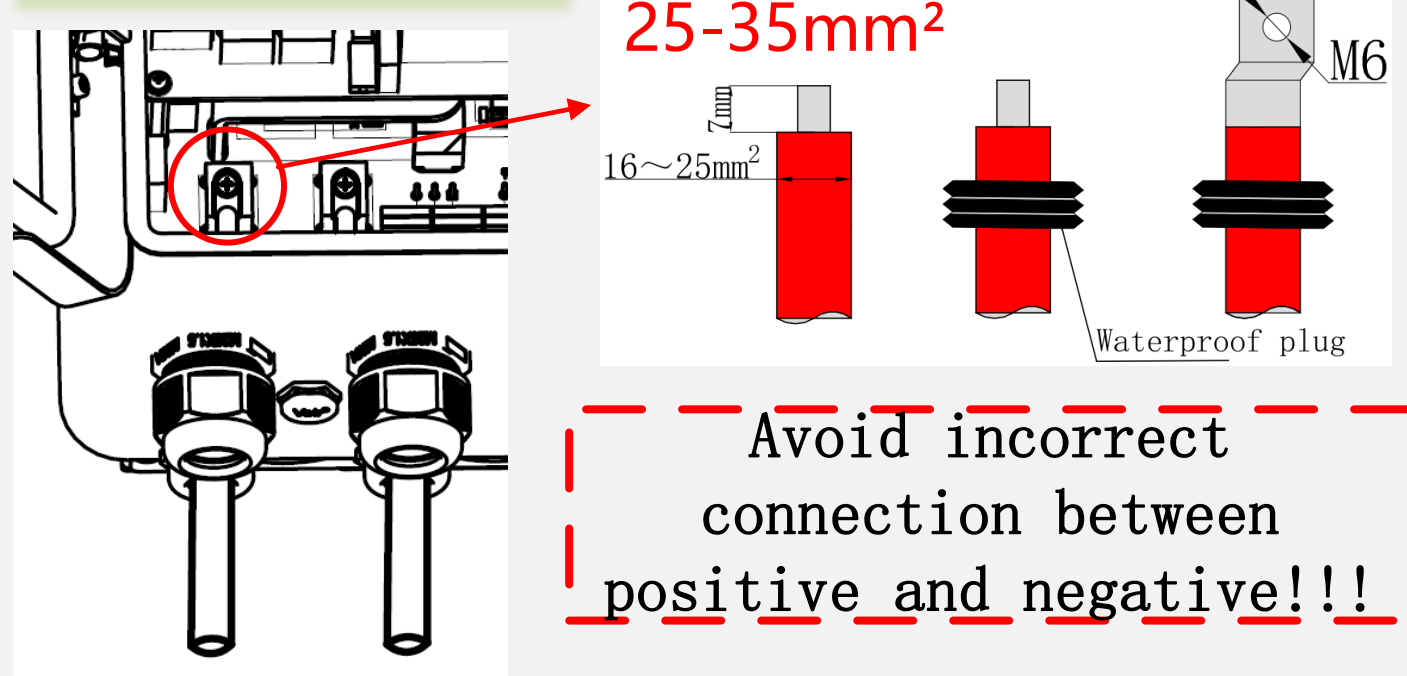


## Connecting the AC Terminal

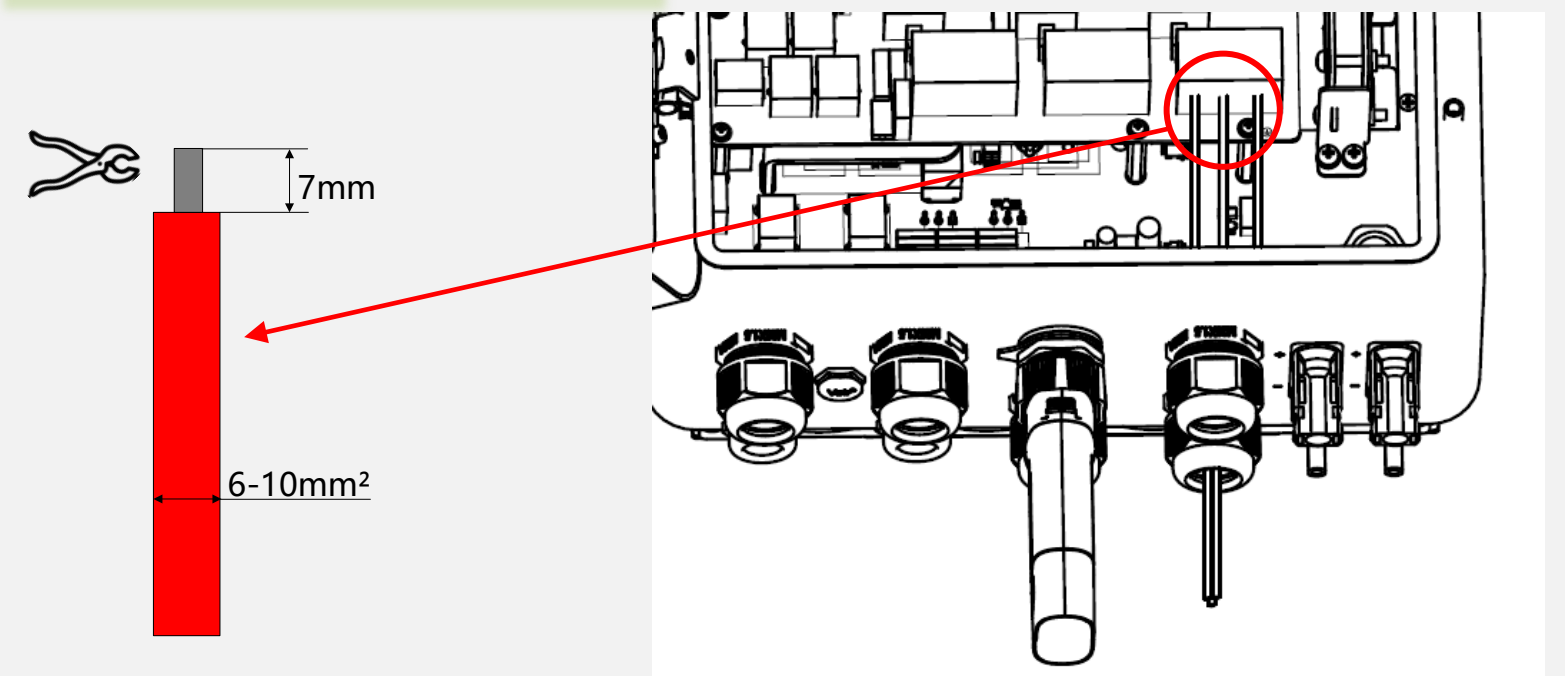


## Inverter grounding

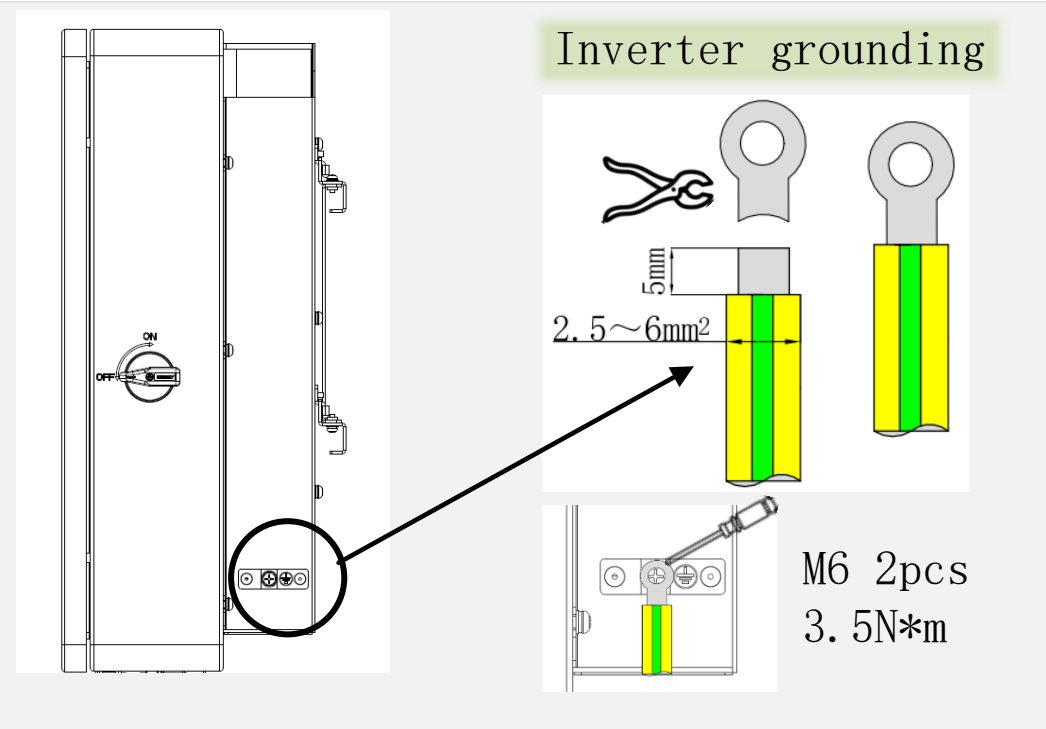

## Connecting PV

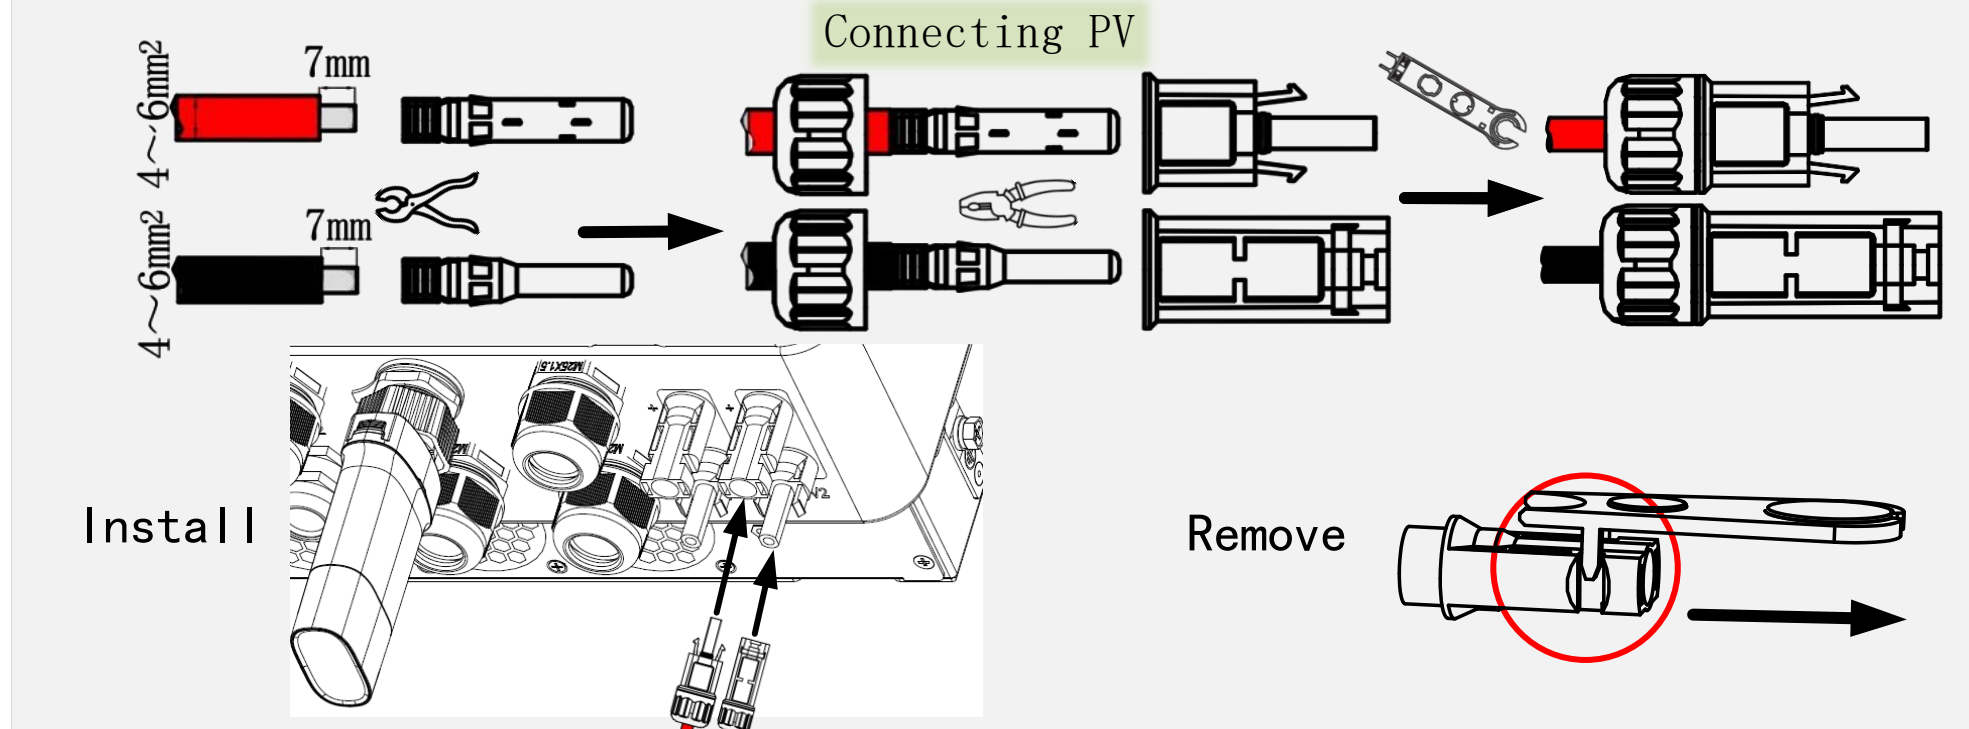

## Connecting the WIFI module

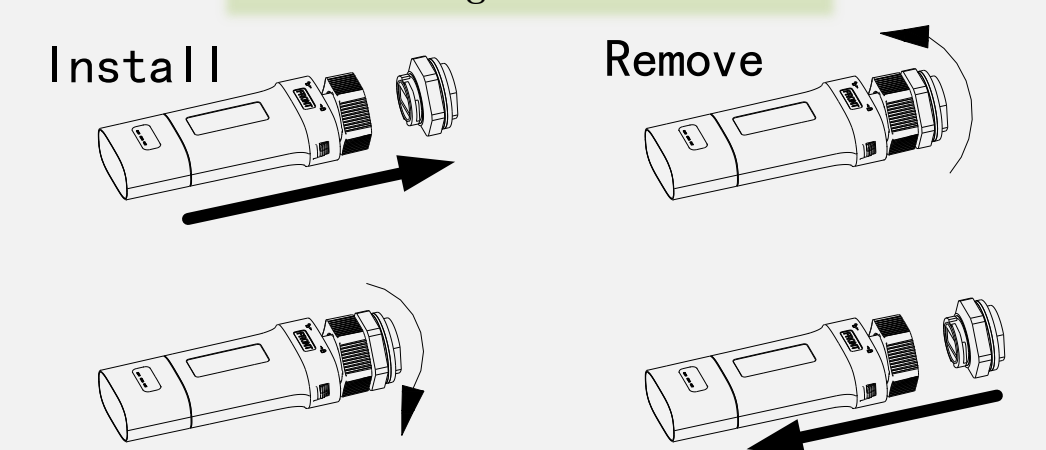

## ESS Link Download



Android



Google play



iOS

Download the user manual for details:  
[www.sinexcel-isuna.com/Download/](http://www.sinexcel-isuna.com/Download/)