



Isuna 6000SO parallel instruction

This document is used to guide the Isuna 6000SO parallel wiring and app setup.

1.Parallel wiring diagram

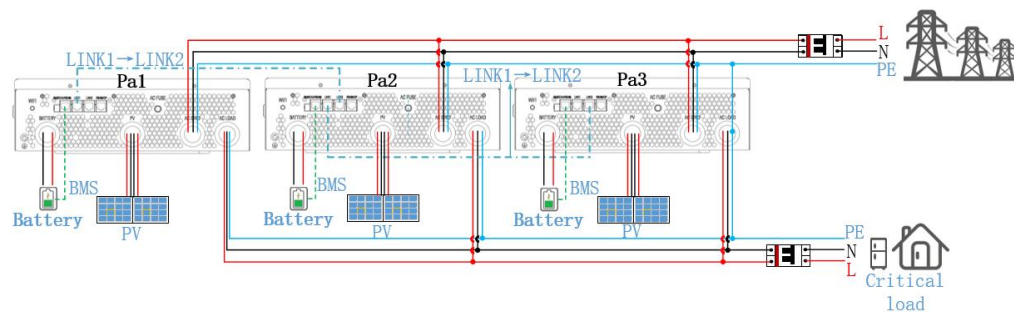

2.APP Settings

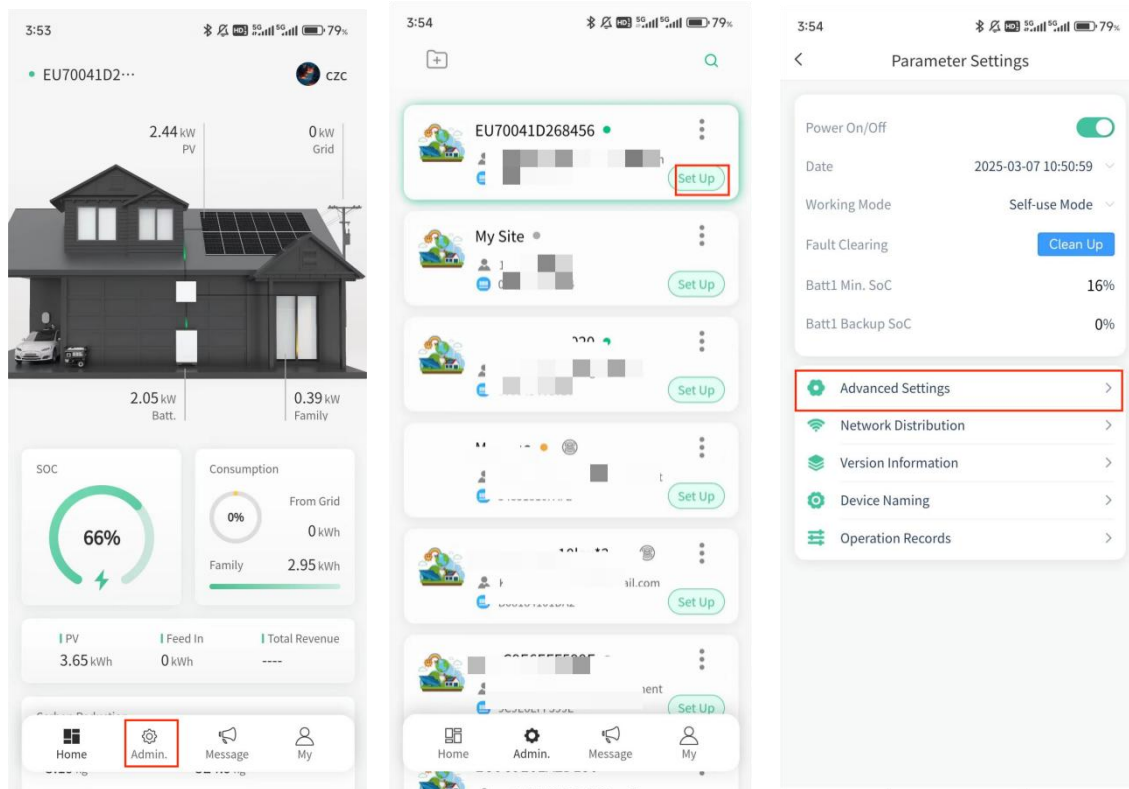



Find the parallel setting in the picture above and set the **Number Of Device**(number of parallel device) and the **Parallel Device SN**(set 1 for inverter no.1 and 2 for inverter no.2.....). **1 Phase Parallel Mode** Single-phase