



Installation Instructions


Three phase HV Hybrid Inverter -Isuna D5K-TH~D12K-TH

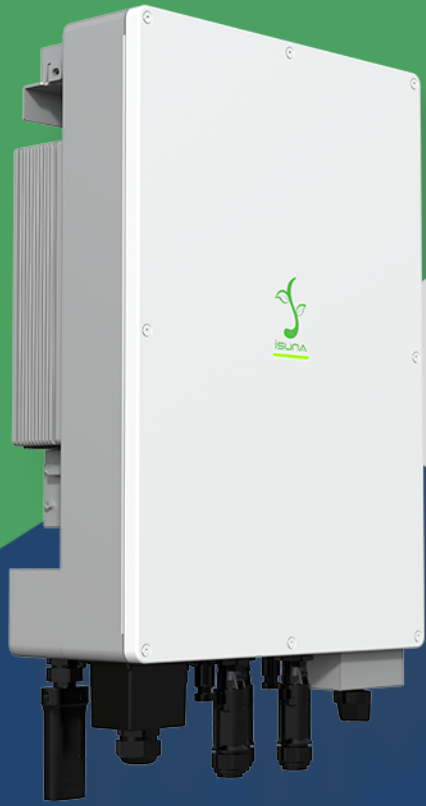


This guide is only for step-by-step reminders during the installation process, please read the user manual in detail before installation

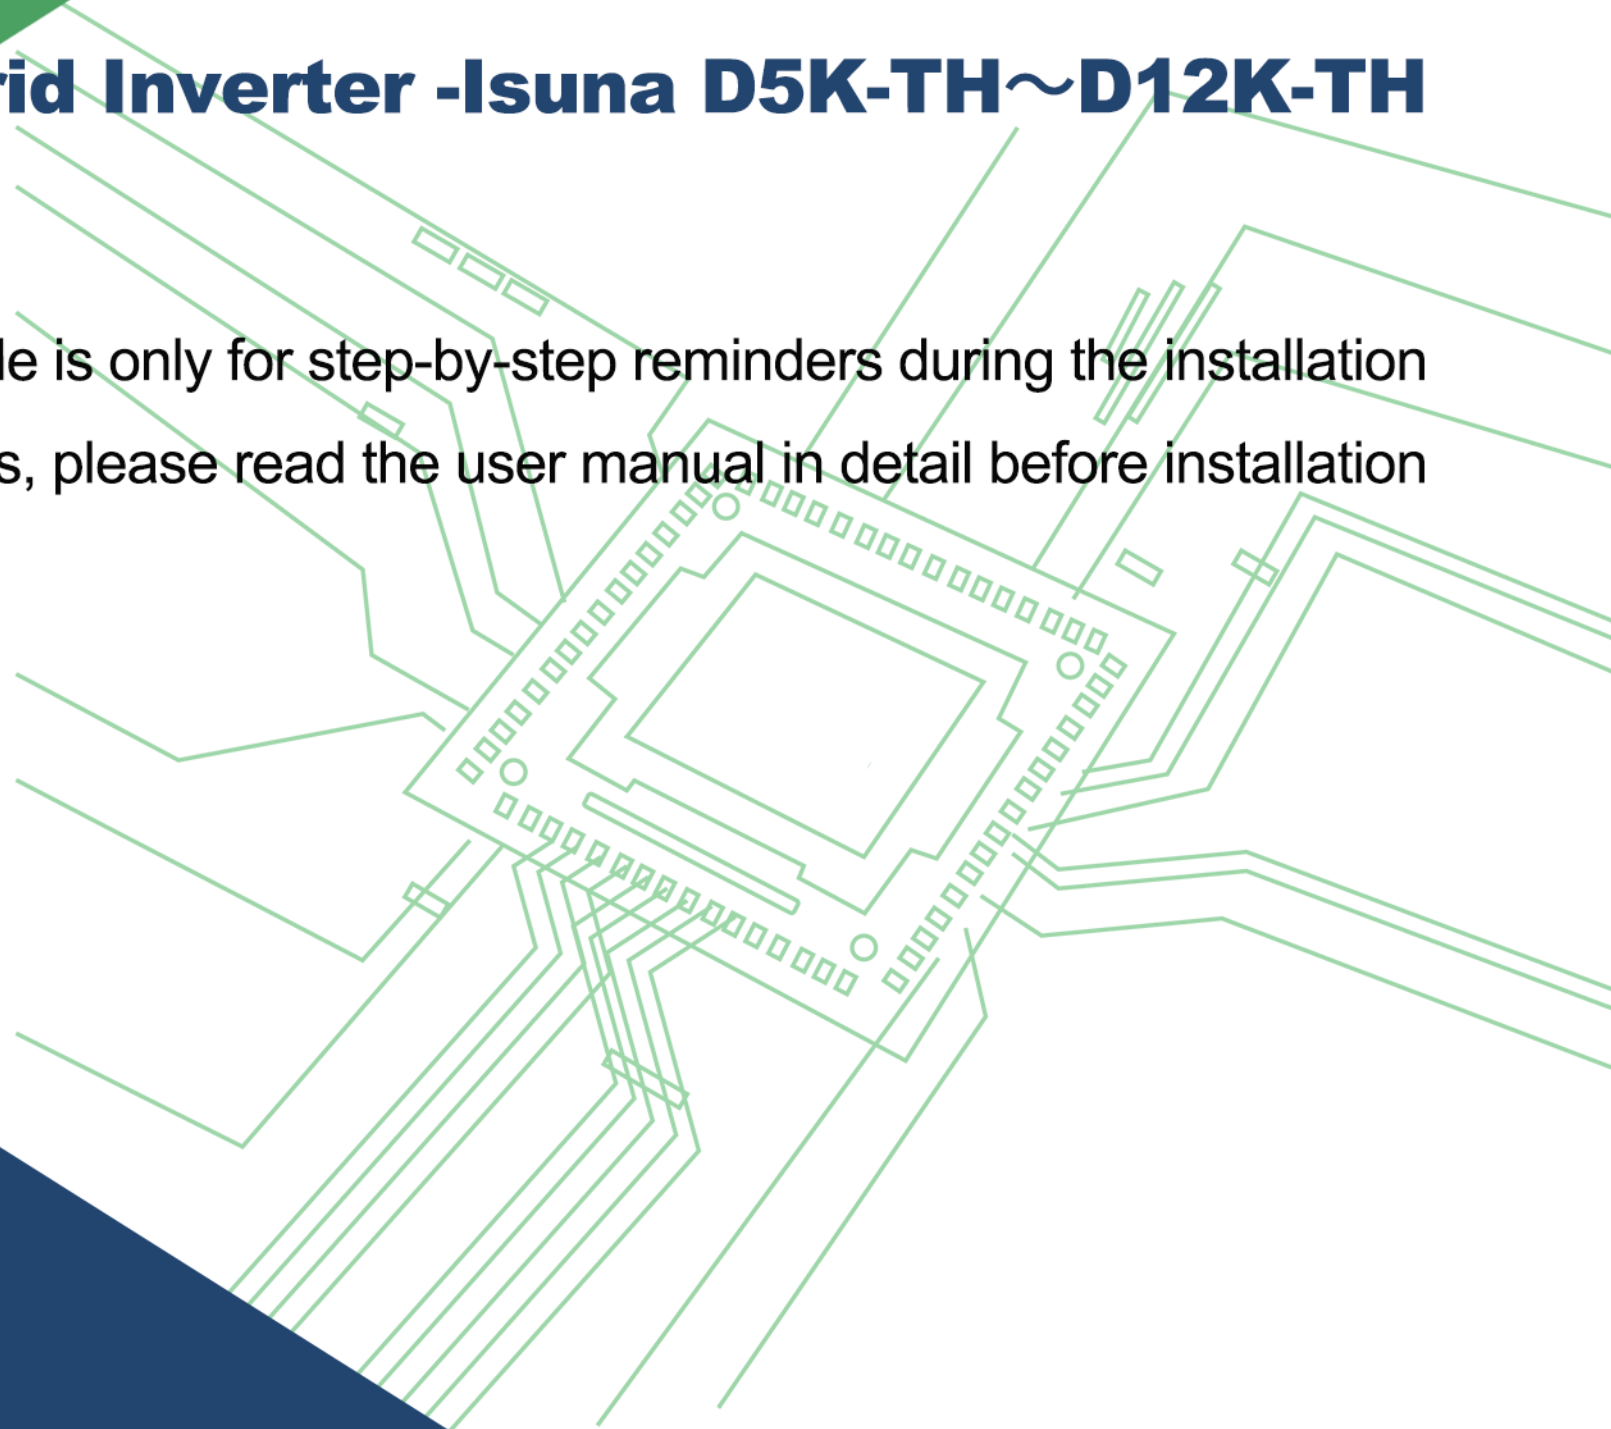


Installation Tool

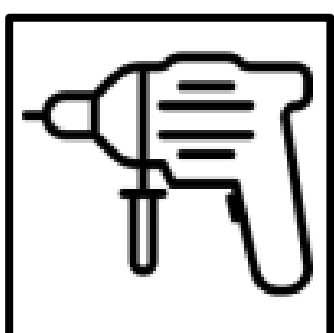


Percussion drilling:
wall drilling

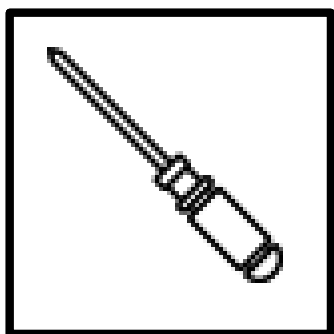


M6 Phillips screwdriver:
Remove, install screws and
wire connections

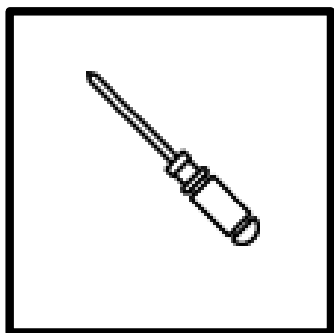


M4 Phillips screwdriver:
Remove and install load
terminal screws

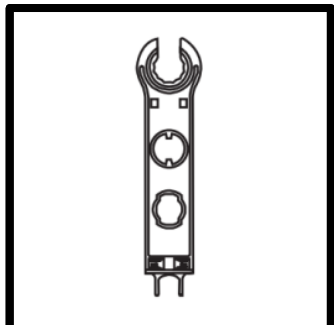


Removing tool:
Remove the PV and
BAT terminals

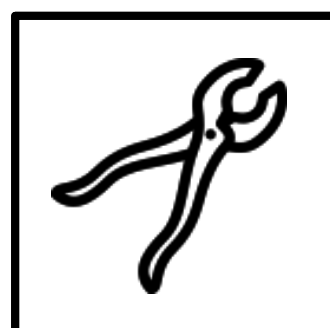


Wire stripper:
Strip cables

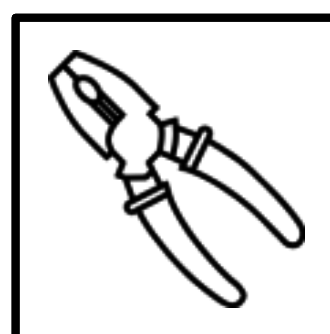

Crimping pliers:
crimp PV and BAT cables

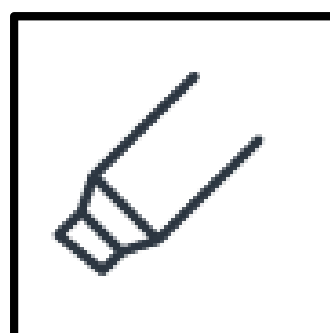


Marker:
Punch mark

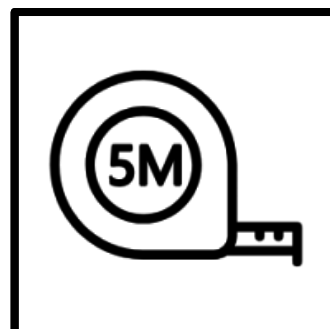


Tape measure:
Measure distance


Electrical Connection Diagram

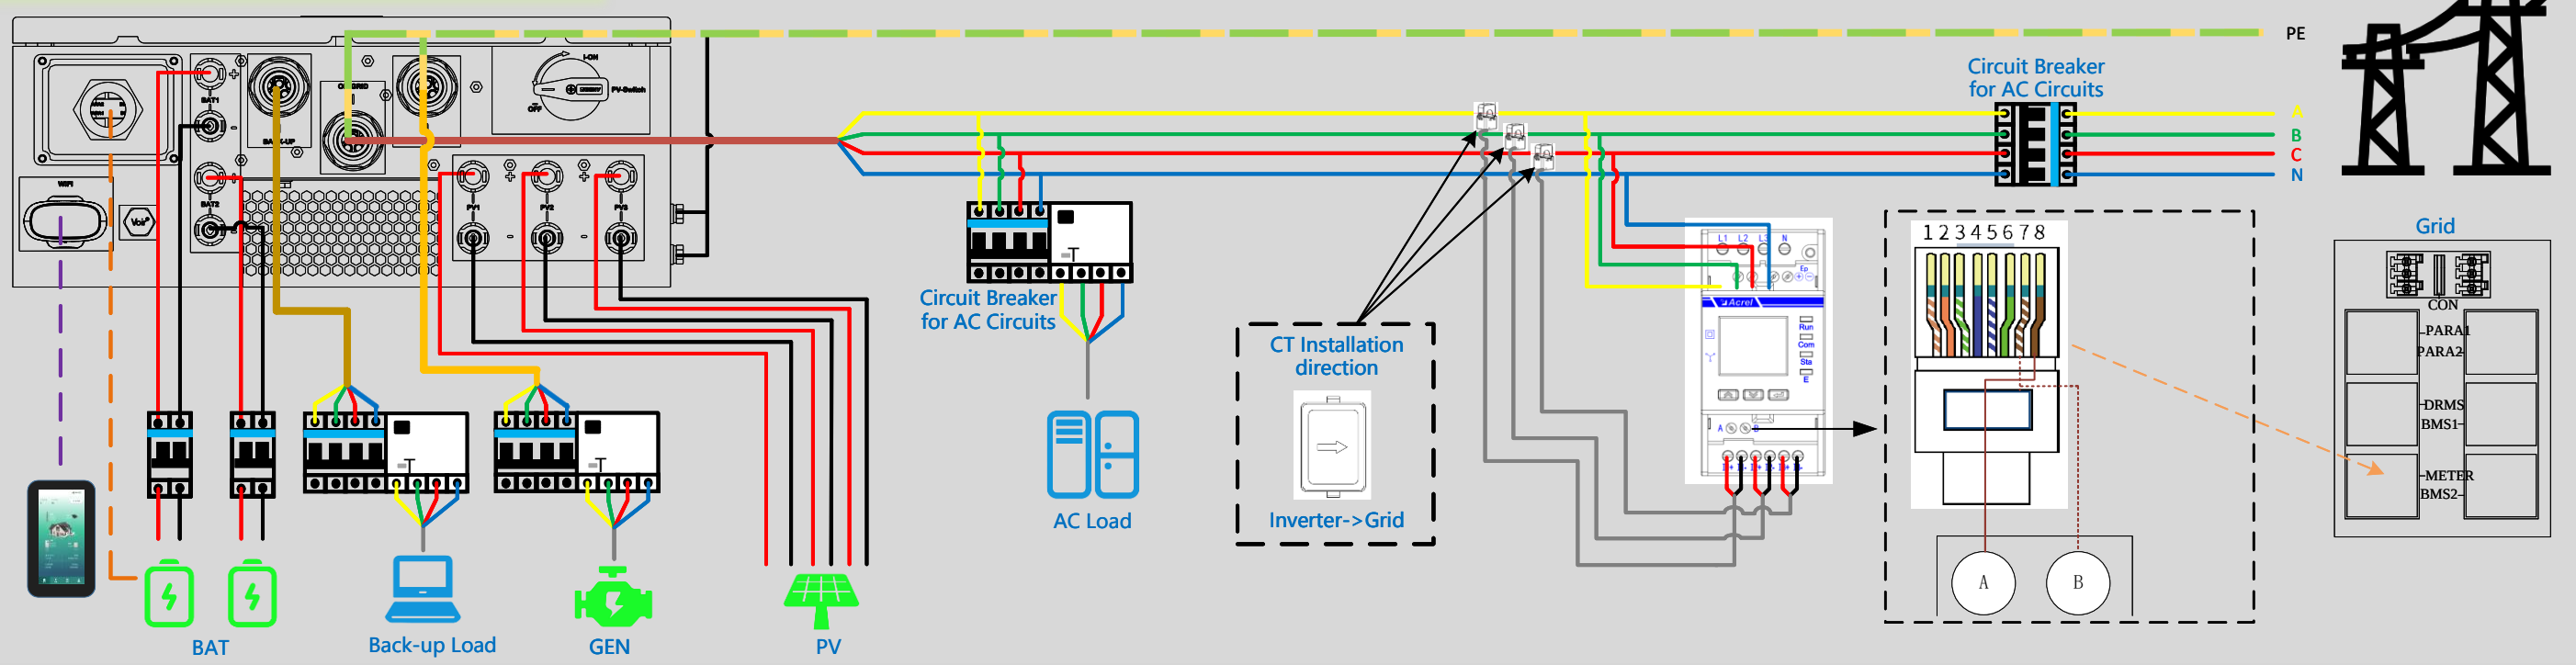


Installation of wall mounts and inverters

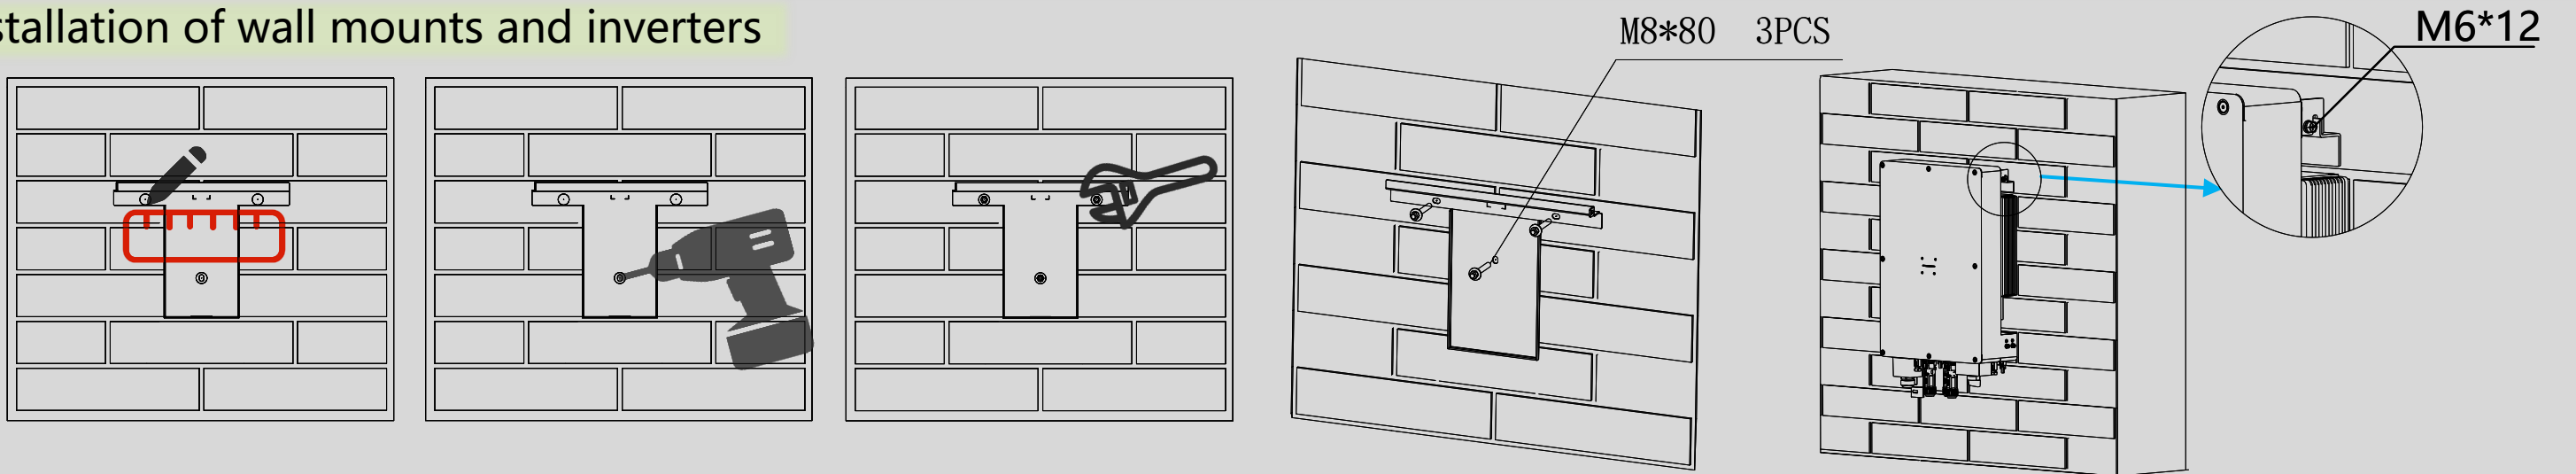


Connecting the Ground protection cable (PE)

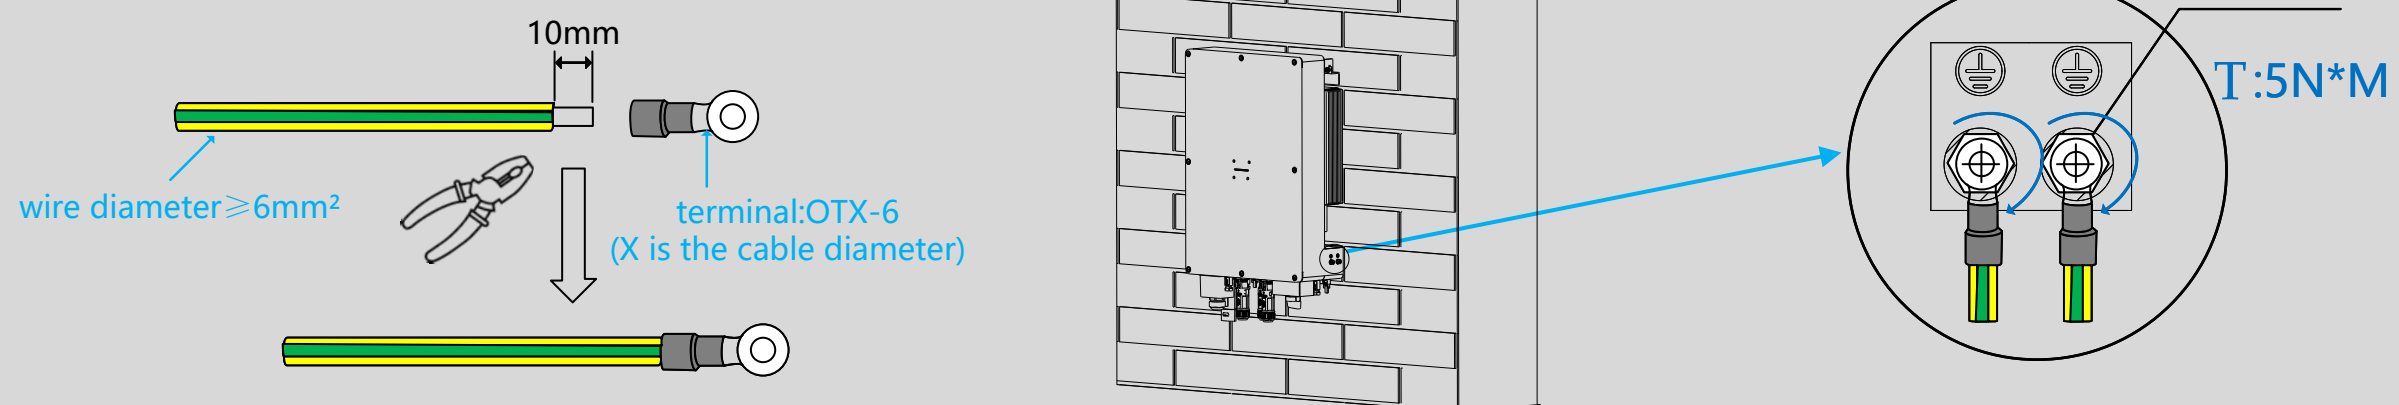


Connecting the Battery and PV

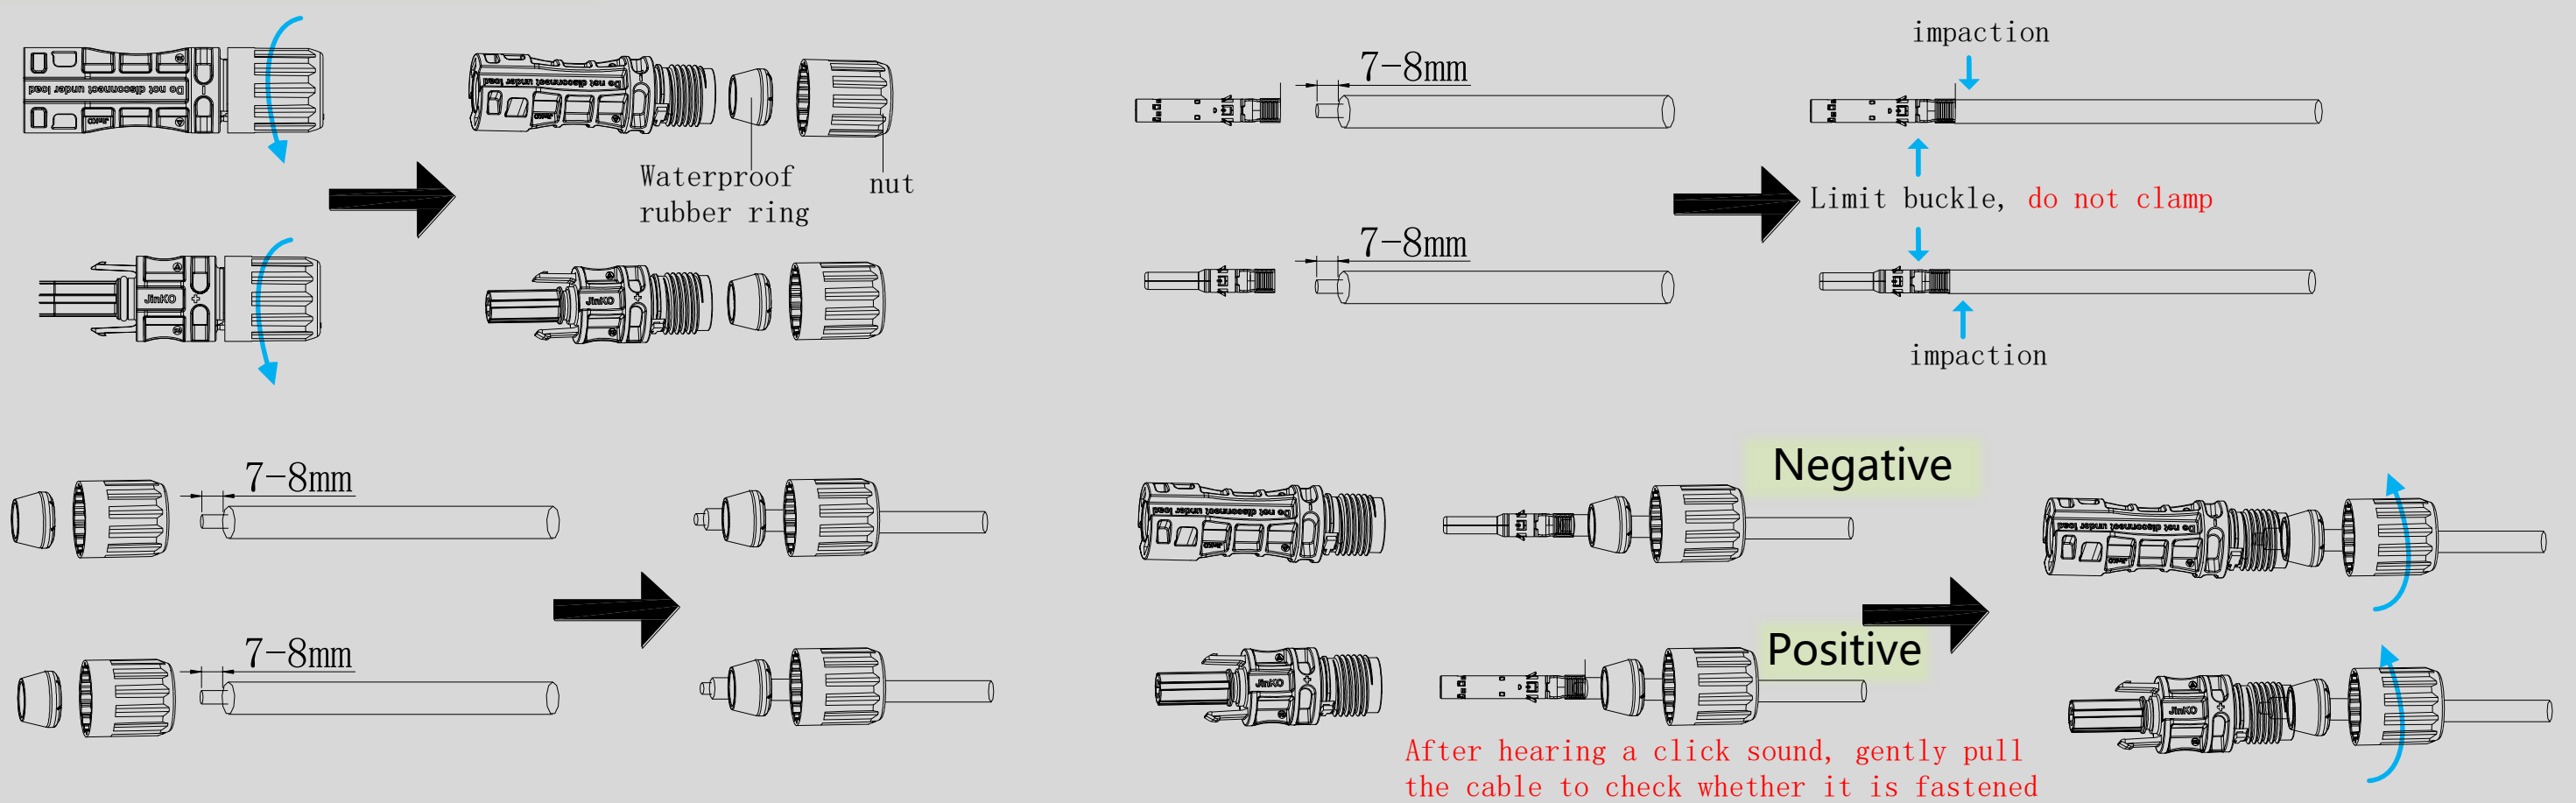

Connecting AC grid-connected & Load & Diesel generator cables

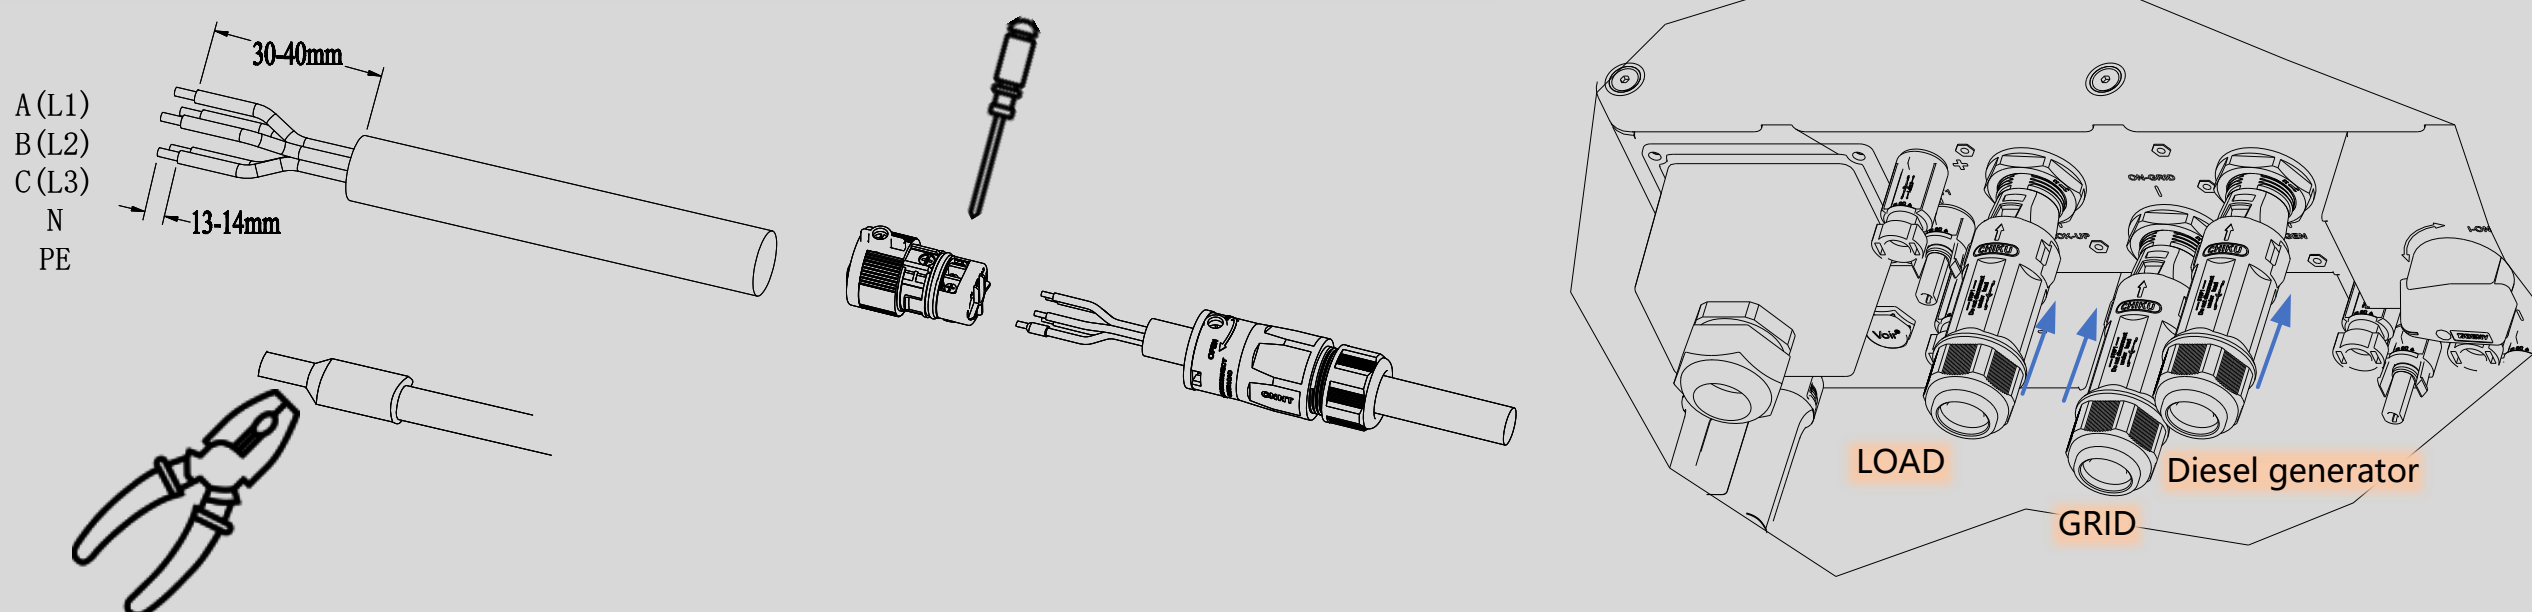

Connecting the WIFI module

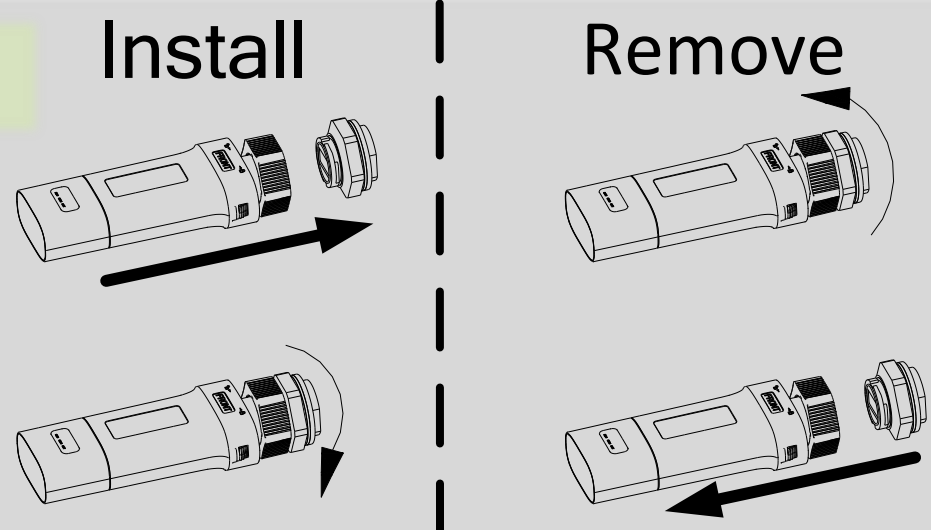

ESS Link Download



Android



Google play



iOS

Download the user manual for details:
www.sinexcel-isuna.com/Download/