


Installation Instructions


Three Phase HV Hybrid Inverter -Isuna 5000T-20000T

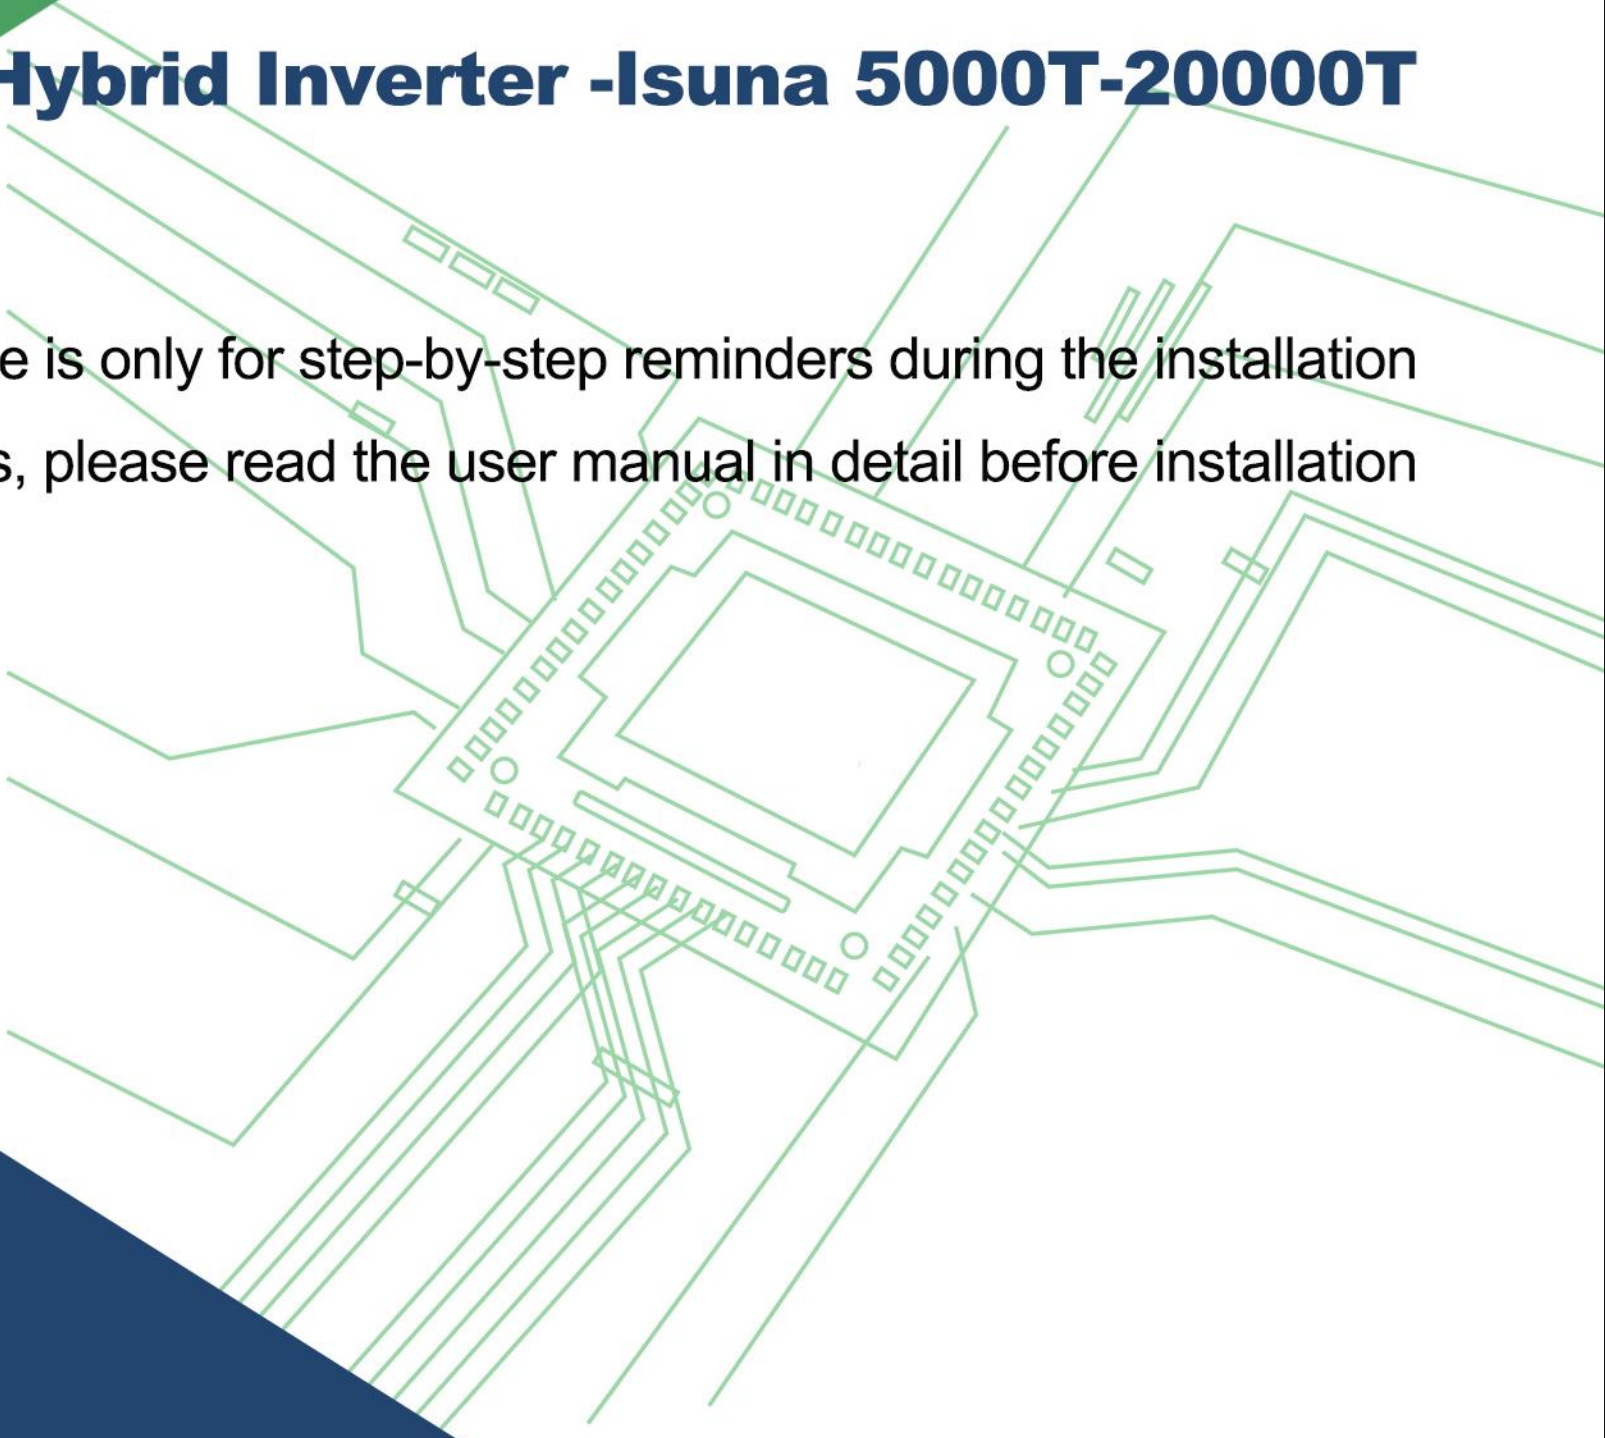


This guide is only for step-by-step reminders during the installation process, please read the user manual in detail before installation




Mounting tools

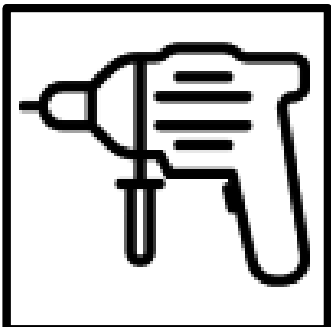


Electric drill: for drilling holes in walls.

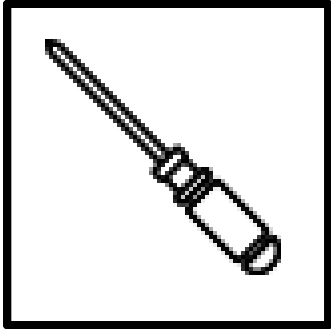

M6 screwdriver: Removal and installation of screws and wiring.

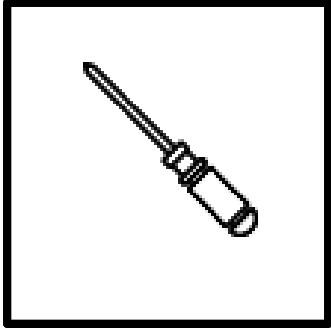


M4 screwdriver: Removal and installation of screws and wiring.

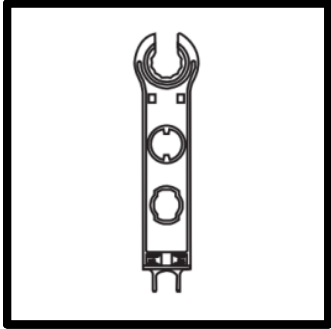

Removal tool: Remove and install the PV terminal.



Wire strippers: Strip wires.

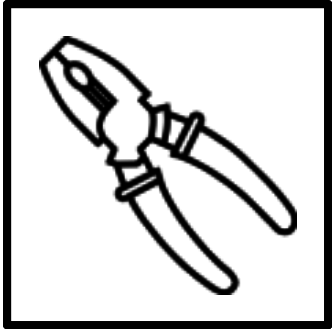

Crimping pliers: Crimp PV, BAT cable wires.




Marker: Punch marking.




Tape measure: Measuring distances.



Electrical Connection Diagram

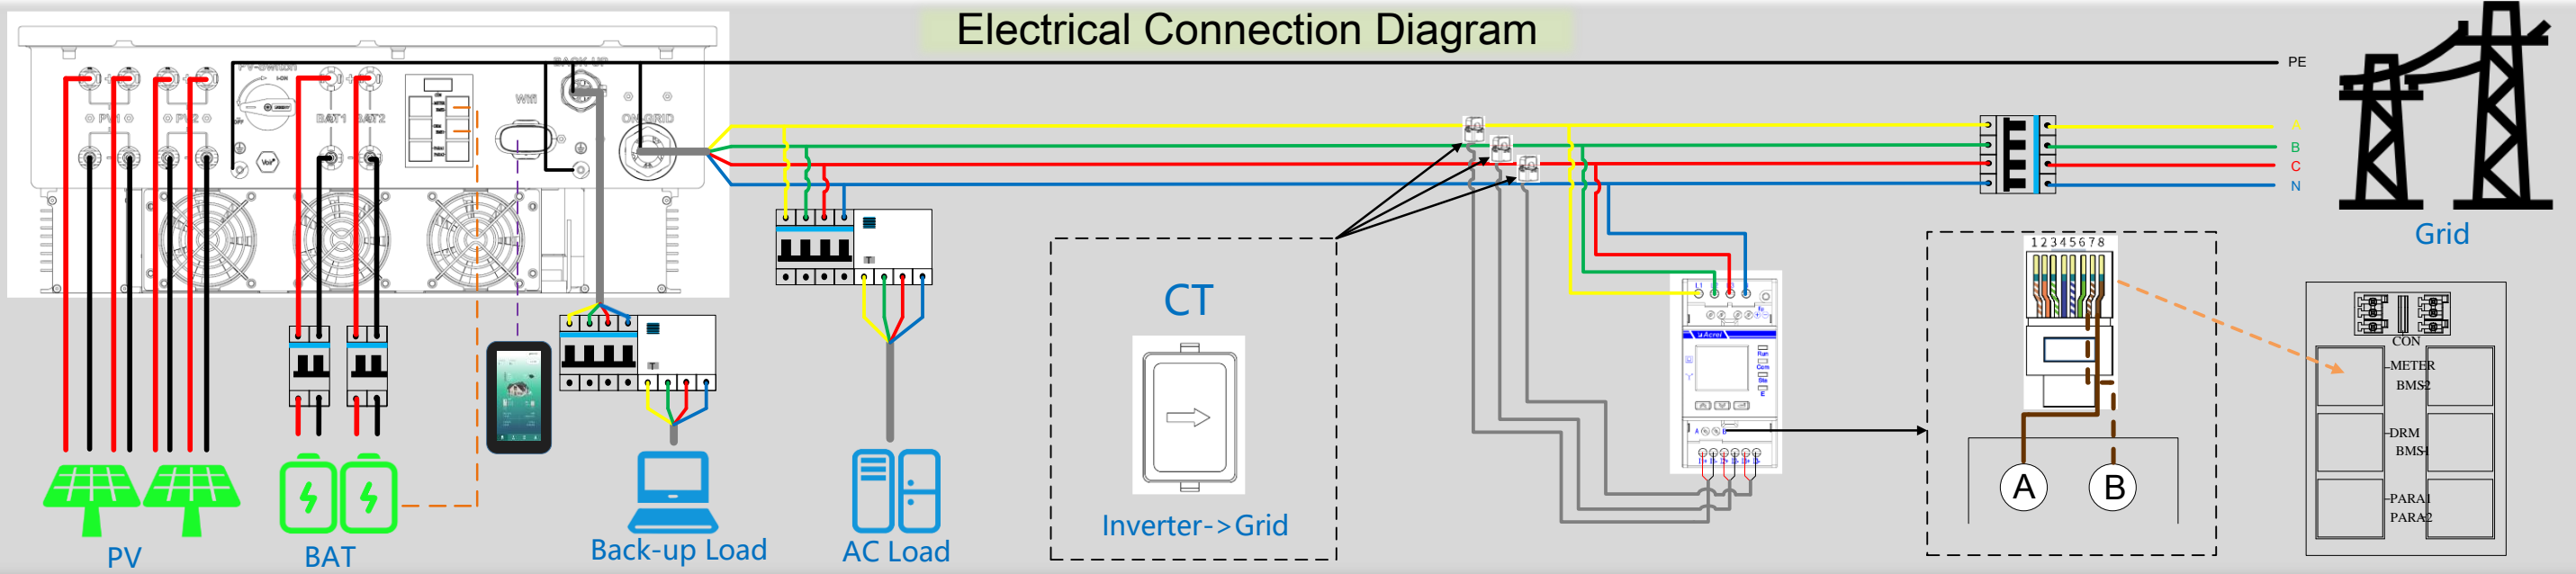


Installation of wall mounts and inverters

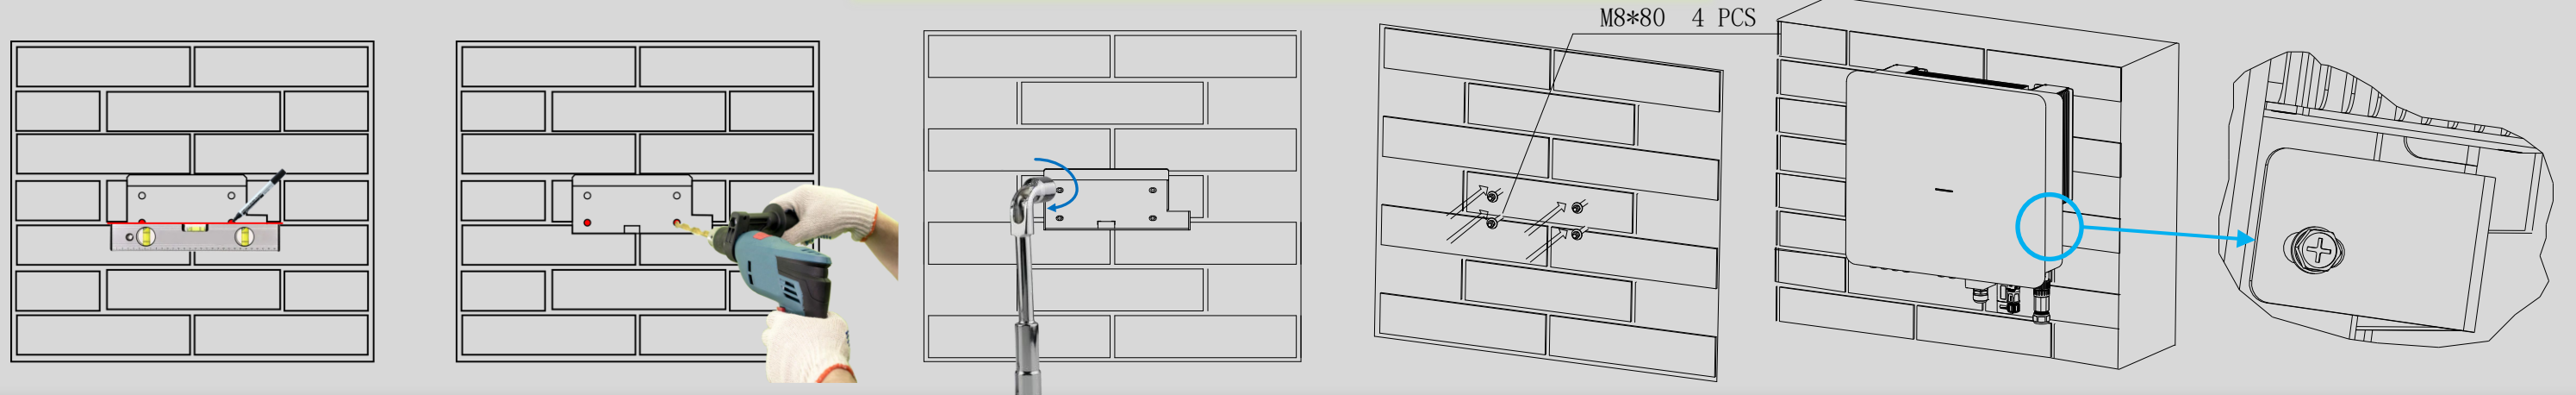


Connecting Protective Earth(PE)

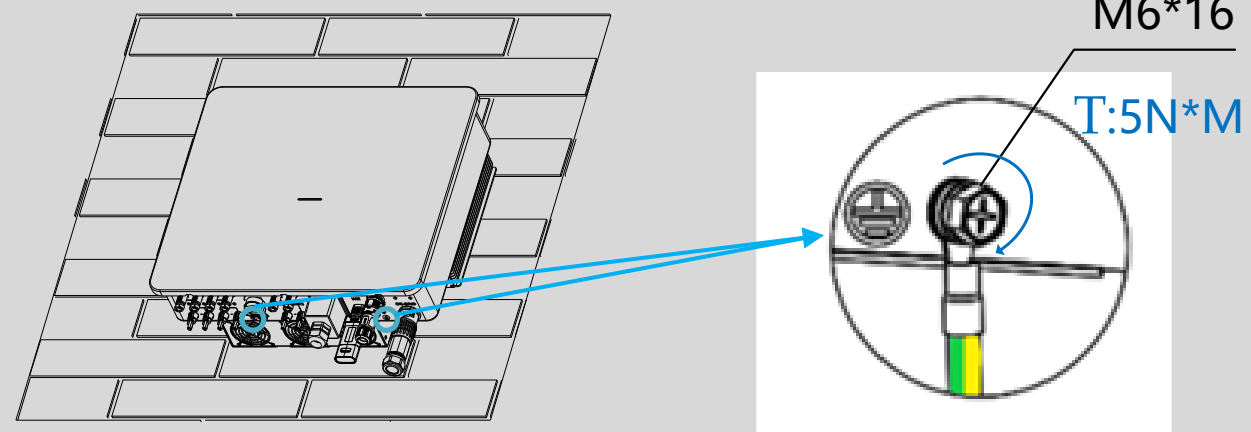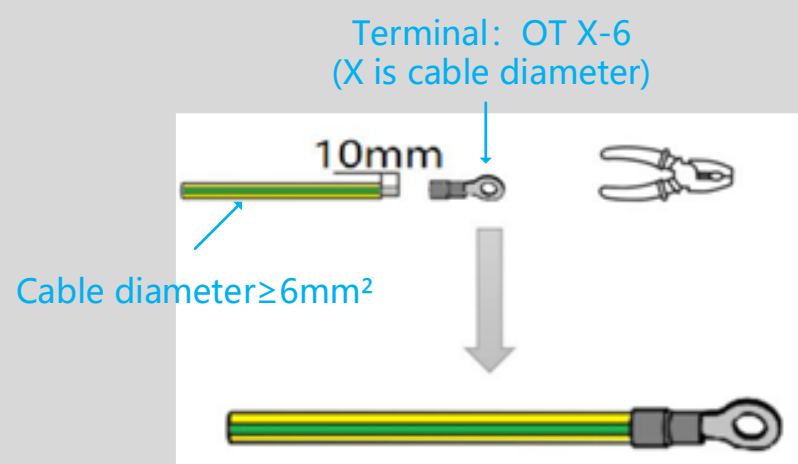

Connecting PV & BAT

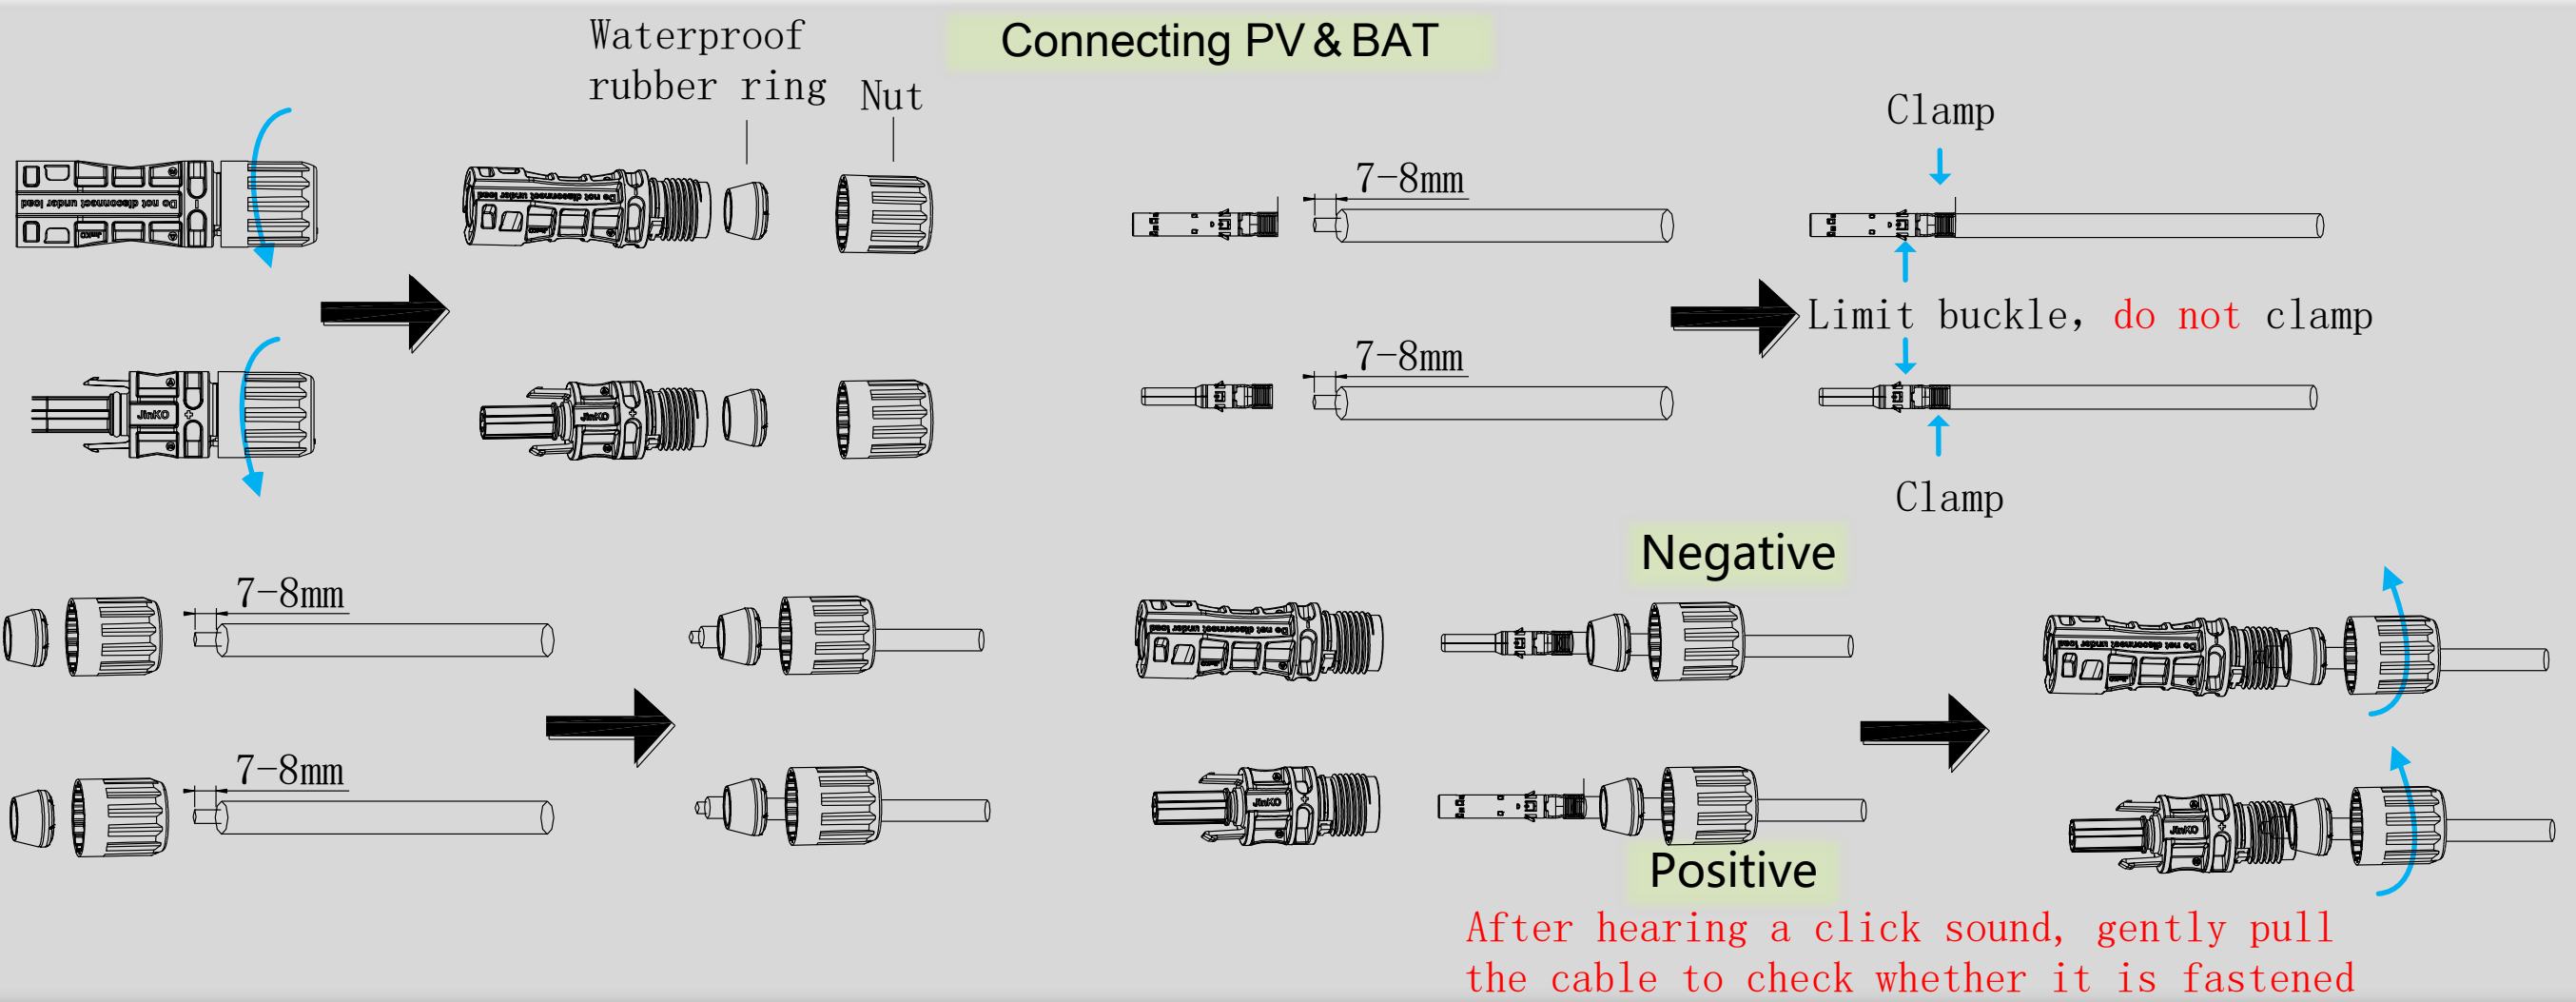



Connecting the Grid & BACK-UP Terminal

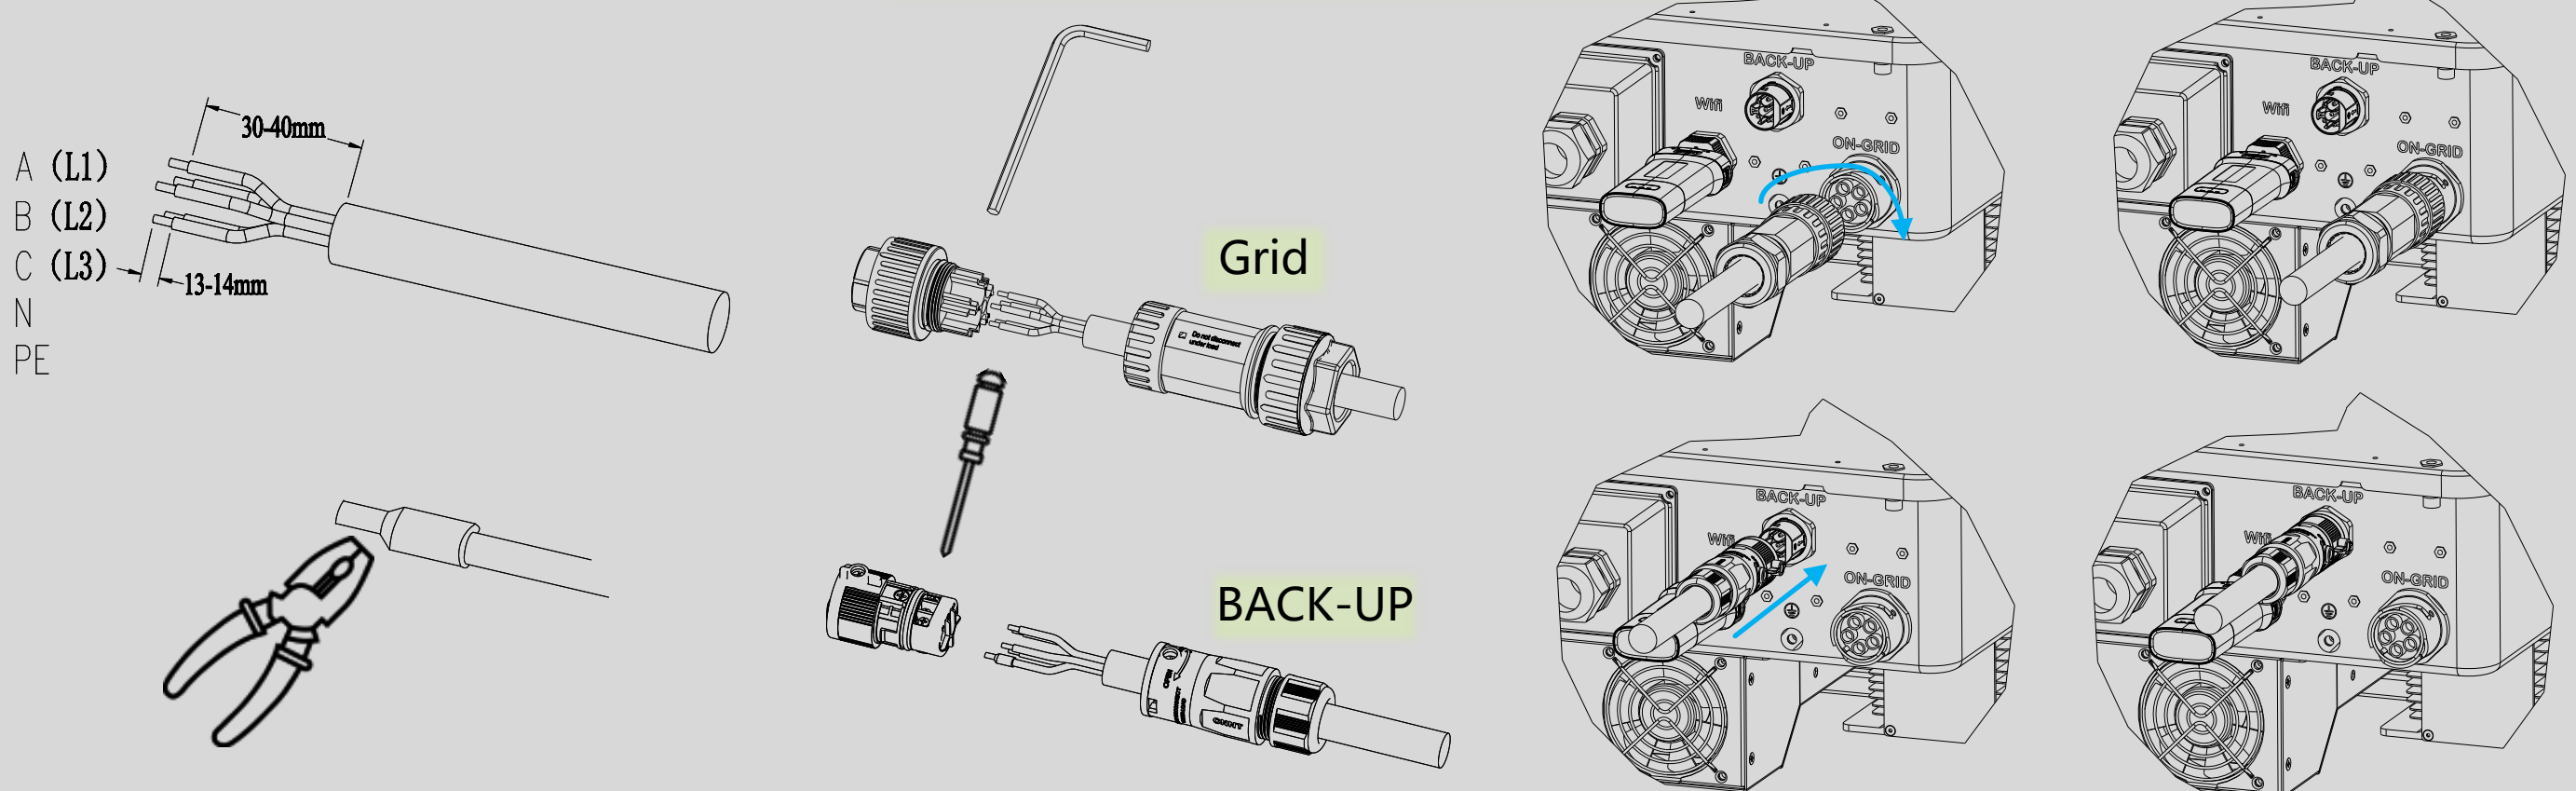

Install

Remove

Connecting the WIFI dongle

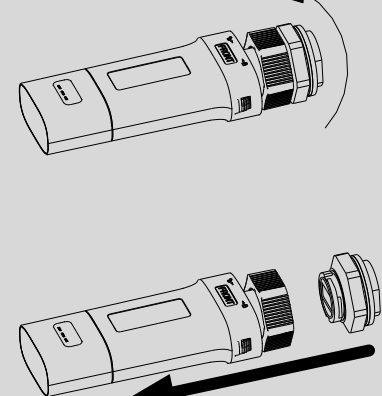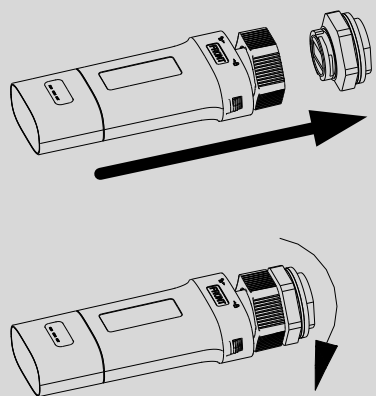

ESS Link Download



Android



Google play



iOS

Download the user manual for details:
www.sinexcel-isuna.com/Download/