
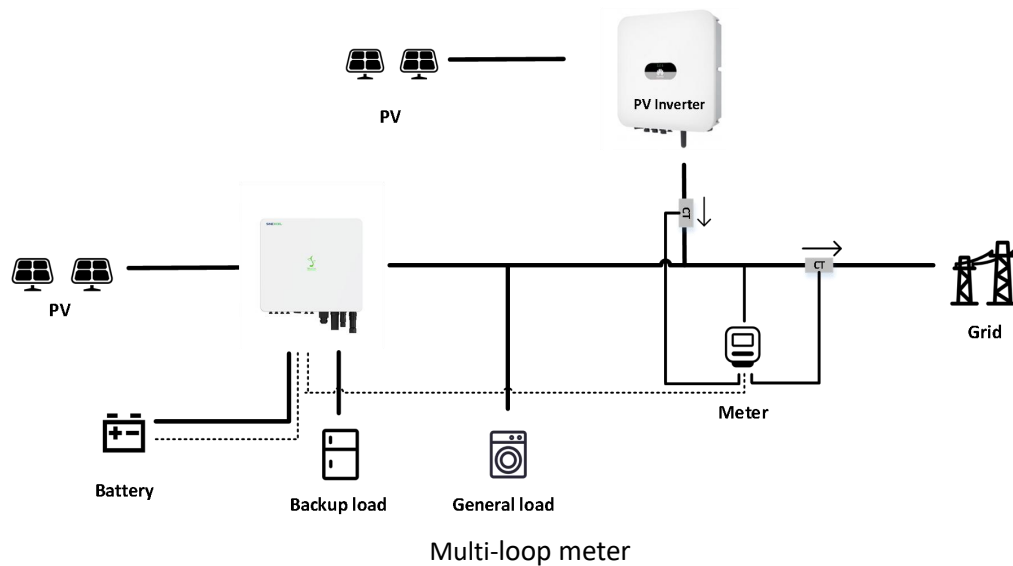



AC couple Function Introduction

1. Wiring diagram

- For models without independent AC coupling interface

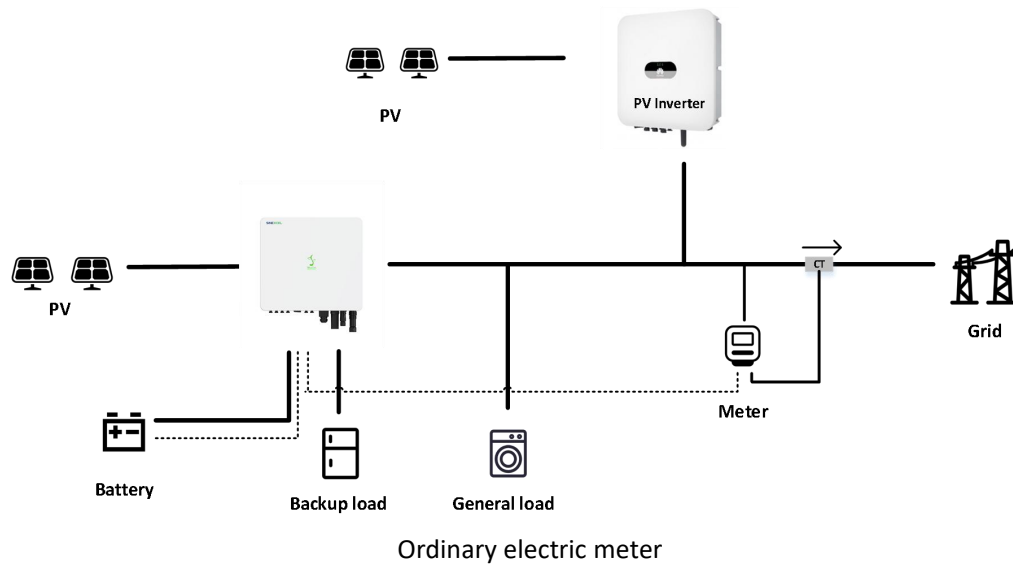

- For models with independent AC coupling interface

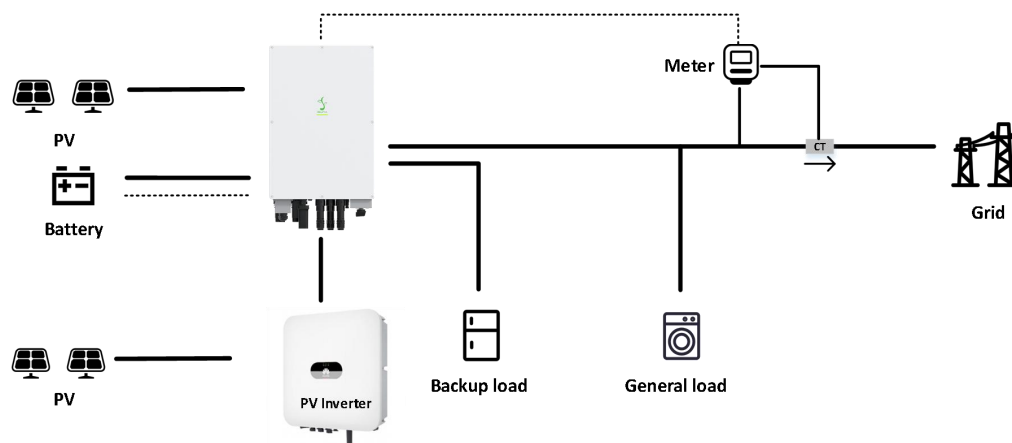

2. Function introduction

The AC Couple function switch allows the hybrid inverter to be AC coupled with other brands of PV inverters when turned on, and the PV of the hybrid can be connected or not (without alarm). When AC coupling is used, the hybrid inverter can use the electricity generated by the PV inverter to charge the battery without communicating with the PV inverter. And after this function is enabled, the hybrid inverter can perform all the original modes of the inverter, such as self use and backup power, normally.

Note: The anti-reverse function can only be realized when the battery is not fully charged.

3. APP operation introduction

In the app **【set up】** page, go to **【Advanced Settings】**->**【Master Setting】**
-> **【Routine】** ,Enable **【AC coupling Mode】** .

