

# Installation Instructions


## Single Phase LV Hybrid Inverter Isuna S3K-SL-S~S6K-SL-S

This guide is only for step-by-step reminders during the installation process, please read the user manual in detail before installation


### Mounting tools




Electric drill: for drilling holes in walls.

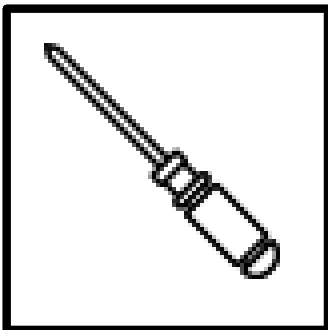


M6 screwdriver: Removal and installation of screws and wiring.

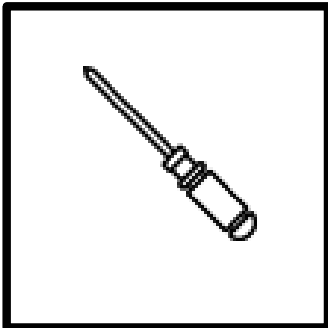


M4 screwdriver: Removal and installation of screws and wiring.

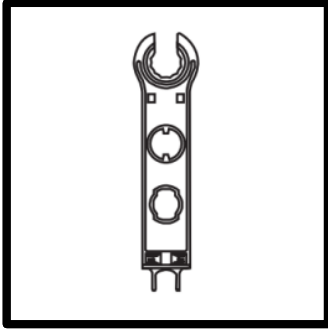


Removal tool: Remove and install the PV terminal.

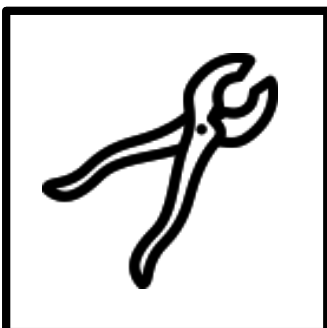

Wire strippers: Strip wires.

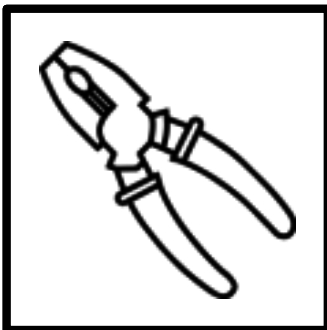

Crimping pliers: Crimp PV, BAT cable wires.

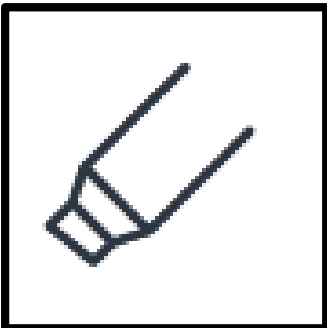


Marker: Punch marking.




Tape measure: Measuring distances.




Electrical Connection Diagram

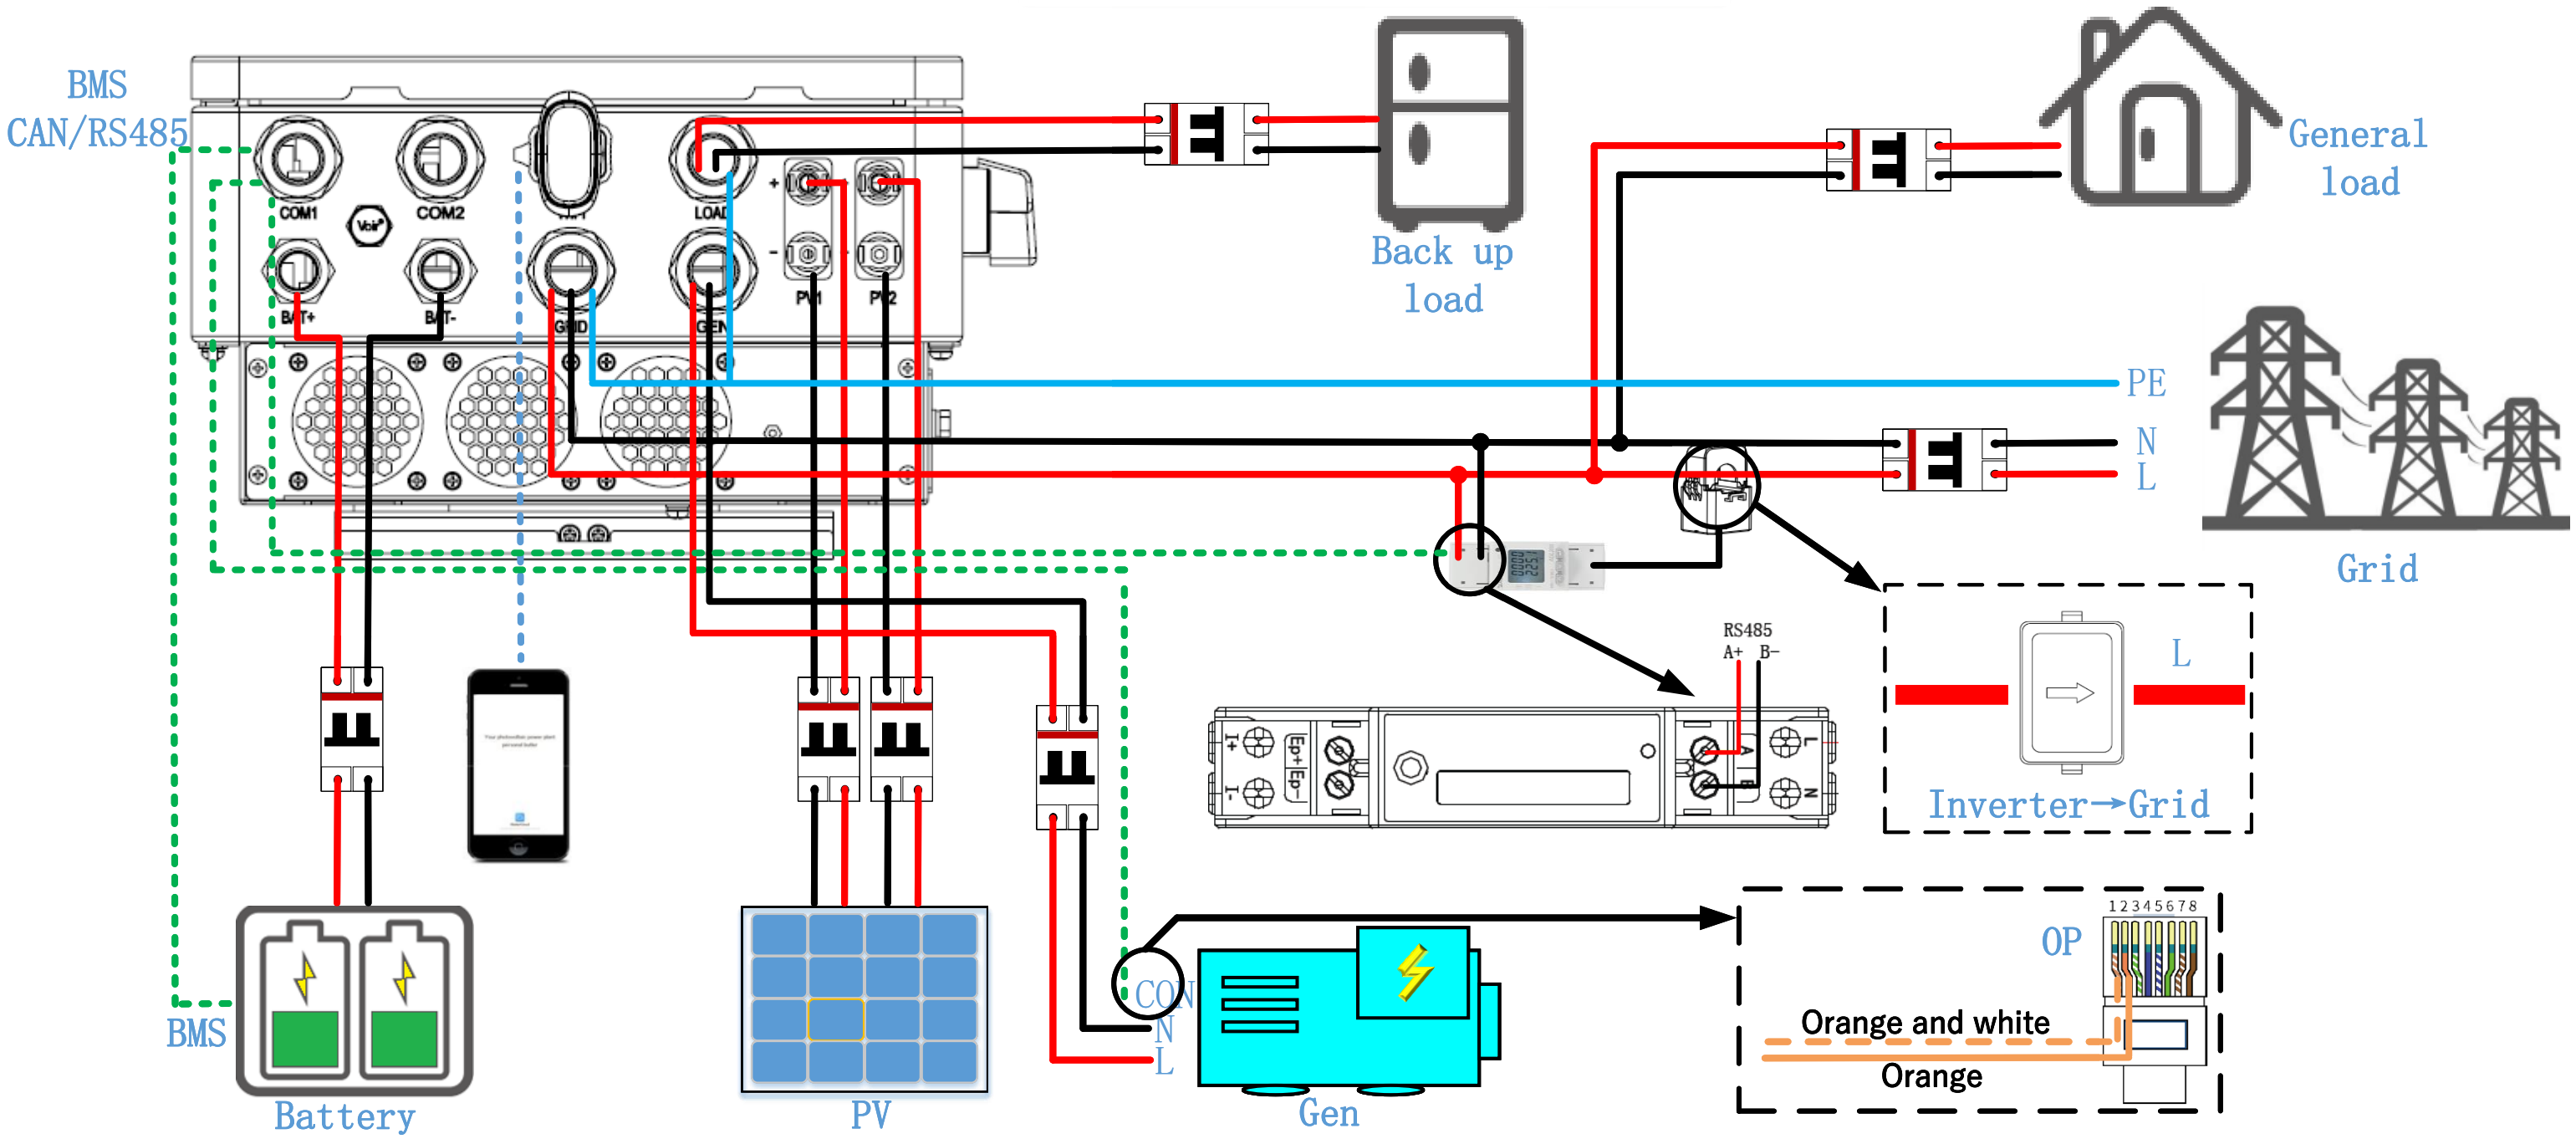


Installation of wall mounts and inverters

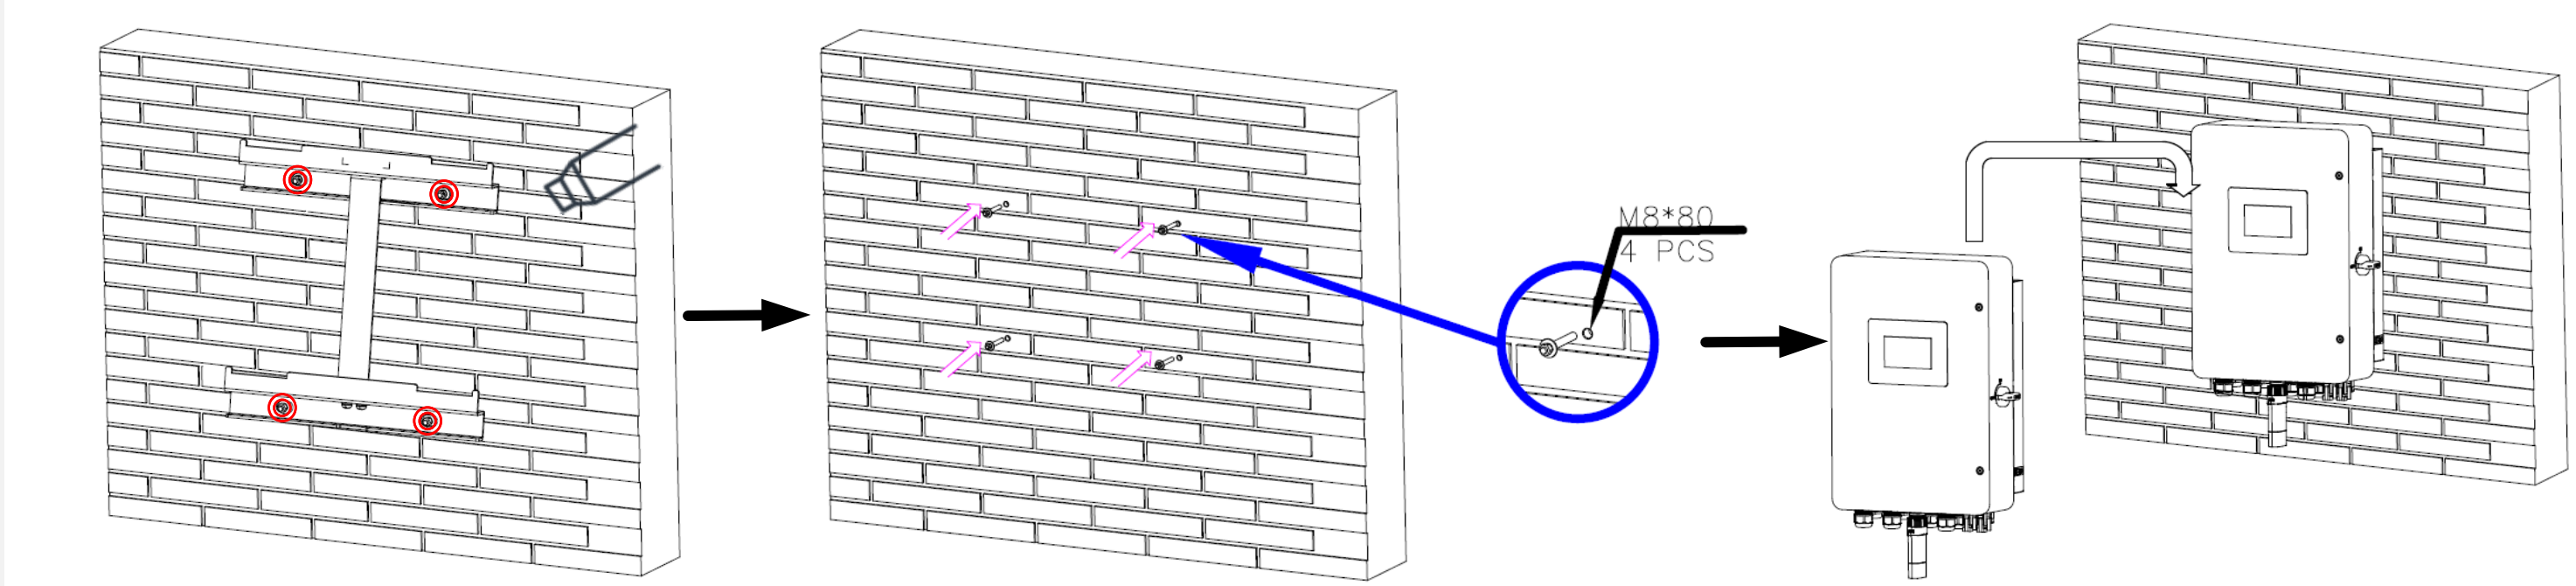


Connecting the battery

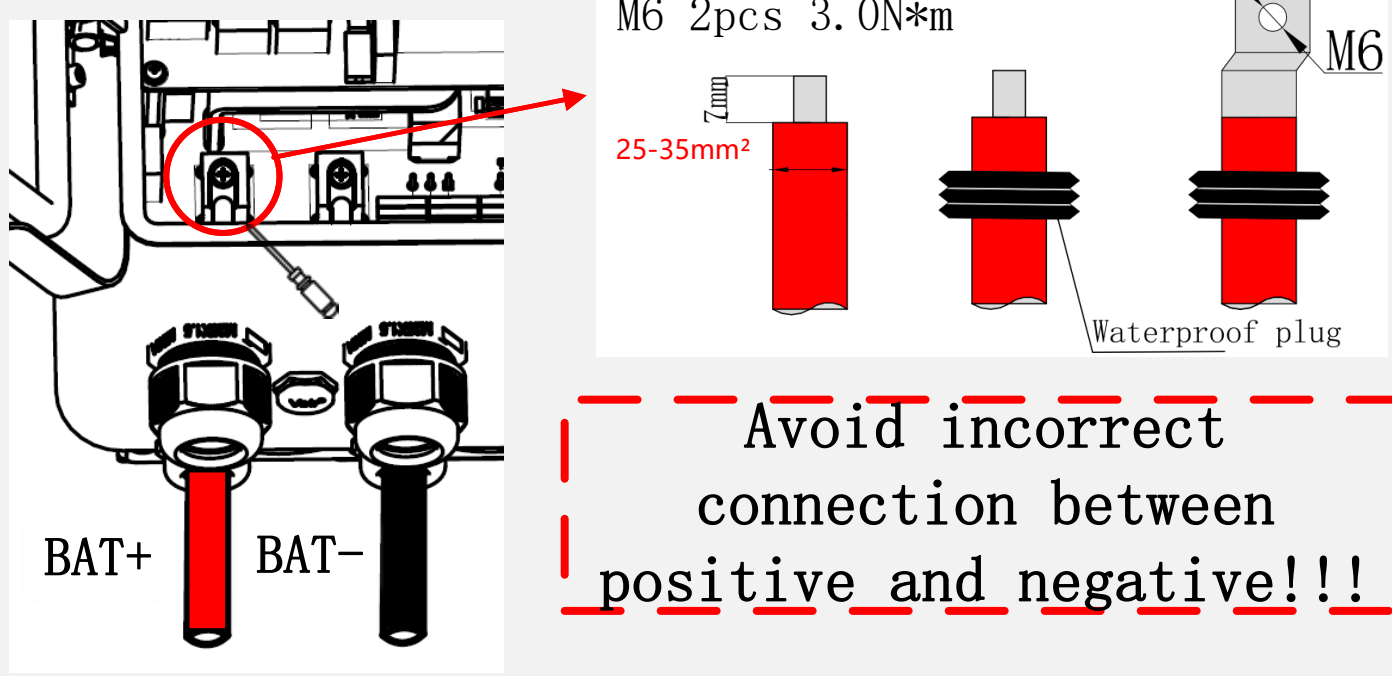


Connecting the AC Terminal

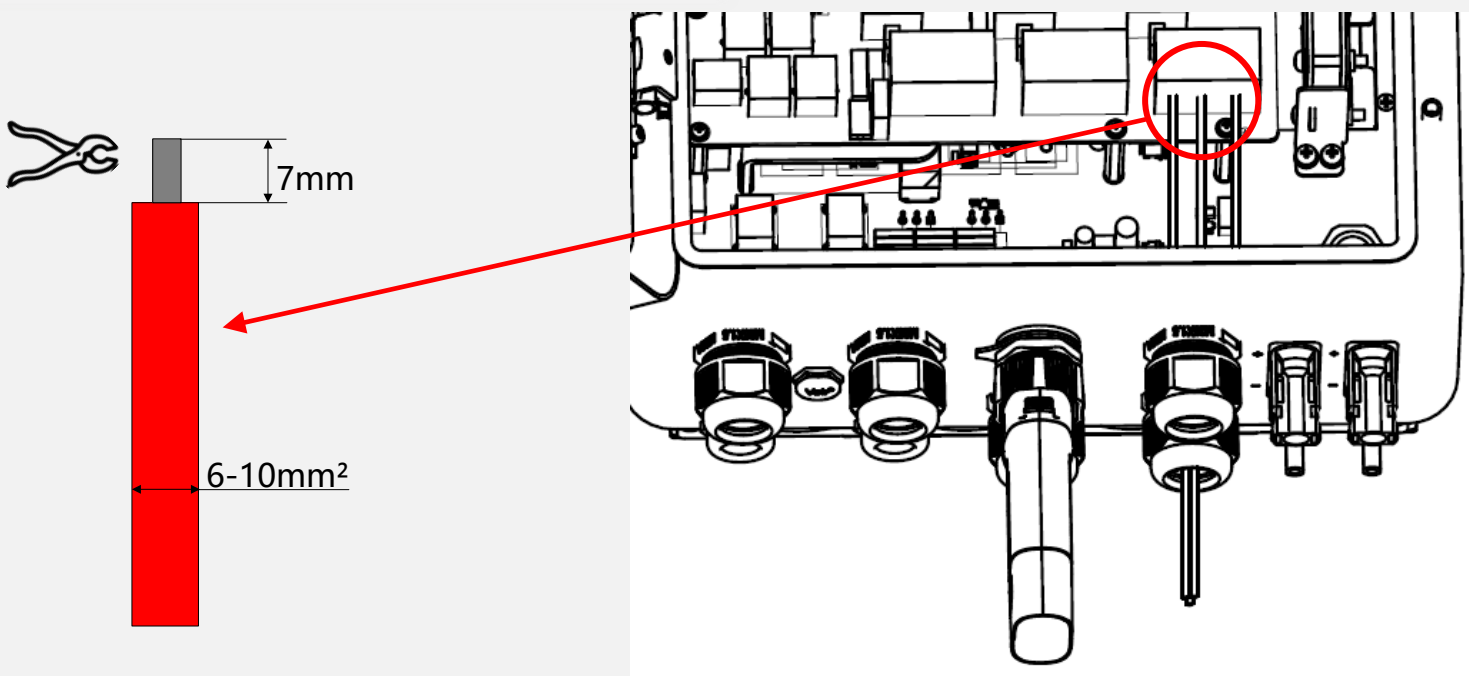


Inverter grounding

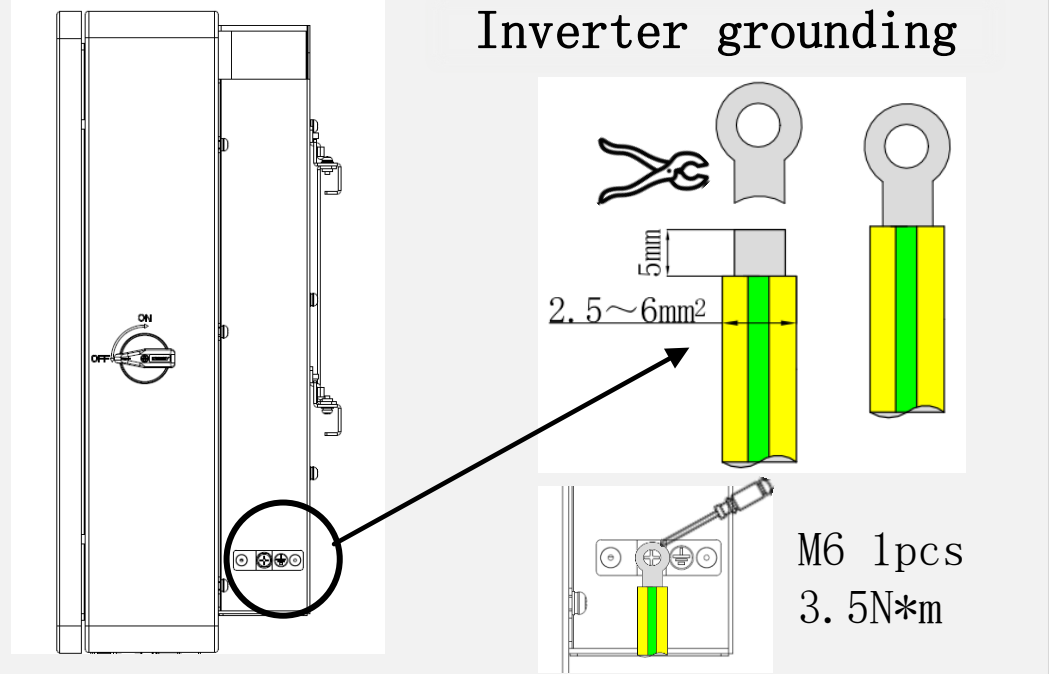

Connecting PV

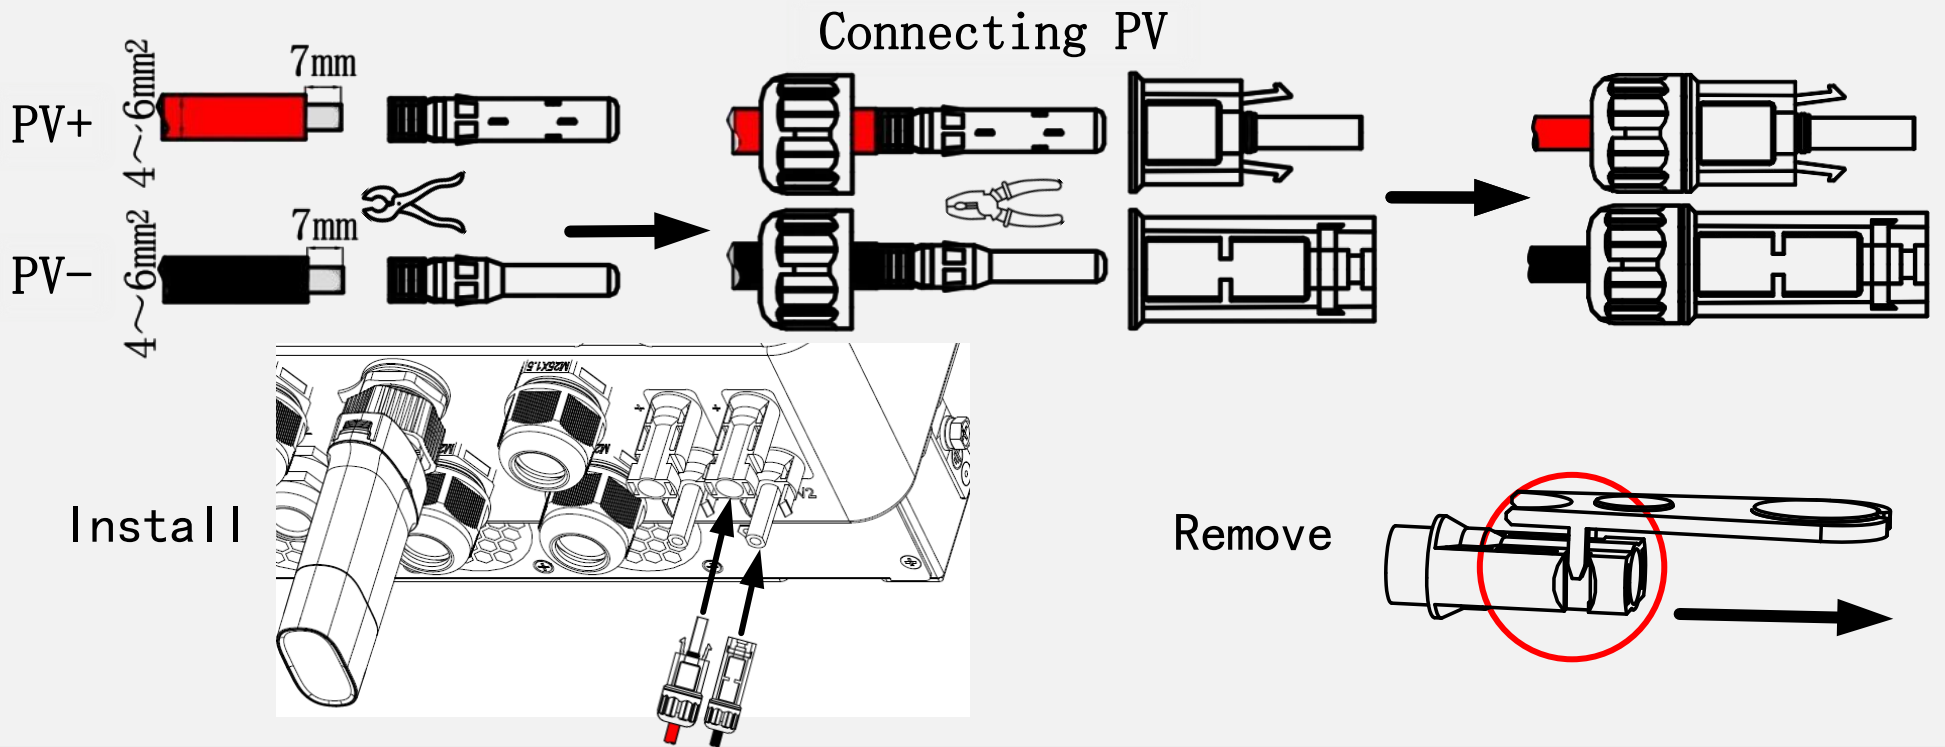

Connecting the WIFI module

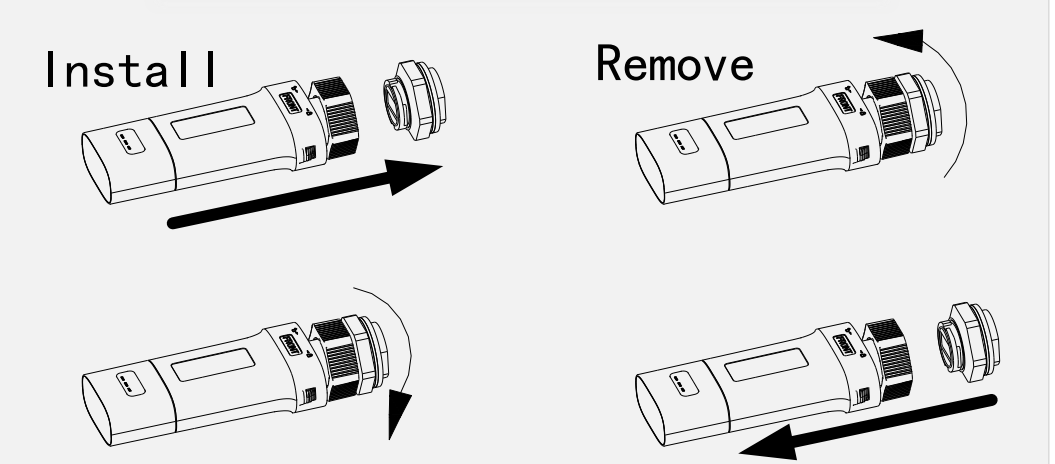

ESS Link Download

