


User Manual

Single-phase LV hybrid inverter

Isuna S3K-SL-S~S6K-SL-S

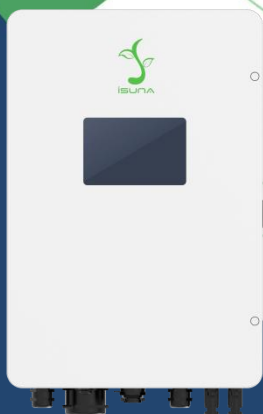

Shenzhen Sinexcel Isuna
Energy Technology Co.,LTD

v1.1

Catalogue

1.Overview	1
1.1 Scope of Application	1
1.2 Applicable Personnel	1
1.3 Symbol Definition	1
2. Safety Precautions	2
2.1 Operation Safety	2
2.2 PV String Safety	3
2.3 Battery Safety	3
2.4 Inverter Safety	4
2.5 Personnel Requirements	5
2.6 Description of Symbols	5
3.Equipment Inspection and Storage	6
3.1 Pre-signing Inspection	6
3.2 Packing List	6
3.3 Equipment Storage	6
4.Product Description	7
4.1 Product Overview	7
4.2 Application Scenario	7
4.3 Appearance Description	8
4.3.1 Appearance Description	8
4.3.2 Size Description	8
5 Installation	10
5.1 Installation Requirements	10
5.1.1 Installation Environment Requirements	10
5.1.2 Mounting Carrier Requirements	11
5.1.3 Mounting Angle Requirements	11

5.2 Mounting Tools	13
5.3 Inverter Transportation	15
5.4 Wall Mounted	15
6. Electrical Connection	17
6.1 Electrical System Connection Diagram	17
6.2 External Port Wiring Instructions	20
6.3 Connecting the Ground Cable (PE)	20
6.4 Connecting the PV Cable and the Battery Cable	21
6.5 Connecting the AC Grid-Connected Cable	24
6.6 Installation of Communication Dongle	25
6.7 Connecting the Communication Port	28
6.7.1 meter and dry contact connection	29
6.7.2 BMS Communication Connection	30
6.7.3 DRMS&NTC connection for lead acid battery	30
6.7.4 Paralleling	31
7. Inverter Operation	34
7.1 Pre-power-on Inspection	34
7.2 Initial Power-on	34
7.3 Working Mode	34
7.3.1 Self-use Mode (default mode)	34
7.3.2 Timed Charge Mode	36
7.3.3 Backup mode/disaster recovery mode	39
7.3.4 Priority mode for selling electricity	40
7.4 Operating mode	41
7.4.1 Operation mode description	41
7.4.2 Indicator touch screen Description	42
7.4.3 Inverter touch screen operation instructions	43

Isuna S3K-SL-S~S6K-SL-S

8.App introduce56

9.Troubleshooting and Maintenance57

 9.1Alarm and solution 57

 9.2Regular maintenance61

10.Technical Parameter 62

1. Overview

This document describes the product information, installation, electrical connection, configuration and commissioning, troubleshooting and maintenance, and technical specifications of the single-phase hybrid inverter. Before installing and using the product, read this manual carefully to familiarize yourself with the safety information and functions and features of the product. Manuals may be updated from time to time, please obtain the latest version from the official website for more product information.

1.1 Scope of Application

This manual is applicable to the following inverters:

Model	Rated output power	Rated output Voltage
Isuna S3K-SL-S	3000W	230V, L/N/PE
Isuna S4K-SL-S	4000W	
Isuna S5K-SL-S	5000W	
Isuna S6K-SL-S	6000W	

1.2 Applicable Personnel

This document is intended for only professional and technical personnel who are familiar with local regulations, standards, and electrical systems, and have professional training and knowledge about this product.

1.3 Symbol Definition

In order to ensure the personal and property safety of users when using single-phase hybrid inverters, as well as the efficient use of this product, the manual provides relevant safe operation information and uses corresponding symbols to highlight. To avoid personal injury and property damage, please fully understand and absolutely comply with these stressed information. The symbols used in this manual are listed below.



Indicates a highly hazardous situation which, if not avoided, will result in death or serious injury.



Warning

Indicates a hazard with a medium level of risk that could result in death or serious injury if not avoided.



Caution

Indicates a hazard with a low level of potential that, if not avoided, could result in moderate or minor injury.



Attention

Indicates a potentially hazardous situation that, if not avoided, may cause equipment failure or property damage.

2. Safety Precautions

The safety precautions contained in this document must be followed when operating the device.



Attention

- The inverter has been designed in strict accordance with safety regulations and has passed the tests. However, as an electrical device, you must comply with relevant safety instructions before performing any operation on the device. Improper operation may result in serious injury or property damage.

2.1 Operation Safety



Attention

- Read this manual carefully before installing the device to understand the products and precautions.
- All operations on the equipment must be carried out by professional electrical technicians who are familiar with the local standards and safety regulations.
- When operating inverters, use insulation tools and wear personal protective equipment. Wear ESD gloves, an ESD wrist strap, and an ESD suit when touching electronic components to prevent damage caused by static electricity.
- The manufacturer shall not be liable for inverter damage or personal injury caused by failure to install, use, or configure the equipment in accordance with the requirements of this manual.

2.2 PV String Safety



- Use the DC wiring terminal delivered with the chassis to connect the DC cables of the inverter. Use of other types of DC terminals may cause serious consequences. Therefore, the manufacturer is not responsible for the damage to the device.



- Ensure that the assembly frame is properly grounded to the support system.
- After connecting DC cables, ensure that the cables are securely connected.
- Use a multimeter to check whether the positive and negative DC wiring terminals of the battery are connected correctly and the voltage is within the allowable range.
- Do not connect the same PV series to multiple inverters; otherwise, the inverters will be damaged.

2.3 Battery Safety



- Read the battery safety contents in the user manual carefully before installing the device, and strictly follow the instructions in the user manual.
- The battery current may be affected by external environment, such as temperature and humidity, which may cause battery current limiting and affect battery on-load performance.
- If the battery does not start, contact the after-sales service center as soon as possible. Otherwise, the battery may be permanently damaged.
- Use a multimeter to check whether the positive and negative DC wiring terminals of the battery are connected properly and the voltage is within the allowable range.
- Do not connect the same battery string to multiple inverters. Otherwise, the inverters may be damaged.
- The inverter manufacturer will not assume any responsibility due to battery explosion, burning and other accidents and related personnel and property losses.

2.4 Inverter Safety



Warning

- Ensure that the voltage and frequency of the grid-connected access point comply with the inverter grid-connected specifications.
- A protection device, such as a circuit breaker or fuse, is recommended for the AC side of the inverter. Ensure that the protection device is greater than 1.25 times the maximum AC output current of the inverter.
- The GND cable for the inverters must be securely connected. When multiple inverters are combined, ensure that the protection ground points on all inverters' chassis shells are equipotential connected.
- If the battery is not configured in the photovoltaic system, it is not recommended to use the off-grid function, and the resulting system electricity risk will not be covered by the equipment manufacturer's warranty.

2.5 Personnel Requirements








Attention

- When the inverter is running, some components may be charged or hot. Improper use, incorrect installation, or operation may result in serious injury to person or property. Transportation, loading, unloading, installation, starting and maintenance operations must be performed by qualified electrical engineers.

2.6 Description of Symbols

There are some safety-related labels on the single -phase hybrid inverter. Please read and fully understand these labels before installing the product.

Symbol	Symbol name	Symbol meaning
	It indicates the danger of residual voltage in the inverter.	Please wait for 5 minutes until the capacitor is completely discharged after the DC side of the inverter has been disconnected with power for a period of time.
	It indicates the danger of high voltage.	High voltage exists during inverter operation. If you need to operate the inverter, please make sure the inverter is disconnected.
	It indicates to be careful of high temperature surface.	The temperature of inverter housing is high during operation, so do not touch it, otherwise it may cause burns.
	It indicates grounding terminal.	Connect the inverter to ground for grounding protection purpose.
	It indicates reading the manual.	Please read and understand this manual carefully before installing the inverter.

3. Equipment Inspection and Storage

3.1 Pre-signing Inspection

Before signing for the product, please check the following:

- Check the outer packing for holes, distortions, cracks, or other signs that may cause damage to the equipment in the packing case. If so, do not open the packing and contact your distributor.
- Check whether the inverter type is correct. If not, do not open the package and contact your dealer.
- Check whether the type and quantity of the delivered package are correct and whether the appearance is damaged. If damaged, please contact your dealer.

3.2 Packing List

After the inverter is unpacked, check whether the delivered package are complete. If any components are found missing or incomplete, contact the dealer in time.

3.3 Equipment Storage

If the inverter is not put into use immediately, store it according to the following requirements:

- Ensure that the outer packing case is not removed and the desiccant is not lost.
- Ensure that the storage environment is clean and within appropriate temperature and humidity ranges.
- Ensure that inverters are placed in the height and direction according to the labels on the packing cases.
- Ensure that there is no tilt and fall risk after inverters are stacked.
- After the inverter is stored for a long time, check and confirm the inverter before it can be used.

4.Product Description

4.1 Product Overview

single -phase hybrid inverter is a photovoltaic grid-connected inverter and battery energy storage as one, with a variety of built-in working modes to suit the diversified needs of users. In the period of rising energy costs such as oil and coal, the continuous decline of energy subsidies for photovoltaic grid-connected systems, mountain areas or base stations without grid, uninterrupted power supply and emergency power supply needs, single -phase hybrid inverters can provide a complete solution.

4.2 Application Scenario



Warning

- The photovoltaic system is not suitable for devices that rely on stable power supply, such as life-sustaining medical devices. Ensure that no personal injury is caused when the system is powered off.
- Do not use a load with a high starting current in the photovoltaic system. Otherwise, the off-grid output may fail due to excessive instantaneous power.
- When the inverter overload protection occurs for a single time, the inverter can automatically restart; If it happens several times, the inverter will stop, and after the fault is rectified, the inverter can be restarted immediately through the App.
- If the load capacity exceeds the rated power of the inverter during power failure, the off-grid function of the inverter automatically shuts down. To start, turn off the large load and ensure that the load power is smaller than the rated power of the inverter.
- When the inverter is in off-grid mode, it can be used normally for ordinary household load.
- Inductive load: 1.5P non-variable frequency air conditioners are supported. The standby mode may be unstable if two or more non-variable frequency air conditioners are connected.
- Capacitive load: total power $\leq 0.7 \times$ rated output power of inverter.

4.3 Appearance Description

4.3.1 Appearance Description

Please carefully inspect the packaging and accessories of the product before installation.

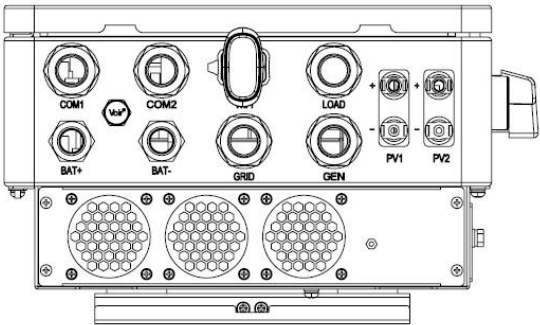


Figure 4.1 Appearance of the inverter

Table 4-1 Appearance of the inverter

COM1	Communication module interface	GRID	Grid-connected AC wiring port
COM2	Communication module interface	LOAD	Off-grid AC wiring port
BAT	Battery DC input port (BAT+/-)	GEN	Generator AC wiring port
WIFI	WIFI	PV1/2	PV DC input port (PV+/-)

4.3.2 Size Description

Isuna S3K-SL-S~S6K-SL-S

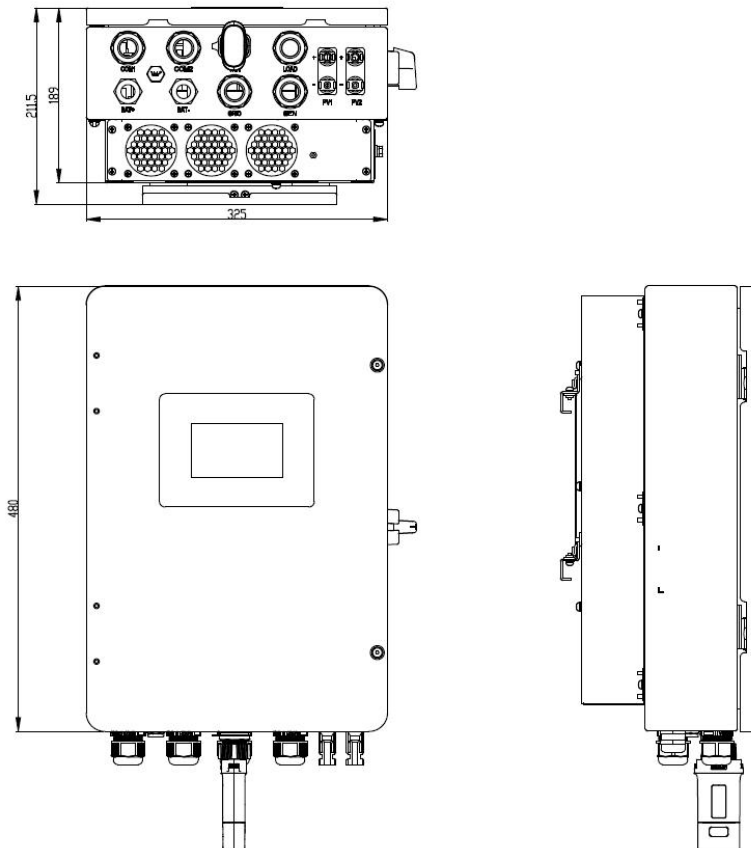


Figure 4.2 Overall size of inverter

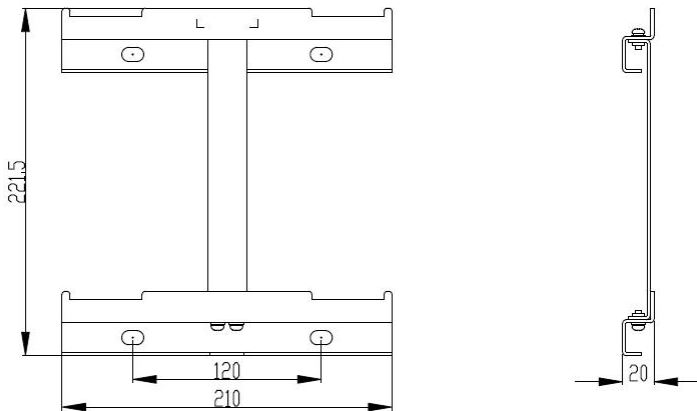


Figure 4.3 Dimensions of wall mount

5 Installation

5.1 Installation Requirements

5.1.1 Installation Environment Requirements

- 1) The equipment must not be installed in flammable, explosive, corrosive and other environments.
- 2) The installation position should be away from water pipes and cables in the wall to avoid danger during drilling.
- 3) The installation position should be out of the reach of children, and avoid installation in a position that is easy to touch. There may be high temperature on the surface of the equipment during operation to prevent burns.
- 4) The inverter should avoid the installation environment such as sun, rain, snow, etc. It is recommended to install it in a sheltered installation position. If necessary, an awning can be built.
- 5) The installation space must meet the requirements of ventilation, heat dissipation and operation space.
- 6) The protection level of the equipment complies with the requirements for indoor and outdoor

installation, and the installation environment temperature and humidity must be within the appropriate range.

7) Make sure that the inverter indicator light and all labels are easy to view and that the terminal is easy to operate.

8) The inverter installation altitude should lower than the maximum working altitude 4000m.

9) Stay away from strong magnetic field environment to avoid electromagnetic interference. If a radio station or a wireless communication device below 30MHz is located near the installation location, install the device according to the following requirements:

- Add a ferrite core with multi-turn winding at the inverter DC input line or AC output line, or add a low-pass EMI filter.
- The distance between the inverter and the wireless electromagnetic interference device exceeds 30m.

5.1.2 Mounting Carrier Requirements

1) The installation carrier must not be flammable material and must have fire resistance.

2) Please ensure that the installation carrier is solid and reliable, and can carry the weight of the inverter.


3) When the equipment is running, it will make noise. Do not install it on the carrier with poor sound insulation, so as to avoid the noise emitted by the equipment when it is working, which will cause trouble to residents in the living area.

5.1.3 Mounting Angle Requirements

1) Recommended inverter installation Angle: vertical or backward $\leq 15^\circ$.


 



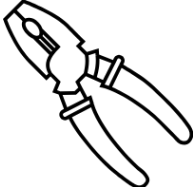
2) Do not invert, tilt forward, tilt back beyond the Angle, horizontal installation.

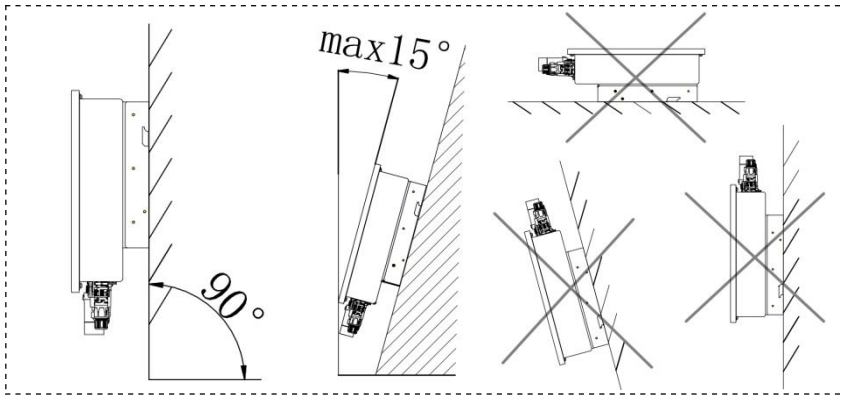3) At least 1.2m from the ground below the inverter, about at least 300mm.











5.2 Mounting Tools

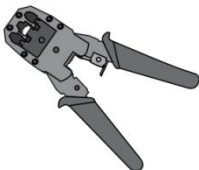Table 5-1 List of installation tools

Series No.	Tools	Description	Function
1		Percussion drill Recommended 10mm drill	Wall drilling
2		6mm cross-head screwdriver	Removing, installing screws and wiring
3		4mm cross-head screwdriver	Removing and installing load terminal screws
4		Removal tool	Removal of PV, BAT line end terminals
5		Wire strippers	Stripping wire
6		Crimping pliers	Crimping PV and BAT cables

 Isuna S3K-SL-S~S6K-SL-S

7		Crimping pliers	Pressure welding grid, load end cable
8		6mm hex wrench	Fasten the grid terminal to the cable
9		Multimeter	Check whether the cable wiring is correct, the positive and negative battery terminals are correct and voltage, and grounding is reliable
10		Marking pen	Drilling mark
11		Tape	Measurement distance
12		Protective gloves	Wear when setting up the inverter
13		Goggles	Wear when drilling holes
14		Dust mask	Wear when drilling holes

5.3 Inverter Transportation

Remove the inverter from the outer packaging and carry it horizontally to the designated mounting position. Open the outer packaging box and the two operators need carry the inverter out of the outer packaging box and carry it to the designated mounting position.



- When carrying out the transportation, turnover, and installation, you must comply with the laws, regulations and related standards of the country or region where you are located.
- The inverter is heavy. Please keep it balanced during handling to prevent the inverter from falling and injuring the operator.
- The power cable and signal cable ports at the bottom of the inverter cannot bear any weight. Do not touch wiring terminals directly. Place the inverter horizontally.
- When the inverter is placed on the ground, put foam or paper under it to avoid damage to the shell.

5.4 Wall Mounted



- When drilling holes, ensure that the holes are drilled away from water pipes and cables in the wall to avoid dangers.
- When drilling holes, wear goggles and a dust mask to prevent dust from inhaling into the respiratory tract or falling into the eyes.

Step 1: Please choose a wall with sufficient load-bearing capacity, according to the wall bracket on the level will be wall bracket level to the installation wall, with a marker pen on the wall to mark the fixed wall bracket to be drilled position, and then use the impact drill to drill holes in the wall, drilling to keep the impact drill perpendicular to the wall, do not shake, so as to avoid damage to the wall, if the holes drilling error is large need to be re-positioned;

Step 2: Insert the M8*80 expansion screws vertically into the holes, pay attention to the depth of the expansion bolts should not be too shallow;

Step 3: Place the wall bracket against the hole, and fix the wall bracket on the wall with

the nut;

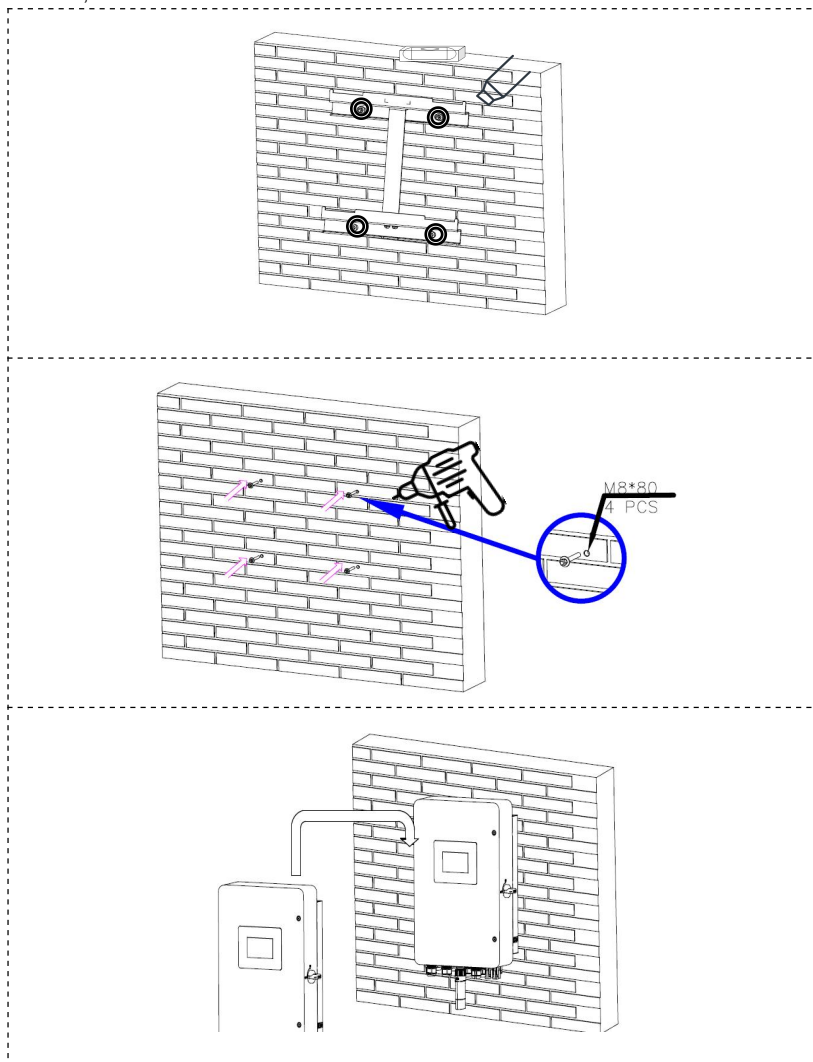


Figure 5.1 Illustrative diagram for installation of wall hangings

6. Electrical Connection

Before installation and maintenance, ensure that the AC/DC side is not powered on. The capacitors are still powered on for a period of time after the inverter is powered off. Therefore, wait at least five minutes to ensure that the capacitors are fully discharged. single -phase hybrid inverters are used in battery energy storage photovoltaic systems. Equipment can be damaged if not used as intended.

6.1 Electrical System Connection Diagram



Attention


- Connect the N and PE cables to the AC GRID and AC LOAD ports of the inverters in different regions according to local regulations. For details, see local regulations.
- If the AC LOAD AC port is powered on after the inverter is started, power off the inverter to maintain the backup load. Otherwise, electric shocks may occur.
- Inverter AC GRID and AC LOAD AC ports have built-in relays. When the inverter is in off-grid state, the built-in AC GRID relay is in disconnected state; When the inverter is in the AC GRID state, the built-in AC GRID relay is in the closed state.

single-phase hybrid inverter wiring system as following page: (structure schematic, non-electrical wiring standard).

Recommended circuit breaker specifications: Battery DC circuit breaker 150A; PV DC circuit breaker 30A; AC circuit breaker: 60A (of which the grid-side AC circuit breaker needs to be decided according to the actual load power used and local regulations).

Note: During final installation, circuit breakers for external connections to the inverter shall comply with IEC 60947-1 and IEC 60947-2 certification requirements.


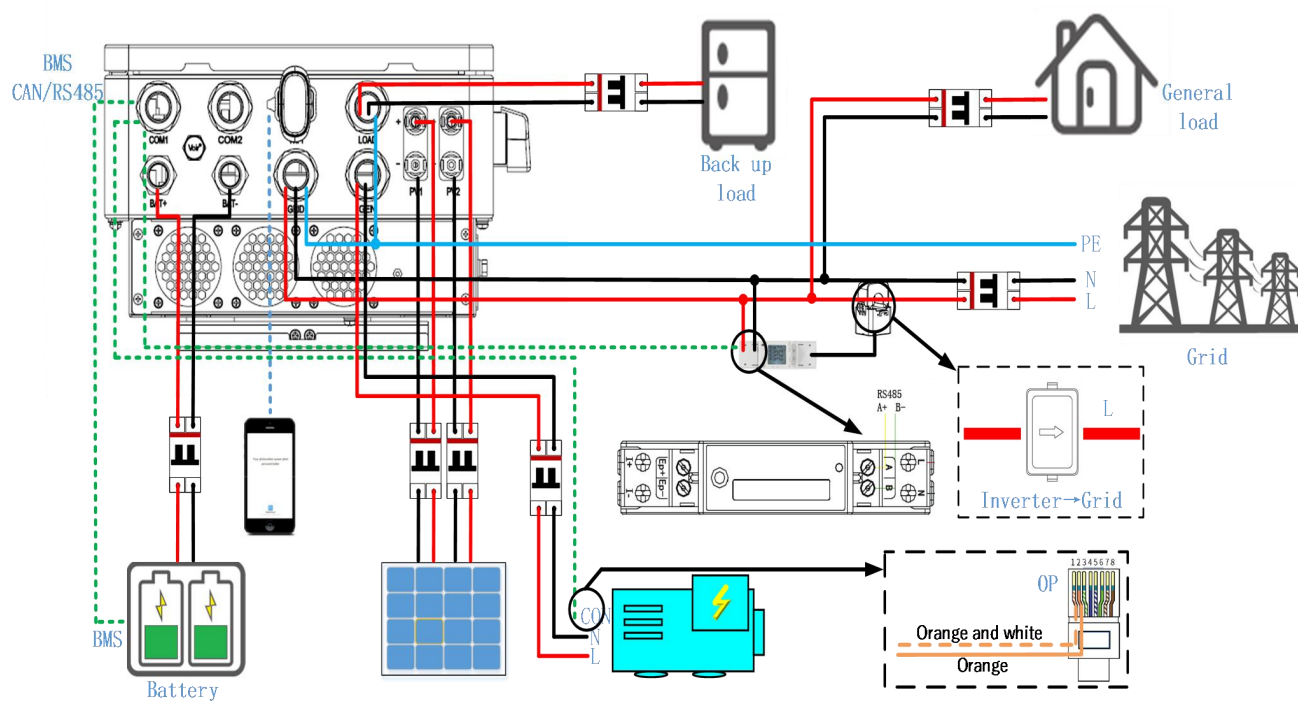



Isuna S3K-SL-S~S6K-SL-S



6.2 External Port Wiring Instructions

Select the cable size applicable to the parameters of the inverter according to its model.

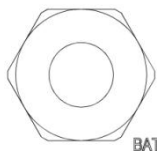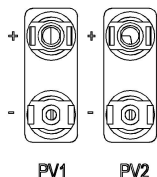Table 6-1 Cable Model and Specification Descriptions

Port	Definition	Cable type	Cable specification
	Battery	Outdoor Multi-Core Copper Cable	Wire cross sectional area: 25mm ² ~35mm ²
	+: Connect to PV positive pole	Outdoor Multi-Core Copper Cable	Wire cross sectional area: 4mm ² ~6mm ²
	-: Connect to PV negative pole		
	LOAD	Outdoor Multi-Core Copper Cable	Wire cross sectional area: 6mm ² ~10mm ²
	GRID	Outdoor Multi-Core Copper Cable	Wire cross sectional area: 6mm ² ~10mm ²
	GEN	Outdoor Multi-Core Copper Cable	Wire cross sectional area: 6mm ² ~10mm ²

6.3 Connecting the Ground Cable (PE)



Attention

- Since the inverter is a transformer-free type, it is required that the positive and negative electrodes of the photovoltaic array cannot be grounded, otherwise the inverter will fail. In the photovoltaic power generation system, all non-current-carrying metal components (such as brackets, distribution cabinet enclosures, inverter enclosures, etc.) should be connected to the ground.

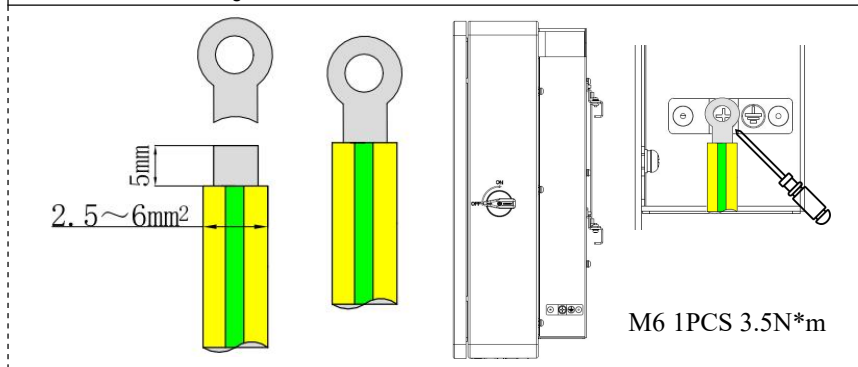


Figure 6.2 Schematic diagram of protection grounding

6.4 Connecting the PV Cable and the Battery Cable



PV series connection:

- Do not connect the same PV series to multiple inverters. Otherwise, the inverters may be damaged.
- Before connecting the PV series to the inverter, confirm the following information. Otherwise, the inverter may be permanently damaged or fire may occur, which may cause personal and property loss.
- Ensure that the maximum short circuit current and maximum input voltage of each PV are within the allowable range of the inverter.
- Ensure that the positive terminal of the PV string is connected to the PV+ of the inverter, and the negative terminal of the PV string is connected to the PV- of the inverter.

Battery cable connection:

- A battery short circuit may cause personal injury. However, a short circuit may release a

large amount of energy, which may cause fire.

- Before connecting the battery cable, ensure that the inverter and battery are powered off, and the front and rear switches of the device are off.
- Do not connect or disconnect battery cables when the inverter is running. Improper operations may result in electric shock.
- Do not connect the same battery string to multiple inverters. Otherwise, the inverters may be damaged.
- Do not connect loads between the inverter and the battery.
- When connecting battery cables, use insulation tools to prevent accidental electric shock or battery short circuit.
- Ensure that the open circuit battery voltage is within the allowable range of the inverter.



Warning

PV series connection:


- The PV string output does not support grounding. Before connecting the PV string to the inverter, ensure that the minimum insulation resistance to the ground of the PV string meets the minimum insulation impedance requirement.

Battery cable connection:

- When connecting cables, the battery cable matches BAT+ and BAT- on the battery terminal.
- Ensure that the cable core is fully connected into the wiring hole of the terminal.
- Ensure that the cables are securely connected. Otherwise, the terminal may overheat and damage the device.


Note: Before crimping the PV and BAT cables, check and make sure that the PV knob switch is set to the 'OFF' position and that the battery is disconnected.

PV Connection:

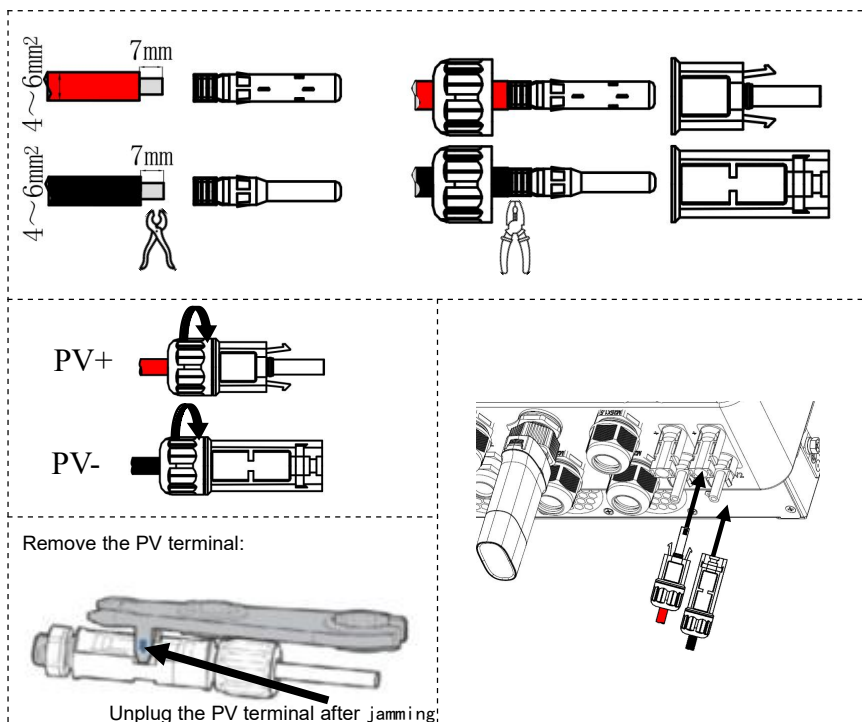

The PV modules used to connect to this inverter shall comply with the requirements of the IEC 61730 certified Class A standard, and the maximum permissible current through the external circuit breaker for each PV string and battery input over shall be greater than or equal to 30A.

Battery connection:

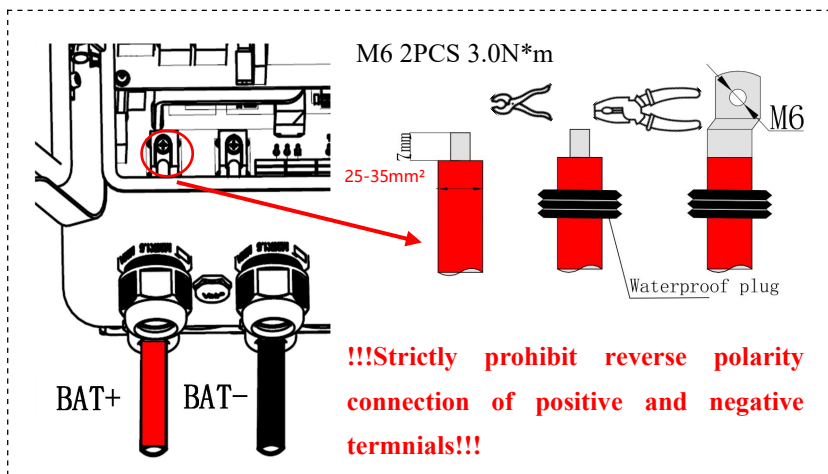


Note: Before crimping the PV and BAT cables, please check and make sure that the PV knob switch is set to the 'OFF' position and that the battery is disconnected!

6.5 Connecting the AC Grid-Connected Cable



- Ensure that the AC cable matches the L, N, and ground ports of the AC terminal properly. Incorrect connection may cause device damage.
- Ensure that the cable core is fully connected into the wiring hole of the terminal.
- Ensure that the insulation board at the AC terminal is tightly fastened.

Ensure that the cables are securely connected. Otherwise, the terminal may overheat and damage the device.

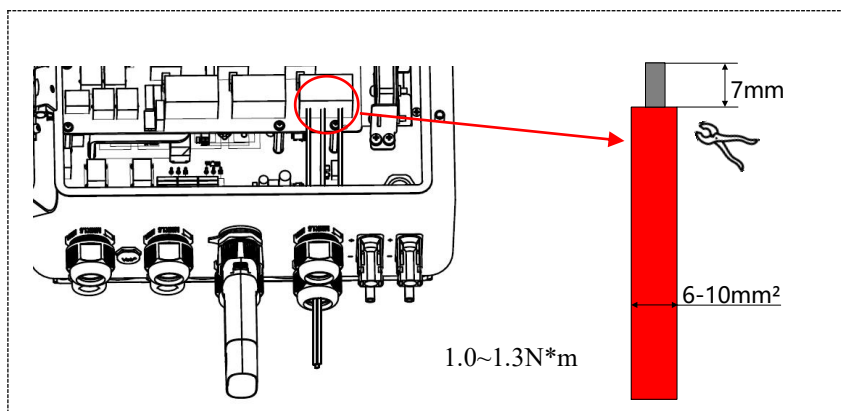

The maximum current allowed through the circuit breaker for off-grid load to the external connection should be greater than or equal to 30A.

6.6 Installation of Communication Dongle

The communication collector is an external component that you need to select by yourself.

The collector is connected. The default WIFI/ Bluetooth module is used for remote monitoring and control of the inverter.

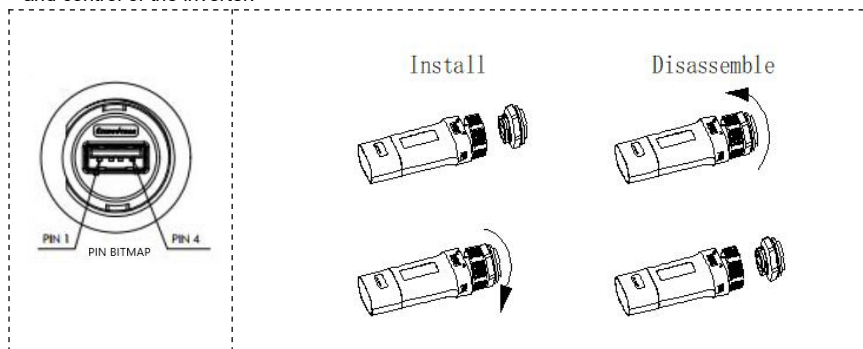


Figure 6.2 Communication interface and installation and disassembly diagram

Table 6-2 Indicators on the AGN8 WIFI Dongle

LED	state	Specific meanings
RUN&COM&NET	Alternating flashing (cycle)	Self test mode

Isuna S3K-SL-S~S6K-SL-S

	1500ms, each light flashes for 500ms in sequence)	
	Flashing together (cycle 1 second, off 900ms, on 100ms)	Dongle is currently upgrading (including Bluetooth App upgrade)
	Illuminate together for 5 seconds	Dongle upgrade failed
RUN	Slow flashing (on for 1 second and off for 1 second)	Dongle is running normally
	Light off	Dongle running abnormally
	Twice flashing (on (off) 100ms, off (on) 100ms, twice)	Dongle sends Bluetooth data to the app
COM	Flash (on for 200ms, off for 200ms)	Dongle time not synchronized (scanning will not start)
	Light off	Abnormal southbound communication
	Flashing once (on (off) 100ms, off (on) 100ms, once)	Normal southbound communication
NET	Flash	Connecting to WiFi
	Light off	Connecting to MQTT
	Slow flashing	Connecting to platform
	Always on	Successfully connected to the platform
	Twice flashing	Dongle sends platform data

Table 6-3 Meaning of AGN9 4G Dongle indicator light(optional)

LED	state	Specific meanings
RUN&COM&NET	/	/
RUN	Always on	The process from power on to initialization
	Flash (with an interval of 100ms)	Gateway initialization

Isuna S3K-SL-S~S6K-SL-S

		completed, flashing for 5 seconds
	Twice flashing (on (off) 100ms, off (on) 100ms, twice)	Slow flashing (with an interval of 1 second)
COM	/	/
NET	Always on	Looking for the internet or on a call
	Flash (interval 200ms)	Data connection established or network registered
	Slow flashing (with an interval of 800ms)	2G/3G network registered
	Light off	Shutdown or module sleep

6.7 Connecting the Communication Port

Multifunctional communication port, including meter communication, BMS communication, CT, parallel communication and external dry contact signal.

Step 1: Thread the cable through the waterproof housing of the signal interface and its respective waterproof plug, and crimp the RJ45 terminals in the order of the pins.

Step 2: Insert the cable into the communication port on the device side.

Step 3: Tighten the waterproof nut.


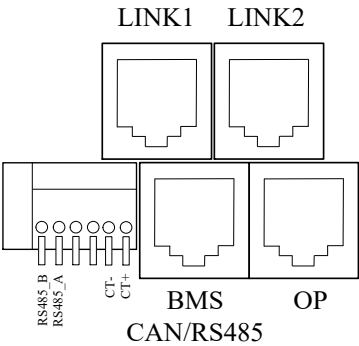


Figure 6.3 Interface diagram

Figure 6.4 RJ45Sequence of RJ45 crystal terminals

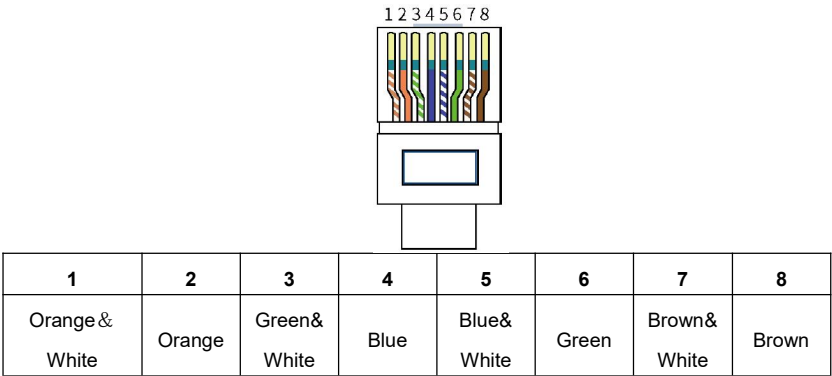

6.7.1 meter and dry contact connection

Acrel ADL200N-CT

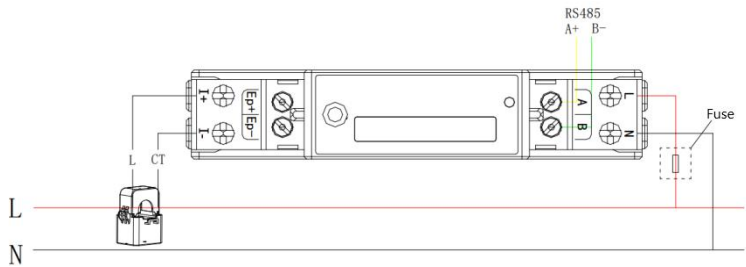


Figure 6.5 Smart Meter Terminal Wiring Description Diagram

Direction of the current wire is shown in Figure 6.6, with the arrow pointing towards the grid.

P1 (House) → P2 (Grid)

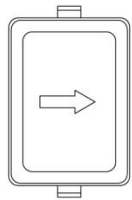


Figure 6.6 CT direction

Table 6-4 Description of dry contact ports

PIN	Definition	Fuction	Note
1	OP-	Dry contact output	Starting control port of the oil engine and heat pump
2	OP+		
3	OP1 -	Dry contact output	
4	OP1 +		
5/6/7/8	/	/	

6.7.2 BMS Communication Connection

Table 6-5 Description of BMS ports


PIN	PIN	Definition	Fuction
1	GND_SELV	Grounding	Communication with Li-ion battery BMS, CAN and RS485 communication for Li-ion battery can be adapted.
2	GND_SELV	Grounding	
3	TEMP_BAT	NC	
4	CAN_A_H	CANH data	
5	CAN_A_L	CANL data	
6	/	NC	
7	RS485_A_BMS	RS485A	
8	RS485_B_BMS	RS485B	

Note: Communication with lithium batteries requires attention to the battery's communication port sequence and pin definition.

6.7.3 DRMS&NTC connection for lead acid battery

① NTC connection for lead acid battery:

Prepare a standard network cable, cut the cable, the break in the green white and orange white wire stripping 5mm, and NTC pins welded together, as follows, to confirm that the weld is firm after using insulating tape to the two welded places were wrapped around the bandage, pay attention to avoid contact with exposed metal, to prevent short-circuiting affect the normal use. When using the lead battery, insert the completed NTC crystal head into the BMS interface, and stick the NTC outside the lead battery.

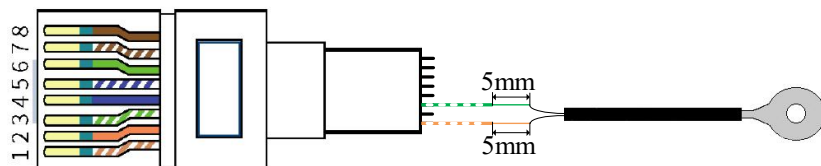


② Do not use NTC connection

If the temperature sampling function is not needed when using the lead battery, users need to access a 100KΩ resistor according to the following method to ensure that the inverter

can work properly:

Prepare a standard network cable and a 100K Ω resistor, cut the network cable, the break in the green and orange wire stripping 5mm, and 100K Ω resistor pins welded together, as shown below, to confirm that the weld is solid, use insulating tape to the two welds were wrapped around the wrap, pay attention to avoid contact with exposed metal, to prevent short-circuiting, which will affect the normal use. When using the lead battery, insert the completed 100K Ω resistor crystal head into the BMS interface.

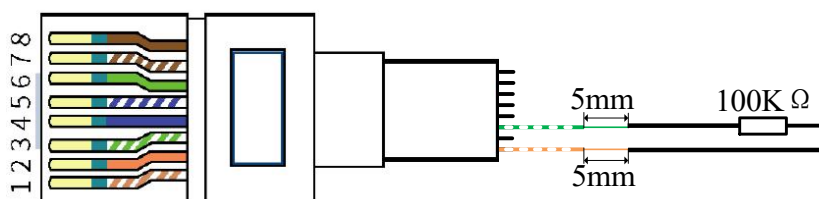

6.7.4 Paralleling

If multiple inverters are used, connect the terminal of the network cable to Pa1 of the first inverter, connect the other end to Pa2 of the second inverter, and so on. Table 6-7 describes the signal of the network cable , Figure 6.7 shows the sequence of the network cable connection.

Table 6-7 Description of parallel ports

PIN	LINK1	LINK2	Note
1	CON2_AO	CON1_AO	Parallel signal
2	CON2_BO	CON1_BO	
3	CON2_AI	CON1_AI	
4	CON2_BI	CON1_BI	
5-6	/	/	
7	CON_Synch	CON_Synch	
8	CON_SyncL	CON_SyncL	

LINK1 port wiring:

LINK2 port wiring:

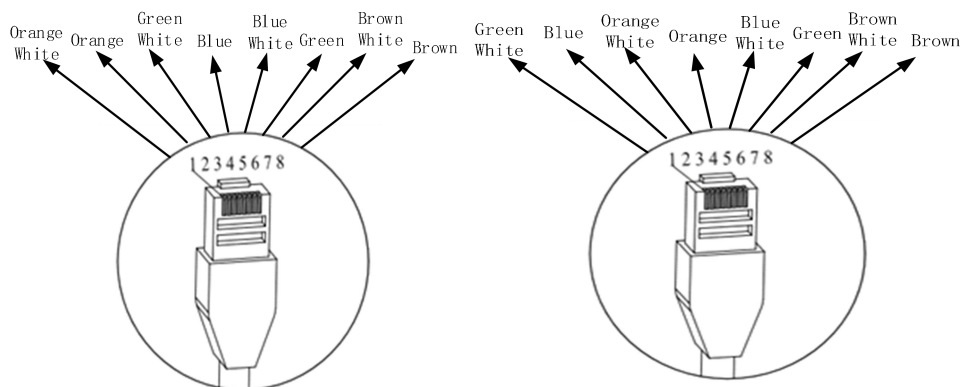


Figure 6.7 Parallel communication wiring diagram

Application note:


- Supports a maximum of 6 three-phase off-grid inverters in parallel;
- Ensure that the inverters are connected to parallel lines;
- Ensure that the load power is less than the maximum parallel power.
- The length of the cable connecting the load end of the inverter to the BACK-UP end of each device must be consistent to ensure that the loop impedance is consistent and the load current is approximately equal to the current distributed to each inverter.

The selection of parallel electric meter is shown in the table below, and the standard connection is shown in the figure below. For detailed operation, see the operation manual of the parallel system.

P	Meter type
$P \leq 80\text{Kw}$	ADL400N-CT/D16--120A
$80\text{Kw} \leq P \leq 150\text{Kw}$	ADL400N-CT/D24--200A
$150\text{Kw} \leq P \leq 240\text{Kw}$	ADL400N-CT/D36--300A
$240\text{Kw} < P$	ADL400+Supporting transformer (selected according to actual power)
Note: 1.parallel inverter (host & slave) model must be consistent	
2. P = inverter power + total load power	

Isuna S3K-SL-S~S6K-SL-S

Parallel standard wiring as shown below (structure schematic, non-electrical wiring standard, need to connect the circuit breaker correctly according to the electrical wiring diagram)

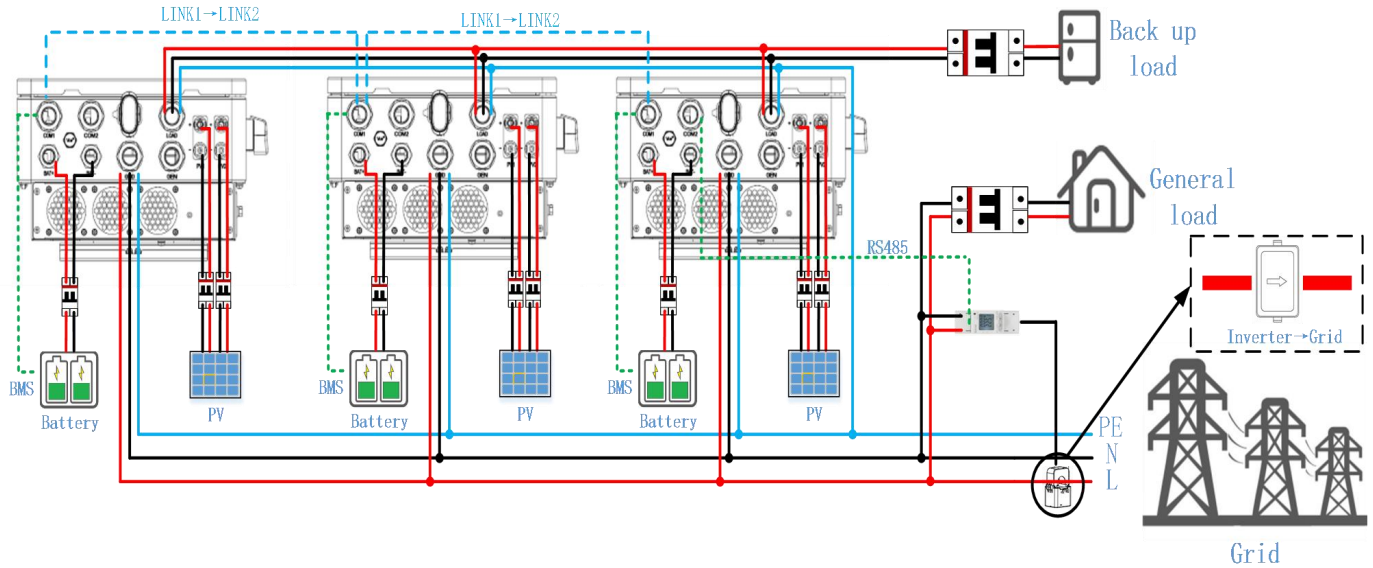

7. Inverter Operation

7.1 Pre-power-on Inspection

Serial	Check the entry
1	The inverter is firmly fixed to the mounting bracket on the wall.
2	Cables are bundled according to cable routing requirements, properly distributed, and without damage.
3	PV+/PV-, BAT+/BAT- cables are firmly connected, the polarity is correct, and the voltage is within the accessible range.
4	The DC switch is properly connected between the battery and the inverter, and the DC switch is off.
5	The AC circuit breaker is correctly connected between the inverter port and the power grid, and the circuit breaker is disconnected.
6	The AC circuit breaker is correctly connected between the inverter load port and the power grid, and the circuit breaker is disconnected.
7	For lithium batteries, ensure that the communication cables are properly connected.

7.2 Initial Power-on

Follow these steps to turn on the inverter

- 1) Ensure that the inverter is not working;
- 2) Close the AC circuit breaker between the inverter On Grid port and the Grid;
- 3) Turn on the PV DC switch on the inverter (when connected to PV);
- 4) Turn on the battery and close the DC switch between the battery and the inverter;
- 5) The inverter starts to run after the self-test is successful;
- 6) Close the AC circuit breaker between the inverter Back up port and the load.

7.3 Working Mode


7.3.1 Self-use Mode (default mode)


Function:

Give priority to the use of photovoltaic and battery energy, as far as possible not to use the energy of the grid.

Specific working mode:

- When the PV is sufficient, the PV priority for supplies power to the load, and excess power charges the battery.
- When the PV is insufficient, the PV and battery supply power to the load.
- When the PV and battery are insufficient, the PV, battery, and power grid work together to supply power to the load.
- When the PV is not working and the battery is sufficient, the battery supplies power to the load.
- When the PV is not working and the battery is insufficient, the battery and the grid work together to supply power to the load.
- When the PV and battery are not working, the power grid supplies power to the load, forming a bypass output.
- When the power grid is unable to supply power, the photovoltaic and battery jointly power the load.

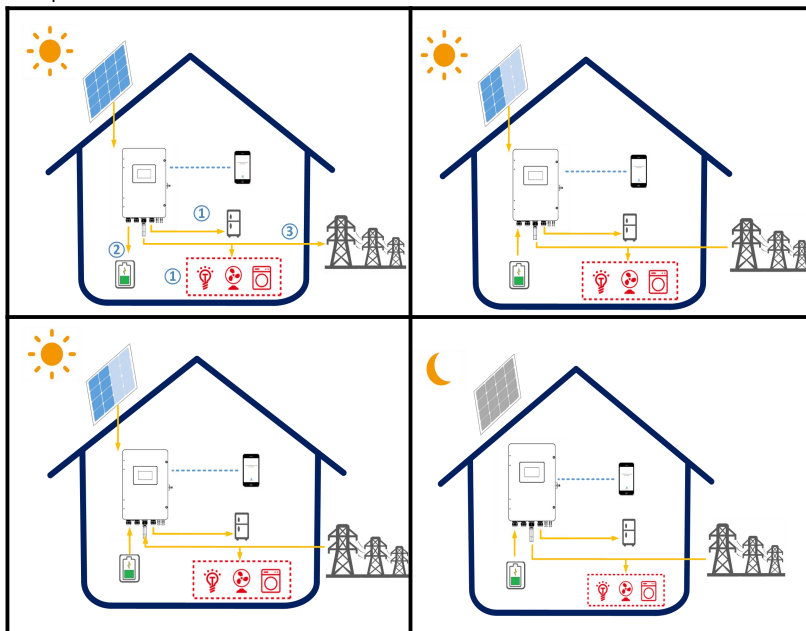

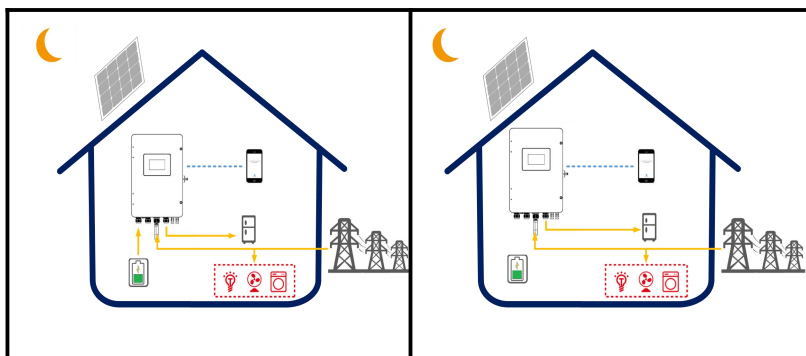

7.3.2 Timed Charge Mode

Function:

Set the charging period according to the user's own requirements. For example, when the electricity price is high during the day, the battery and photovoltaic power are used to power the load, and when the electricity price is low at night, the battery is charged with the electricity of the grid, so as to achieve the role of peak cutting and valley filling. Non-charge and non-discharge inverters operate in self-actuating mode.

Specific working mode:

Charging period:

- When there is enough PV, the PV charges the battery, and the remaining power supplies the load.
- When PV is insufficient, the PV and the grid work together to charge the battery and power the load.
- When PV is not working, the grid charges the battery and powers the load.


Discharging period:

- When PV is enough, PV supplies power to load.
- When PV is insufficient, PV and battery supplies power to load together.
- When PV is not working, and the battery is sufficient, the battery supplies power to the load.
- When PV is not working, and the battery is insufficient, battery and grid supplies power to the load.


- When PV and battery is not working, the grid supplies power to the load.

Note: The charging power is defined as the power of the inverter to charge the battery, and the discharge power is defined as the power of the inverter output.

Charging period:

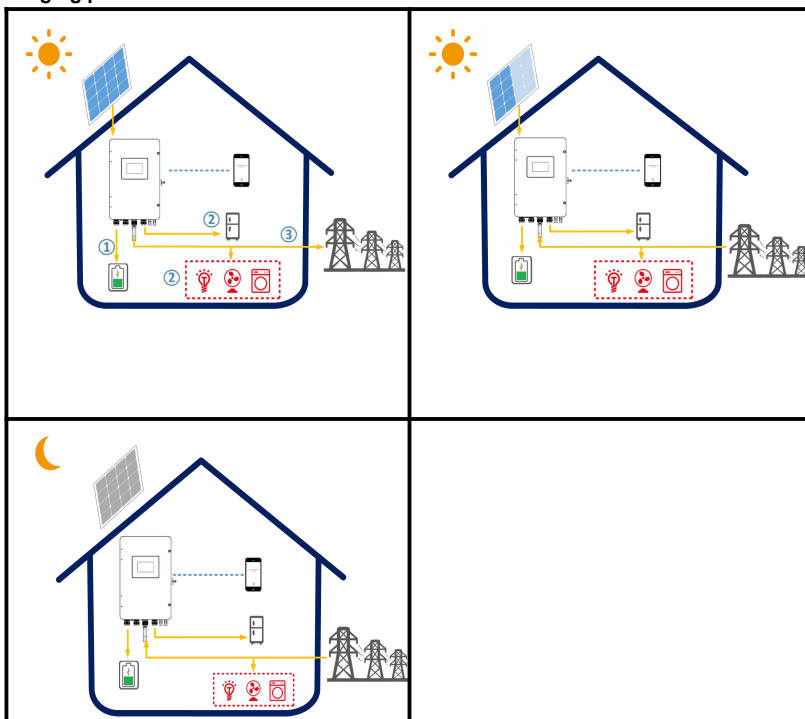

Discharging period:

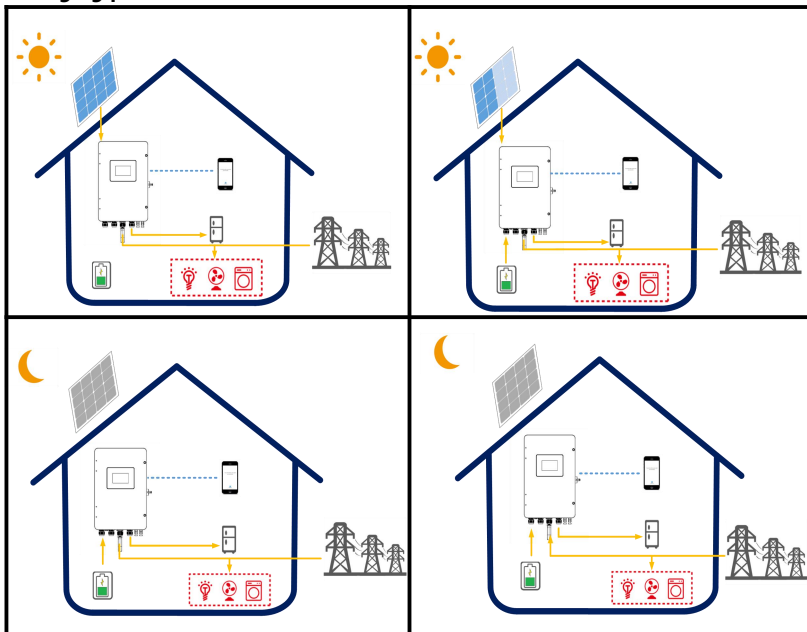


7.3.3 Backup mode/disaster recovery mode


Function:

Always keep the battery fully charged to cope with sudden power outages or other emergency situations, ensuring that users can use the battery's power reserve to supply power to the load in case of emergencies.

Specific working mode:

- When the PV is sufficient, the PV first charges the battery and then supplies power to the load, and the remaining power can be fed back to the grid.
- When PV is insufficient, PV and the power grid give priority to charging the battery, while the power grid supplies power to the load.
- When the PV is not working, the power grid charges the battery and supplies power to the load.
- When the power grid is unable to supply power, PV and batteries jointly supply power to the load.

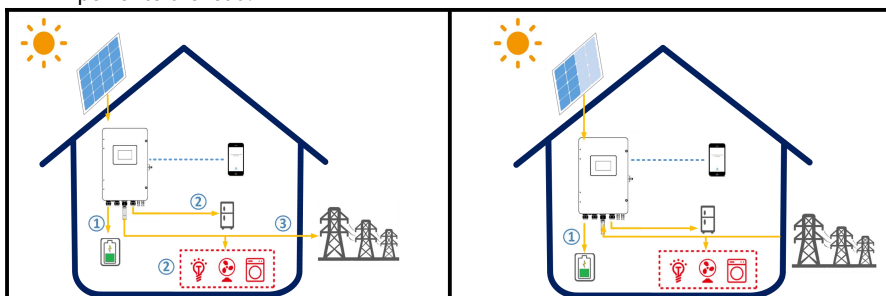

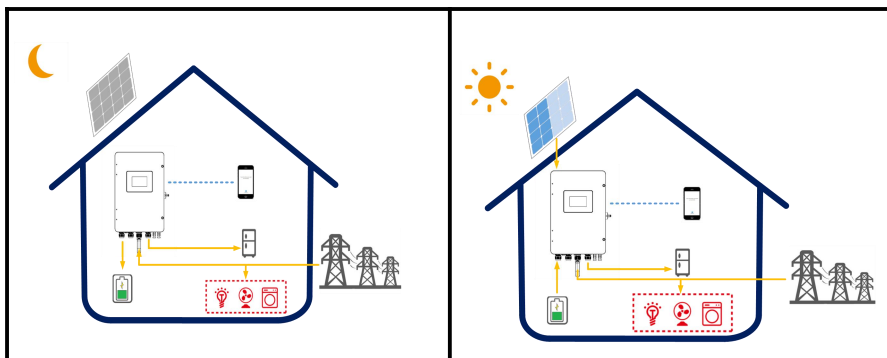


7.3.4 Priority mode for selling electricity

Function:

After meeting the demand for electricity, excess PV power generation is prioritized for sale to the grid.

Specific working mode:

- When the PV is sufficient, it prioritizes supplying power to the load before feeding the grid, and the remaining power can be used to charge the battery.
- When the PV is insufficient and the battery is insufficient, the PV and the grid supply power to the load together.
- The rest of the situation is the same as the spontaneous self use mode.

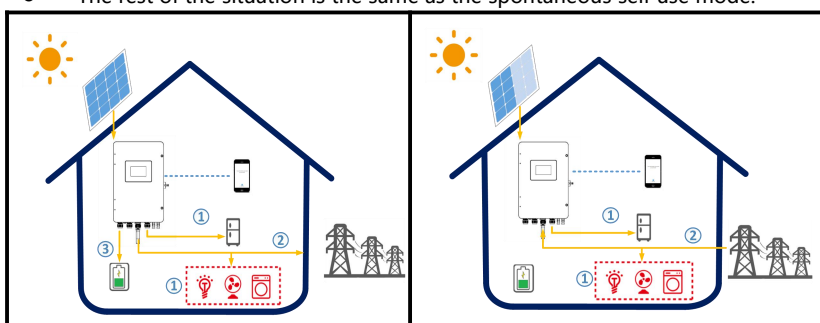

7.4 Operating mode

7.4.1 Operation mode description

Table 7-1 Explanation of Inverter Operation Modes


NO.	Operating mode	Description
1	Waiting	<ul style="list-style-type: none"> ➤ Waiting phase after the machine is powered on. ➤ When the conditions are met, enter the self check state. ➤ If there is a malfunction, the inverter enters a fault state.
2	Self Test	<ul style="list-style-type: none"> ➤ Before starting the inverter, perform continuous self checks, initialization, etc. ➤ If the conditions are met, the inverter enters the grid connected state and starts grid connected operation. ➤ If the power grid is not detected, it will enter an off grid state and the inverter will operate off grid. ➤ If the self-test fails, it will enter a fault state.
3	AC GRID	<ul style="list-style-type: none"> ➤ The inverter is running normally on the grid.If it is detected that the power grid does not exist or the conditions do not meet the grid connection requirements, it will enter the off grid working state. ➤ If a fault is detected, it will enter a fault state. ➤ If it is detected that the grid conditions do not meet the grid connection requirements and the off grid output function is not enabled, it will enter a waiting state. ➤ If the grid conditions meet the grid connection requirements and the grid connection function is enabled after switching off the grid, the system will enter the grid connection state.

4	Off-grid	<ul style="list-style-type: none"> ➤ When the power grid is cut off or the grid conditions do not meet the grid connection requirements, the inverter switches to an off grid state and continues to supply power to the load. ➤ If it is detected that the grid conditions meet the grid connection requirements, it will enter the grid connection state. ➤ When the working mode is set to off grid mode before operation, the inverter works off grid. ➤ If a fault is detected, it will enter a fault state.
5	Fault	<ul style="list-style-type: none"> ➤ If a fault is detected, the inverter enters a fault state and waits for the fault to be cleared to restore its previous operating state.

7.4.2 Indicator touch screen Description

This screen is a capacitive touch screen, which controls the display content and data transmission by establishing serial communication with the inverter. Its functions include:


- Monitor the system data, alarm information, software version, etc. of the inverter
- Set the parameters of the inverter
- Maintain the inverter

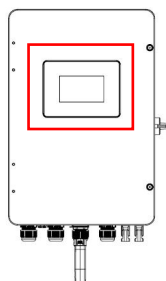

7.4.3 Inverter touch screen operation instructions


7.4.3.1 Screen home page

After the inverter is powered on, the screen enters the initialization interface and then switches to the main interface after 15 seconds.

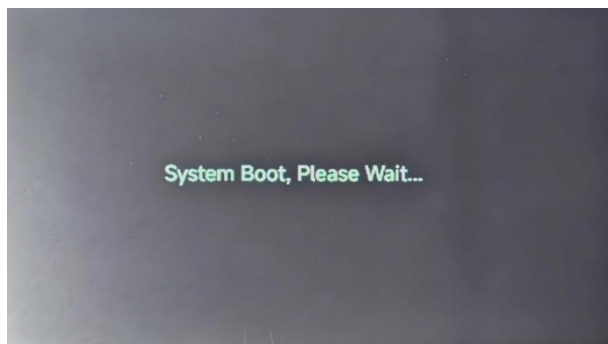


The main interface allows you to directly view the operating power and flow of the main units: PV, Grid, Bat, and Load.

Note: The generator unit can only display when the generator function is activated.

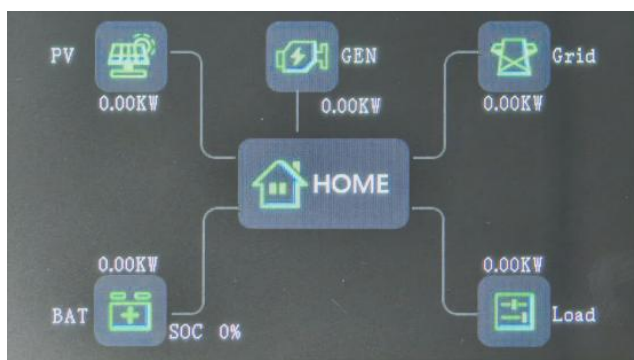


The components of the HOME page are: measurement data, parameter settings, notification information, version information, historical events, return to the main interface (upper left), and return to the parent level (upper right).

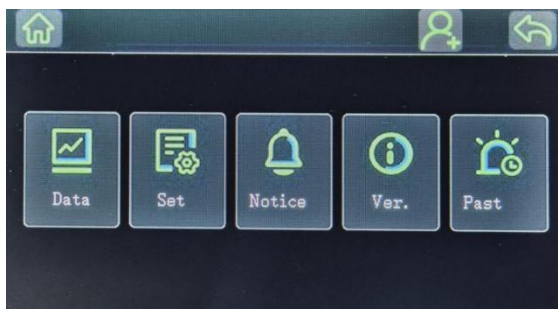


7.4.3.2 Data viewing

Data viewing includes measurement data for each unit, current alarm information of the inverter, inverter version information, and historical events of the inverter.


The data of the four units -PV, Grid, BAT and Load - can be directly accessed by clicking on the unit charts on the main interface for viewing.

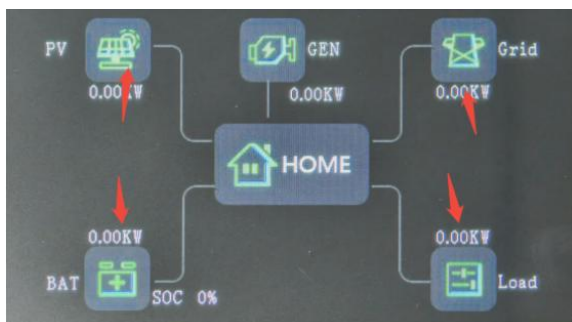

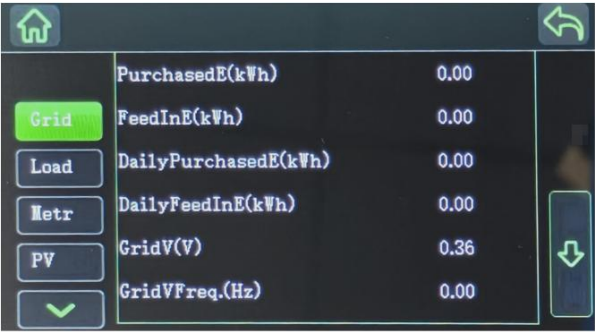



	PurchasedE(kWh)	0.00
Grid	FeedInE(kWh)	0.00
Load	DailyPurchasedE(kWh)	0.00
Metr	DailyFeedInE(kWh)	0.00
PV	GridV(V)	0.36
✓	GridVFreq(Hz)	0.00

Other units: Electricity meter, Inverter, Generator. Click on the data. Go to "HOME" > Click on "Measurement Data" to enter and view.

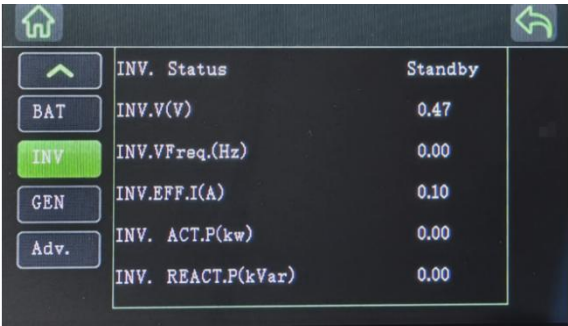


^	INV. Status	Standby
BAT	INV.V(V)	0.47
INV	INV.VFreq(Hz)	0.00
GEN	INV.EFF.I(A)	0.10
Adv.	INV. ACT.P(kw)	0.00
	INV. REACT.P(kVar)	0.00


For more advanced measurement data, please contact the manufacturer to obtain the password for viewing.

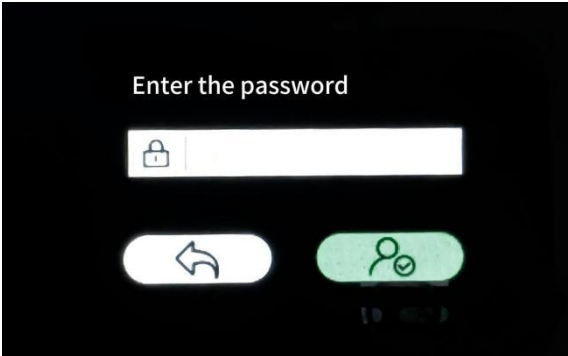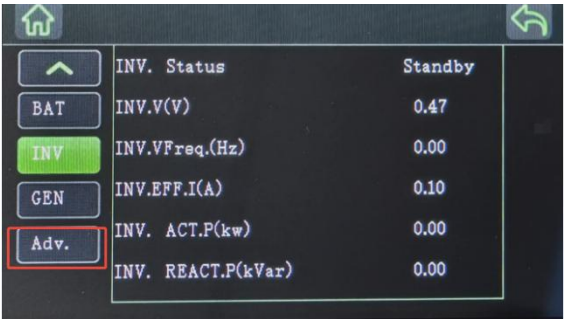

Click HOME > Click Notice to enter and view the current alarm information of the inverter.

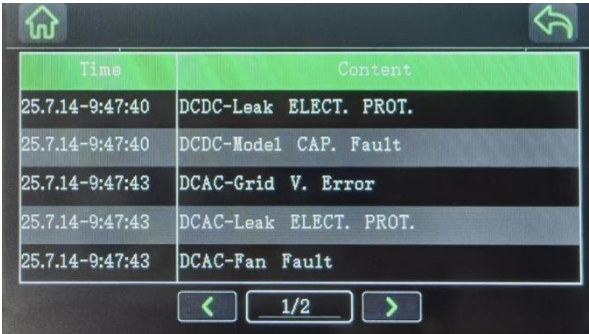


Click HOME > Click Ver to enter and view the inverter version information.

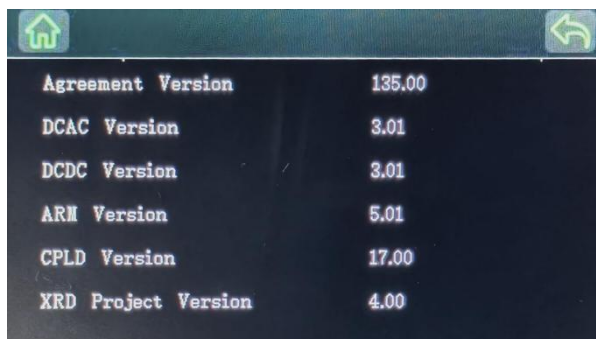

Agreement Version	135.00
DCAC Version	3.01
DCDC Version	3.01
ARM Version	5.01
CPLD Version	17.00
XRD Project Version	4.00


Click HOME > Click Past to view the historical alarm information of the inverter.

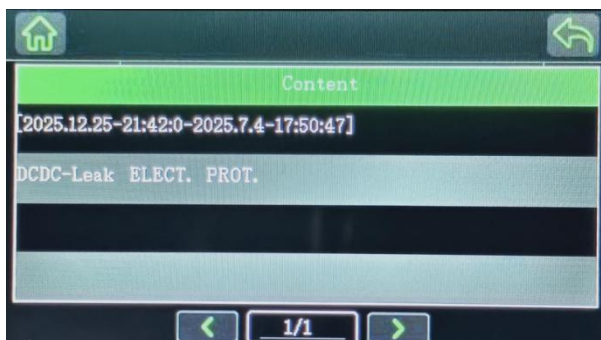


Content
[2025.12.25-21:42:0-2025.7.4-17:50:47]
DCDC-Leak ELECT. PROT.

7.4.3.3 Inverter parameter settings

Click on "HOME", then click on "Set" to enter the settings page. The main sections include: Host Settings, Battery Settings, and Advanced Settings.

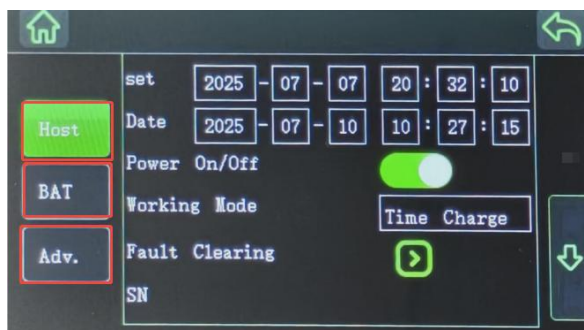


1. The host settings include: power-on/off instructions, date setting, working mode setting, and fault clearing.

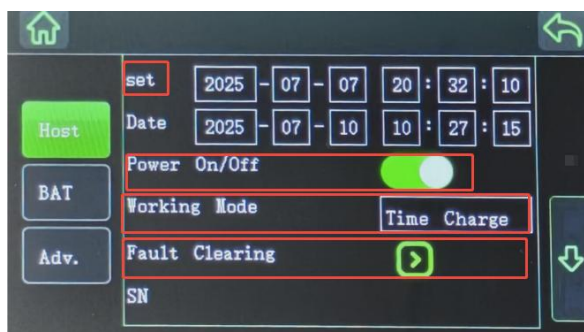


Date setting


Click on each of the time setting boxes in the "set" row, and set the parameters of year, month, day, hour, minute and second respectively.

After inputting, click "ok" to confirm the settings.

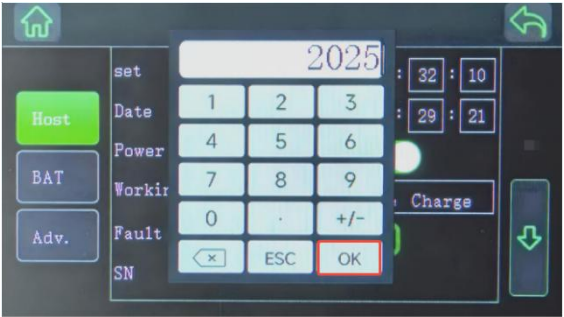

The work mode settings include: self-generation and self-consumption, timed charging and discharging, backup, priority charging of photovoltaic power, priority selling of electricity, and voltage regulation.

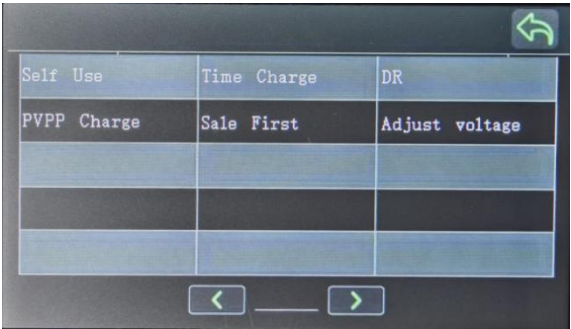

Note: If you set the timed charging and discharging mode, please click  to the next page, set the effective time periods for charging and discharging as needed (at least set one charging and discharging period, and ensure that the charging and discharging periods do not overlap or intersect.)

Isuna S3K-SL-S~S6K-SL-S

Home

Host

BAT

Adv.

WorkDay(1~7)

☒

☐

☐

☒

☐

☐

☒

Start

2025-07-01

End

2025-07-30

Other Period Mode

Spontaneous

Back

Up

Down

Home

Host

BAT

Adv.

Charge P1 Start

00 : 00

Charge P1 End

00 : 00

Charge P1(kw)

5.00

Discharge P1 Start

00 : 00

Discharge P1 End

00 : 00

Discharge P1(kw)

5.00

Back

Up

Down

2.Battery settings include: battery charging and discharging current settings, and battery SOC settings.

Home

Host

BAT

Adv.

BAT Max Charge I(A)

0.00

BAT Max Dischg I(A)

0.00

BAT Min. SoC(%)

20.00

BAT. Max. SoC(%)

100.00

BAT Backup SoC(%)

20.00

BAT. Dchg hysteresis

10.00

Back


Down


3.Advanced Settings

Note: For advanced settings parameters, please contact the manufacturer to obtain the password settings.

Anti-Reverse setting:


Click on HOME > Set > Advanced > Enter Password > R > Anti-Reverse. Set the anti-reverse period, power and mode as needed.



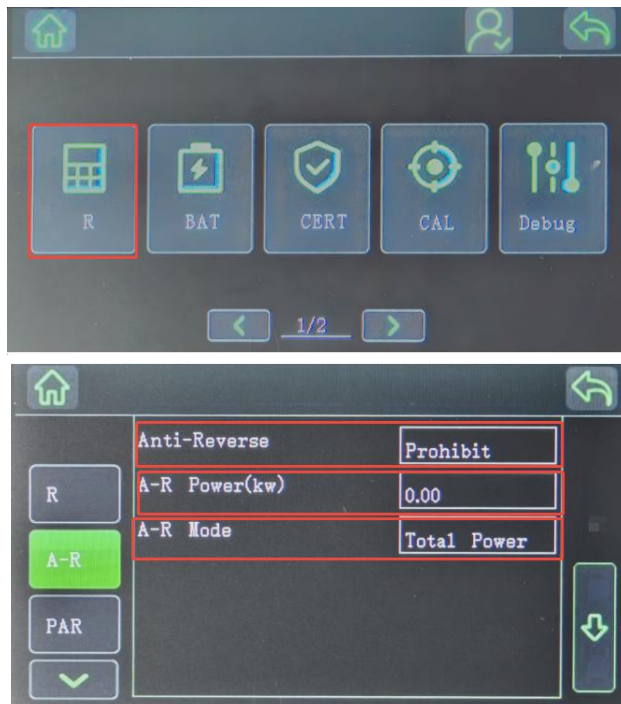


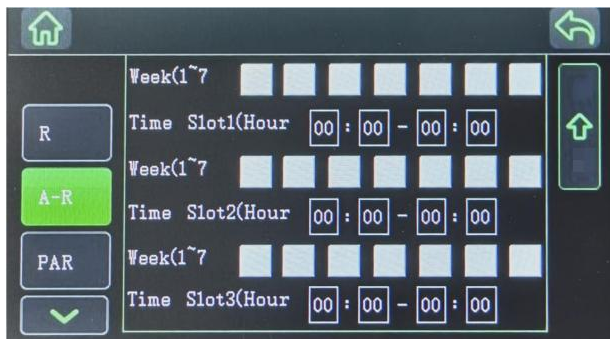

Battery settings:

Click on HOME > Set > Advanced > Enter Password > BAT, and set the battery connection method, battery type, battery overvoltage and undervoltage values, battery protocol, and communication method as needed.

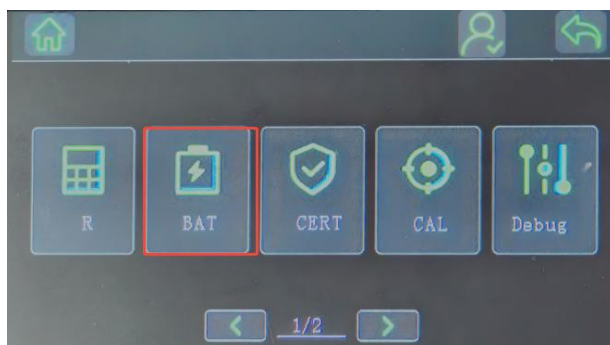

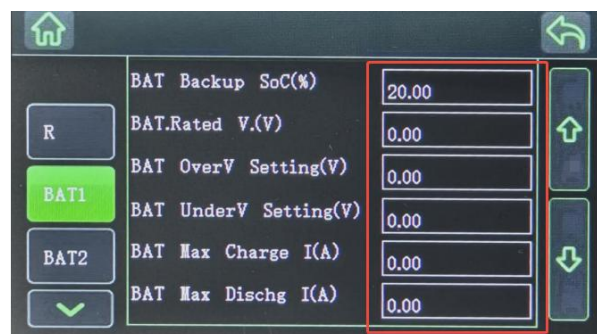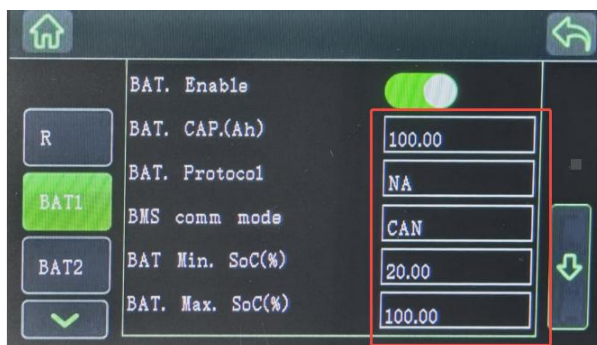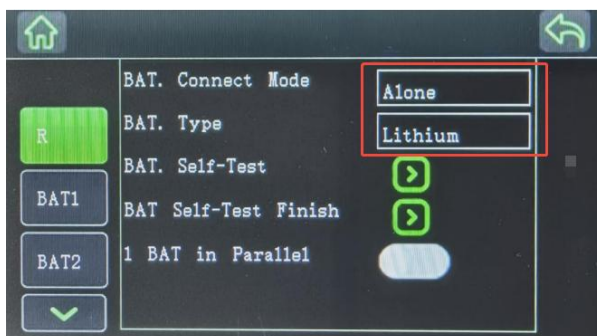


Certification settings:




Click on HOME > Set > Advanced > Enter Password > Certification > R. Set the authentication country according to the actual situation.



Generator activated:

Click HOME > Set > Advanced > Enter Password > Periphery, and set the generator mode and Do function as needed.

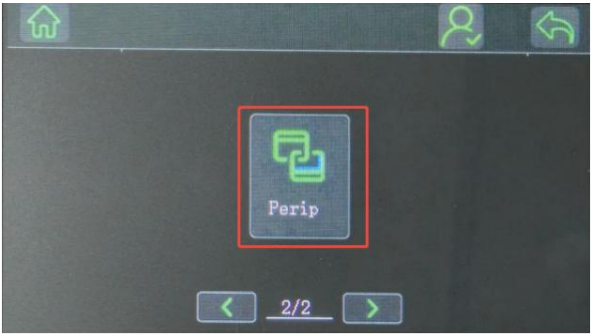

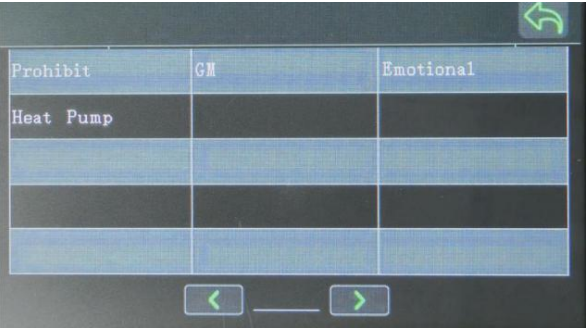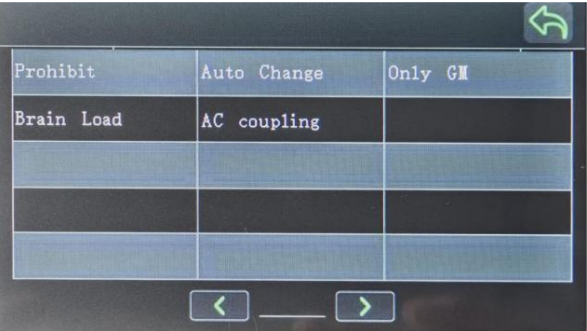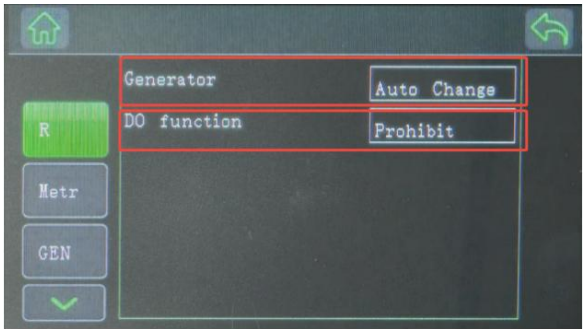

Note: For other advanced parameter settings, please contact the manufacturer for guidance. Do not set them by yourself.

8.App introduce

Users need to choose between a WiFi dongle or a 4G dongle when using the app.

ESS LINK: Please contact the manufacturer for operation and use, and refer to the ESS LINK operation and user manual.

Android: Please scan the QR code below to obtain it.

IOS: Please scan the QR code below or go to the App Store to search for ESS LINK download.



Android QR Code

Android 



Google Play Code



App Store Code



9.Troubleshooting and Maintenance

This section will help users identify the possible causes of malfunction issues.

9.1Alarm and solution

Table 9-1 Alarm Information List and Solutions

NO.	Error	Solution
1	Abnormal voltage in the power grid	<ul style="list-style-type: none"> If there is occasional alarm, it may be a short-term abnormality in the power grid. After the power grid returns to normal, the inverter will automatically resume normal operation. If the alarm is frequent, check if the grid voltage/frequency is within an acceptable range. If so, please check the AC circuit breaker and AC wiring of the inverter. If the voltage/frequency of the power grid is not within an acceptable range and the AC wiring is correct, but there are multiple alarms, please contact technical support to change the overvoltage and undervoltage and underfrequency protection values of the power grid.
2	Abnormal power grid frequency	
3	The ambient temperature is too high	<ul style="list-style-type: none"> Please ensure that the inverter is installed in a place without direct sunlight. Please ensure that the inverter is installed in a cool/well ventilated area. Please ensure that the inverter is installed vertically and the ambient temperature is below the upper temperature limit of the inverter. If the fault persists, please contact your dealer
4	The temperature of the radiator is too high	

		or after-sales service center.
5	Insulation fault	<ul style="list-style-type: none"> ● Check the impedance of the photovoltaic string to the protective ground. If the resistance value is greater than 20k Ω, it is normal. If the resistance value is less than 20k Ω, please investigate the short-circuit point and rectify it; Check if the protective grounding wire of the inverter is connected correctly. If there are no abnormal alarms during the power on test, it will automatically clear or send a fault clearing command. ● If it is confirmed that the impedance is indeed lower than the default value in cloudy and rainy weather, please reset the "insulation impedance protection point".
6	Leakage protection fault	<ul style="list-style-type: none"> ● Check if there are any problems with the machine or wiring, and send a fault clearing command to retest if there are no issues.
7	Island protection	<ul style="list-style-type: none"> ● Confirm if the power grid is lost. ● Contact your dealer or after-sales service center.
8	Battery 1 is not connected	<ul style="list-style-type: none"> ● Check if the battery overvoltage setting is inconsistent with the battery specifications. ● Please check if Battery 1 is connected correctly or if the voltage is abnormal. Once confirmed, the warning will automatically clear or a fault clearing command will be sent.
9	Battery 1 overvoltage	
10	Battery 1 undervoltage	
11	Battery 1 discharge terminated	

Isuna S3K-SL-S~S6K-SL-S

12	PV 1 not connected	<ul style="list-style-type: none"> Please check if PV 1 is connected correctly or if the voltage is abnormal. Once confirmed, the alarm will automatically clear or a fault clearing command will be sent.
13	PV 1 overvoltage	<ul style="list-style-type: none"> Check if the PV series voltage is higher than the maximum input voltage of the inverter. If so, adjust the number of PV modules in series and reduce the PV string voltage to adapt to the input voltage range of the inverter. After calibration, the inverter will automatically return to its normal state.
14	Pv1 current uniformity abnormality	
15	PV 2 not connected	<ul style="list-style-type: none"> Please check if PV 2 is connected correctly or if the voltage is abnormal. Once confirmed, the alarm will automatically clear or a fault clearing command will be sent.
16	PV 2 overvoltage	<ul style="list-style-type: none"> Check if the PV series voltage is higher than the maximum input voltage of the inverter. If so, adjust the number of PV modules in series and reduce the PV string voltage to adapt to the input voltage range of the inverter. After calibration, the inverter will automatically return to its normal state.
17	PV 2 current sharing abnormality	
18	DC bus overvoltage	<ul style="list-style-type: none"> Disconnect the AC output side switch and DC input side switch, and after 5 minutes, close the AC output side switch and DC input side switch. If the fault persists, please contact your dealer or after-sales service center.
19	DC bus undervoltage	
20	DC bus voltage imbalance	<ul style="list-style-type: none"> The voltage fluctuation remains within the allowable range for 2 seconds before

Isuna S3K-SL-S~S6K-SL-S

		automatically clearing.
21	Inverter overload	<ul style="list-style-type: none"> Please check if the inverter is working in overload state. After confirming normal operation, the alarm will automatically clear or send a fault clearing command within 10 minutes.
22	Inverter overload timeout	
23	Battery 1 overload timeout	
24	PV 1 overload timeout	
25	PV 2 overload timeout	
26	Inverter soft start failure	<ul style="list-style-type: none"> Internal fault in the inverter, turn off the inverter, wait for 5 minutes, then turn on the inverter and send a fault clearing command to restart the soft start.
27	Battery 1 soft start failed	
28	DSP1 Parameter setting malfunction	<ul style="list-style-type: none"> The alarm will be automatically cleared if the parameter settings are correct.
29	DSP2 Parameter setting malfunction	
30	DSP Communication Failure	<ul style="list-style-type: none"> SPI after communication is normal, the alarm will be automatically cleared.
31	Relay self-test failed	<ul style="list-style-type: none"> Send a fault clearing command to retest.
32	Inverter abnormality	<ul style="list-style-type: none"> After clearing other faults, the alarm will be automatically cleared.
33	PV 1 soft start failure	<ul style="list-style-type: none"> Inverter internal fault, turn off the inverter, wait for 5 minutes to turn on the inverter, send

34	PV 2 soft start failure	a fault clearing command to restart the soft start
----	----------------------------	---

9.2Regular maintenance



Warning

- Make sure that the inverter is disconnected from power.
- Wear personal protective equipment when operating the inverter.

Table 9-2 Maintenance Instructions

Maintain content	Maintenance methods	Maintenance Cycle
System cleaning	Check for foreign objects and dust on the heat sink and air inlet/outlet.	Once/Half a year~Once/Year
DC switch	Continuously turn on and off the DC switch 10 times to ensure that the DC switch functions properly.	Once/Year
Electrical connection	Check whether the cable connection is loose or detached, whether the appearance of the cable is damaged, and whether there is copper leakage.	Once/Half a year~Once/Year

Isuna S3K-SL-S~S6K-SL-S

10. Technical Parameter

Table 10.1 Technical Parameter Description

Model	Isuna S3K-SL-S	Isuna S4K-SL-S	Isuna S5K-SL-S	Isuna S6K-SL-S
Battery parameters				
Battery input number	1			
Battery type	Lithium/lead-acid/sodium-ion(optional)			
Rated battery voltage	51.2V			
Battery voltage range	30V-60V			
Max voltage	60V			
Rated charging and discharging power	3kW	4kW	5kW	6kW
Max charging and discharging current	60A	80A	100A	125A
Interface	RS485/CAN			
PV input				
PV input number	2			
Max input power [®]	6000Wp	7200Wp	8000Wp	9000Wp
Max inout voltage	500V			

Isuna S3K-SL-S~S6K-SL-S

Starting voltage	80V
MPPT Voltage range	65~500V
MPPT Full load voltage range	250~500V
Rated voltage	360V
MPPT number	2
MPPT string	1
MPPT Max input current	18A/18A
MPPT max short circuit current	22A/22A

Remark①: Recommend two MPPT input independently, per MPPT max power no more than 4500W

Grid parameters				
Rated output power	3000W	4000W	5000W	6000W
Max input power of grid	3600W	5000W	6000W	6000W
Max output current	13.6A	18.2A	22.7A	27.2A
Max input current of grid	16.4A	22.7A	27.2A	27.2A
Rated grid connected voltage	230V			

Isuna S3K-SL-S~S6K-SL-S

Voltage range of grid	184~264V
Rated grid frequency	50/60Hz
Grid frequency range	45Hz~65Hz
Power factor	$\pm 0.8(0.8\text{speed-up}-0.8\text{lag})$
THDi(@rated power)	<3%
THDu(@linear load)	<2%
On/off grid switching time	$\leq 5\text{ms}$
Power control accuracy	$\pm 200\text{VA}$
Protection	
Residual current monitoring	Integration
Input reverse protection	Integration
Anti islanding protection	Integration
Overvoltage and overload protection	Integration
AC short circuit protection	Integration
AC overvoltage level	III
Battery and PV overvoltage	II

Isuna S3K-SL-S~S6K-SL-S

level	
Surge protection	Integration
Lightning Protection	Integration
General Parameters	
Installation method	Wall mounted
Size	480mm*325mm*211.5mm
Weight	23kg
Standby power loss	≤18W
Temperature range	-25℃~+60℃ (>45℃, Power reduced operation)
Humidity range	0~100%
Noise	<56dB
Allowable altitude	<4000m
Cooling method	Intelligent air cooling
IP Grade	IP65
Monitoring	LCD/APP/WIFI/4G/Bluetooth (optional)
Communication port	RS485/CAN/Dry contact/Parallel
Number of parallel machines	6PCS

Isuna S3K-SL-S~S6K-SL-S
