

SINEXCEL

iSUNA

ESS LINK

Operation Introduction

Catalog

1 ESS LINK Introduction	3
1.1 Software Download	3
1.2 Account Registration and Device Binding	4
1.2.1 Account Registration	4
1.2.2 Online network distribution	9
1.2.3 Configuring a Bluetooth Inverter in Offline mode	11
1.3 Home Page	13
1.3.1 Power station equipment	13
1.3.2 Home Page jump	15
2 Set parameters in online mode	16
2.1 Setting the Date	16
2.2 Setting the Working Mode	17
2.3 Host Advanced Settings (Closed to end users)	18
2.4 Viewing Data	19
2.4.1 Alarm Information	19
2.4.2 Power & Electricity Statistics	19
2.4.3 System Measurement Data	20
2.4.4 System Unit Data	22
3.Offline Mode	26
3.1 Offline mode operation	26
3.2 Advanced parameter setting operations	27
3.2.1Setting the date	28
3.2.2 Working mode settings	29
3.2.3 Host Advanced Settings	30
3.3 View Data	31
3.3.1 Alarm Information	31
3.3.2 System measurement data	31
3.3.3 System unit data	32
3.3.4 Version information	35
3.3.5 Language Settings	35
3.3.6 Back to login page	36

1 ESS LINK Introduction

ESS LINK is a mobile application that can communicate with the inverter via WiFi.

The following are the commonly used functions:

- Monitor the system data, alarm information, and software version of the inverter.
- Setting the parameters of the inverter
- Maintenance equipment.

The initial flowchart of the App operation is shown below:




1.1 Software Download

Method 1: Users can scan the QR code below to download and install according to their phone model.



Method 2: Search ESS LINK in **Google Play** (Android) or **App Store** (IOS) to download and install.

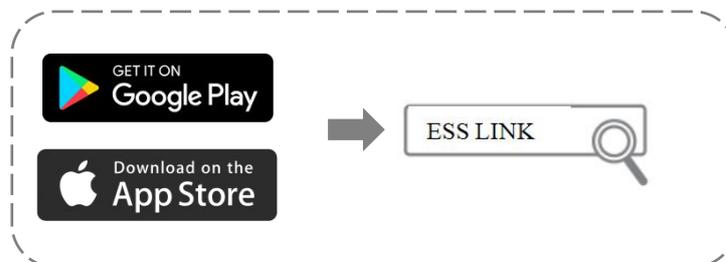


Note: After the installation of ESS LINK is completed, if there is a subsequent version update, a prompt for the new version update will appear when you enter the


home page of the app (IOS users can only download the update through the APP Store).

1.2 Account Registration and Device Binding


1.2.1 Account Registration

Step 1: Tap the App icon > Server Switch . The login page is displayed. In the upper left corner, you can select the server switch, and select the server near the installation location. In the upper right corner of the switch language, you can select the language type.

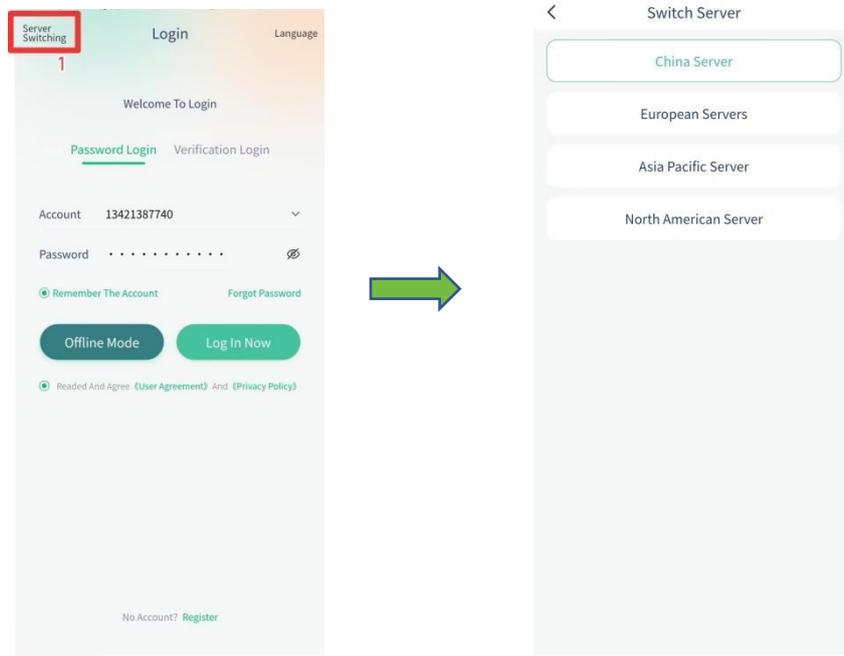

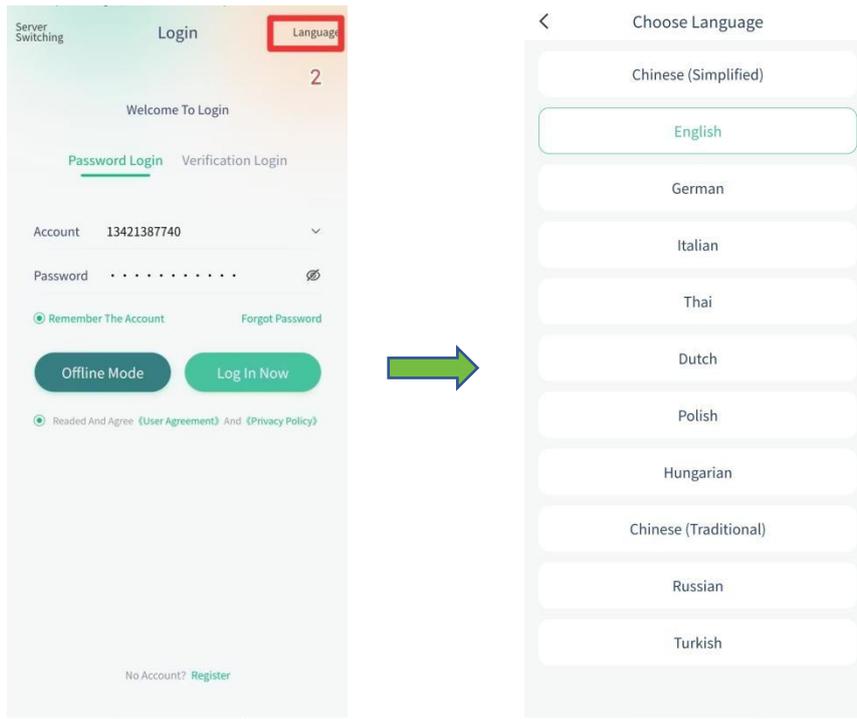


Step 2: Register > Select server type > Enter phone number/email > Obtain verification code > Set Password > Register, as shown below:

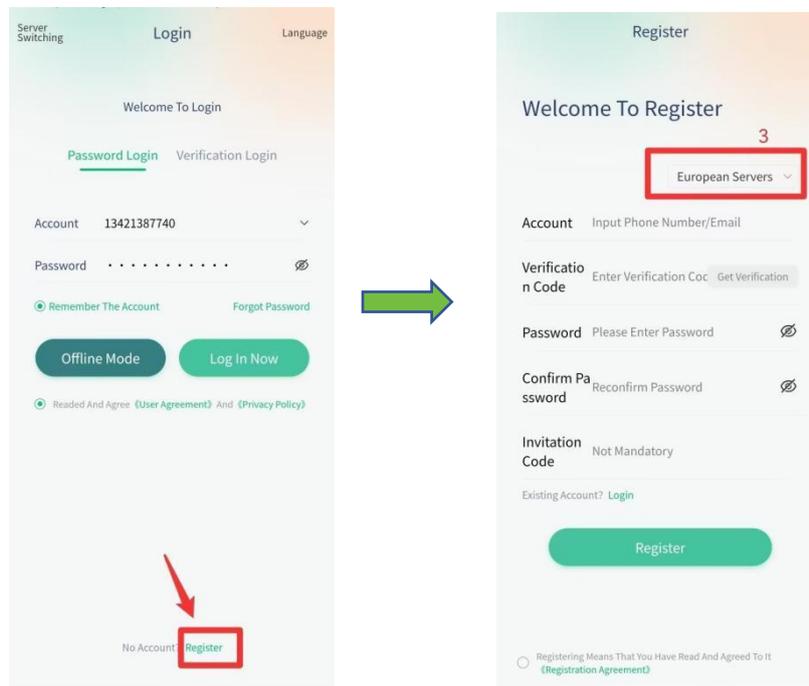

Step 3: Log in to the Admin page. You can add an existing Site or create a new Site as required. After the power station is created, the device is added. Select the name of the existing Site first, and then add the communication code. The device can be bound by scanning the two-dimensional code on the Wi-Fi rod (scanning the two-dimensional code on the body of the single-phase off-grid machine) or manually


entering the S/N code on the Wi-Fi dongle

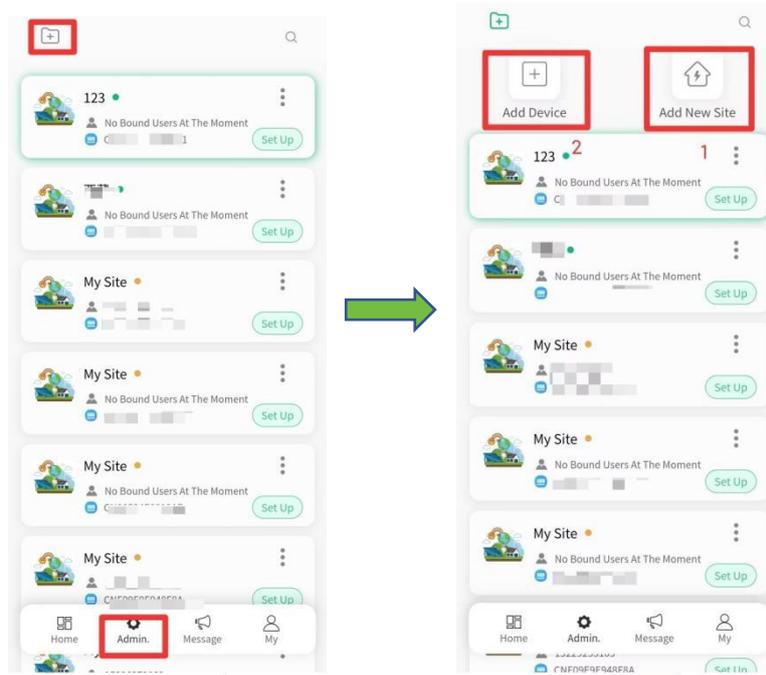

Add Site: If there is an existing Site, you can choose to add an existing Site, enter the power station code, or enter or scan the bound device communication code (Figure 1.7). If a power station is created for the first time, select Create a new power station and complete the required information. Fields marked with an asterisk (*) are mandatory.


If a trusted party is allowed to remotely operate and maintain its own device, including data access and parameter setting, select Allow Trusted Party remote operation and maintenance. Otherwise, disable this option.

If you need to batch set all devices in the power station, that is, select any device to deliver a parameter, and change this parameter for all devices in the power station at the same time, select Batch Set

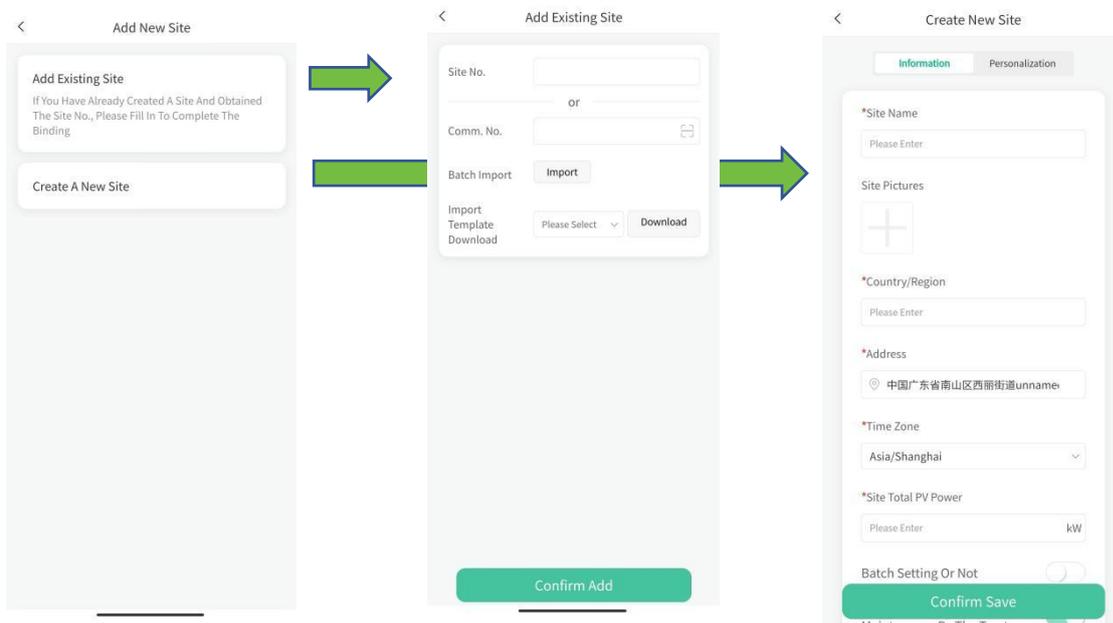



After the Site is added, the Site name is displayed on the Admin page, indicating that the Site is added successfully. To unbind the Site, locate the box where the name of the corresponding Site is located, drag the icon to the left, and click Unbind.

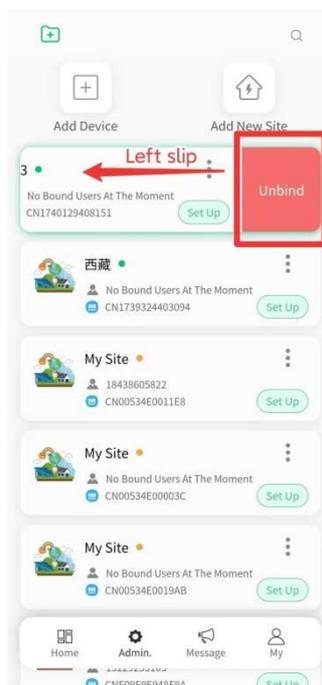

Add a new device: Enter the name of the Site that has been added, and then enter or scan the communication code of the device to complete the addition.

< Add New Device

*Site Name

*Comm. No.

Device Name

Batch Import

Import Template Download

After the device is added, the distribution network interface will be directly displayed. After connecting the device, enter the wifi name and password. If there is no wifi on site, you can also connect your mobile phone to a mobile hotspot.

Note: Only 2.4Ghz wifi or mobile hotspots are supported

Left Screenshot: Create New Site

Information Personalization

*Site Name

Allow "ESS LINK" to use your location?
App requires your consent to access the location display of weather. If prohibited, the weather will not be displayed.

*Site Total PV Power
 kW

Right Screenshot: Add Device

*Comm. No. ABCD12345678

Device Name

Network Distribution

Device (Connection Successful):

Wi-Fi Name:

Wi-Fi Password:


Server:

Certification:


1.2.2 Online network distribution

If the network is not configured when the device is added for the first time, you can configure the network in the subsequent configuration. Click Admin > Set Up > Device Information > Network Distribution, enter the configuration page. If the Bluetooth connection between the mobile phone and the communication device is successful, the device (connection success) message will appear, and you can continue to perform network distribution operations. If the device (retry) prompt appears, it indicates that the Bluetooth connection between the phone and the communication device fails. You can click retry to retry the search and connection.


Note: One communication device supports only one mobile phone Bluetooth connection

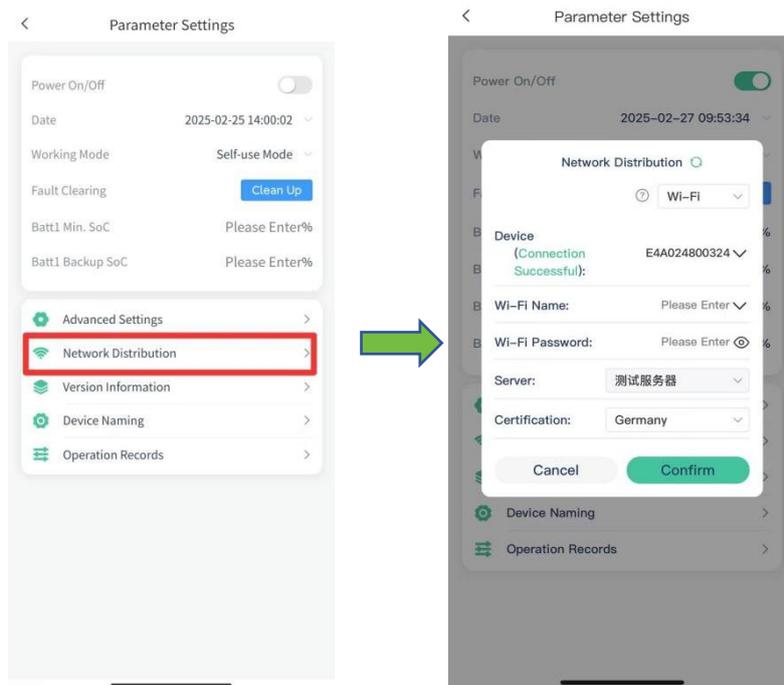

For 4G/ Ethernet communication, select 4G or other in the upper right corner of the pop-up window, and configure only the server and country.

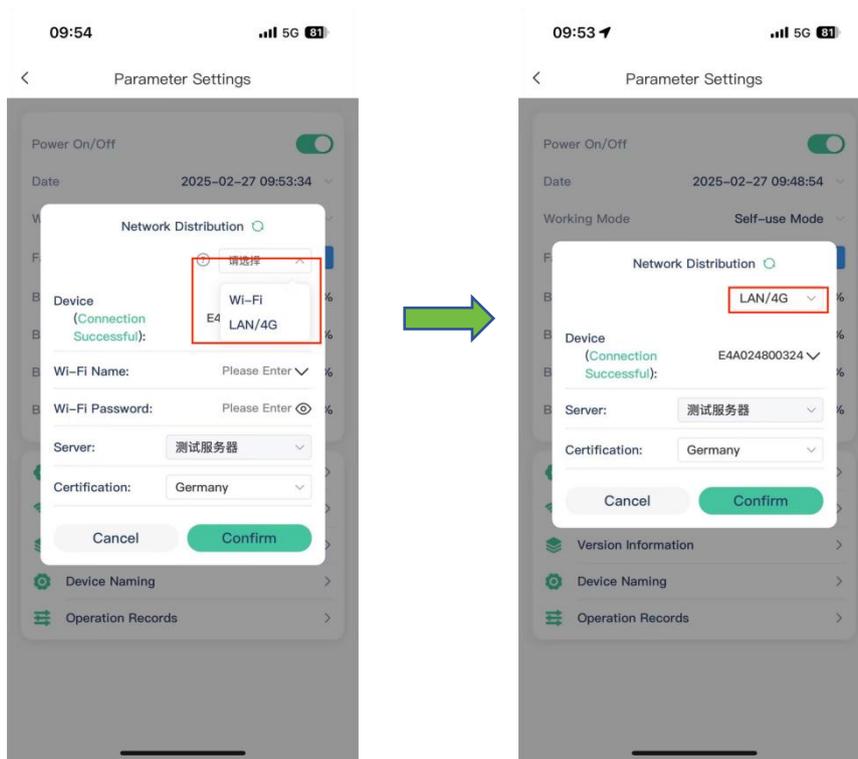

After the Bluetooth connection between the mobile device and the communication device (Wi-Fi stick) is successful, enter the correct Wi-Fi name and password on the APP, click Confirm, and a prompt window will pop up after the setting is successful.

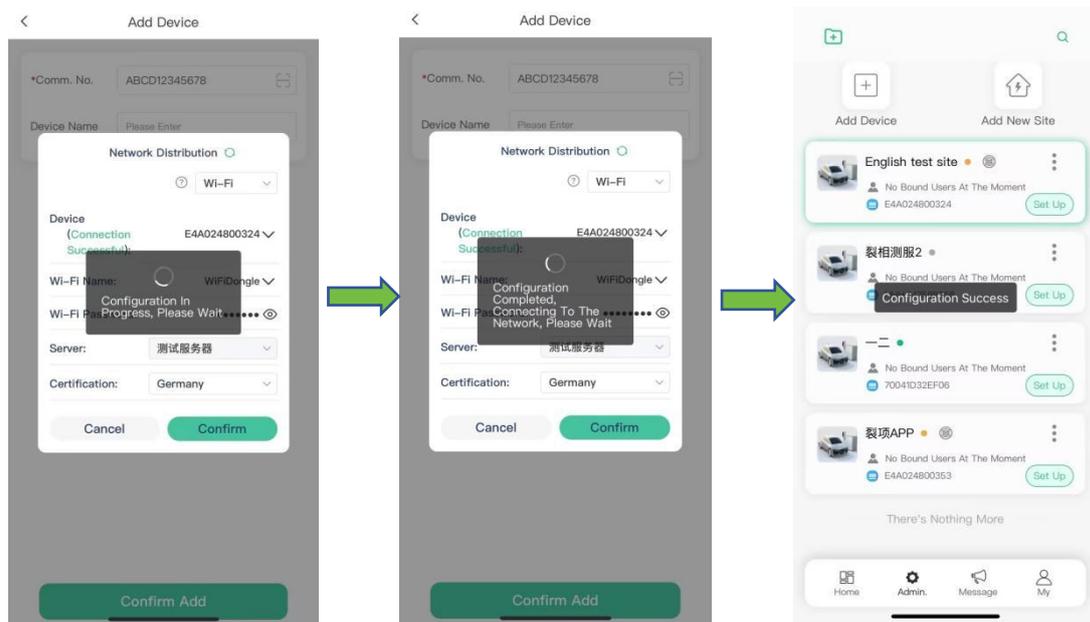

Note: Because there is a certain delay in Internet communication, if the operation is


correct, it can be displayed normally within 3s. If the device offline message is displayed on the APP home page for two or three times and no offline message is displayed, the configuration is successful. If the system of the mobile phone is not suitable and the distribution network connection is not successful, please refer to 1.2.3 Using Bluetooth Inverter for network distribution.

1.2.3 Configuring a Bluetooth Inverter in Offline mode


(If the network is successfully configured according to 1.2.2, skip this step.)

Step 1: Tap the App icon > Server Switch. The login page is displayed. In the upper left corner, you can select the server near the installation location. In the upper right corner, you can select the language type.

Step 2: Enter the App login interface, tap Offline Mode > Connect Device > Bluetooth Inverter (turn on Bluetooth) > tap the number on the corresponding WIFI stick to enter.

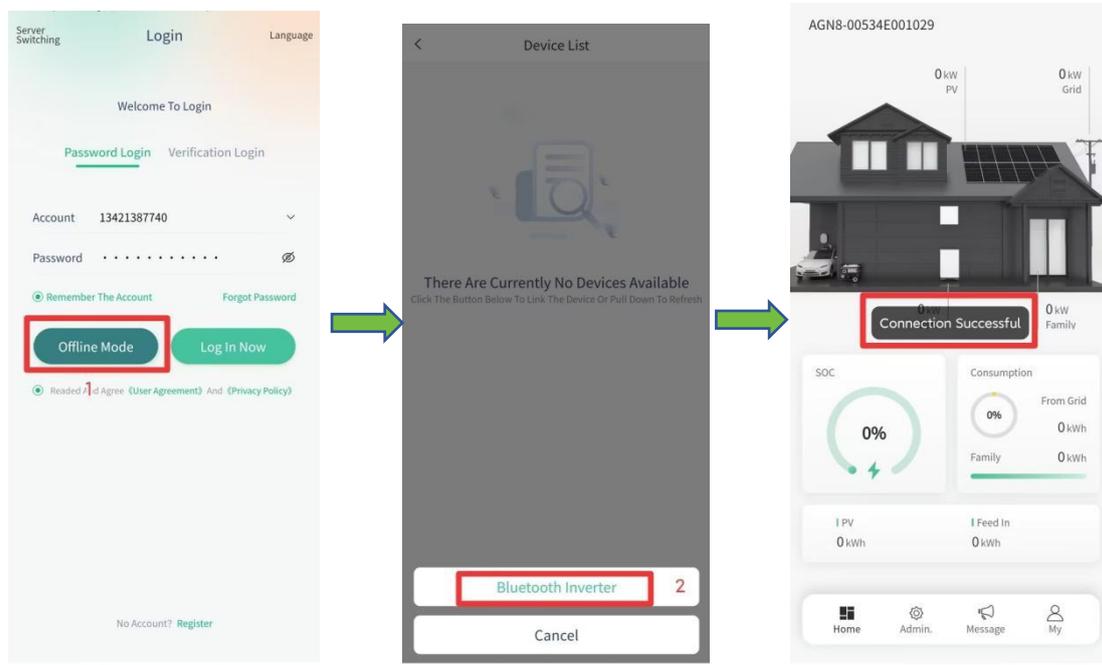



Step 3: On the home page, choose Admin > Network Distribution . The Wi-Fi configuration page is displayed.

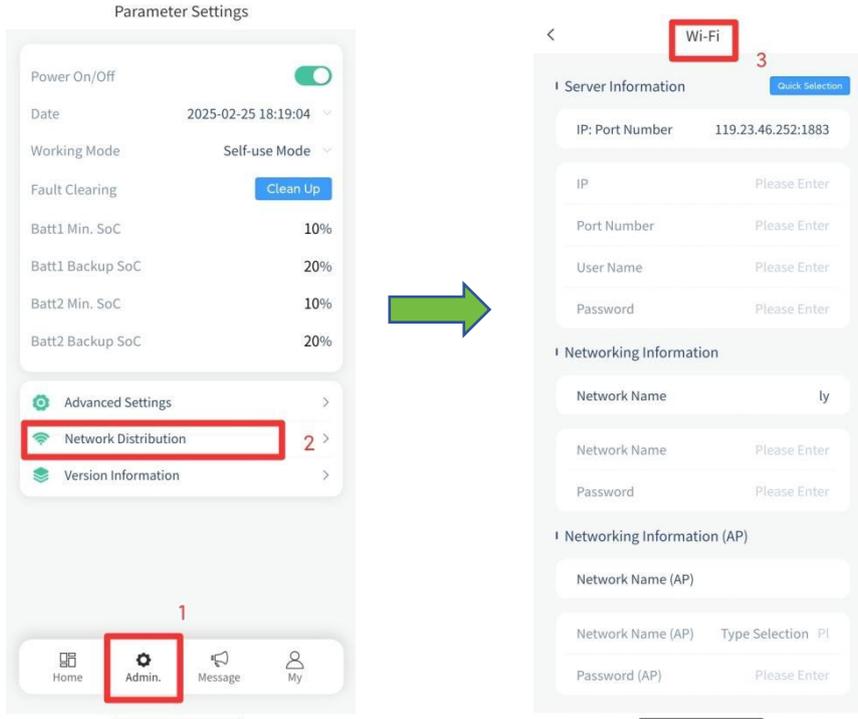

Step 4: After entering the Wi-Fi configuration screen, click Quick Selection (select a server), enter the network name and password in the networking information (if it is 4G communication stick, you do not need to enter), slide down to the bottom and click to save the Settings.

Note: (Wi-Fi name: letters + numbers; Password length should not exceed 64 characters).

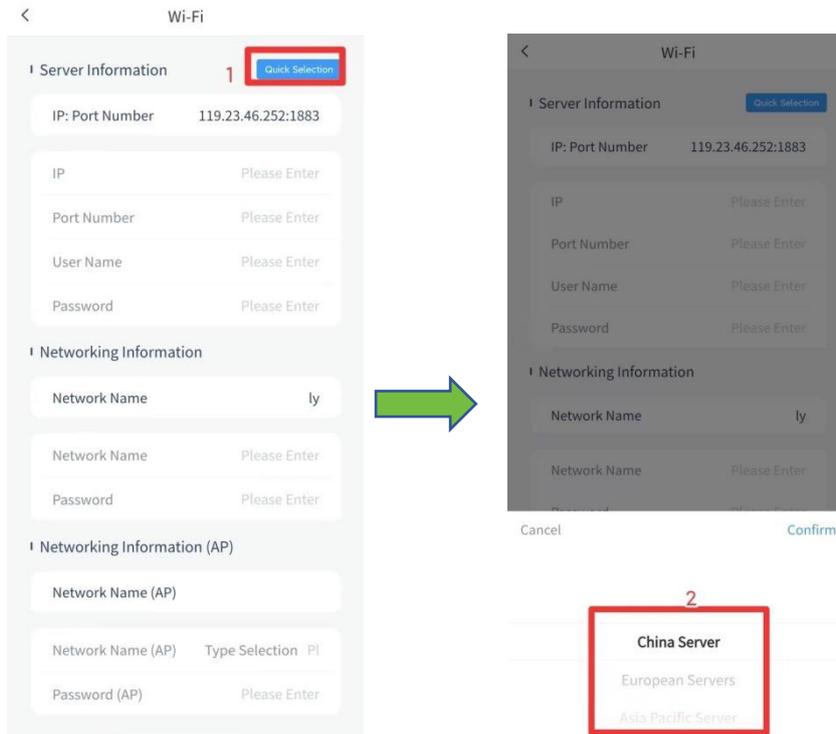

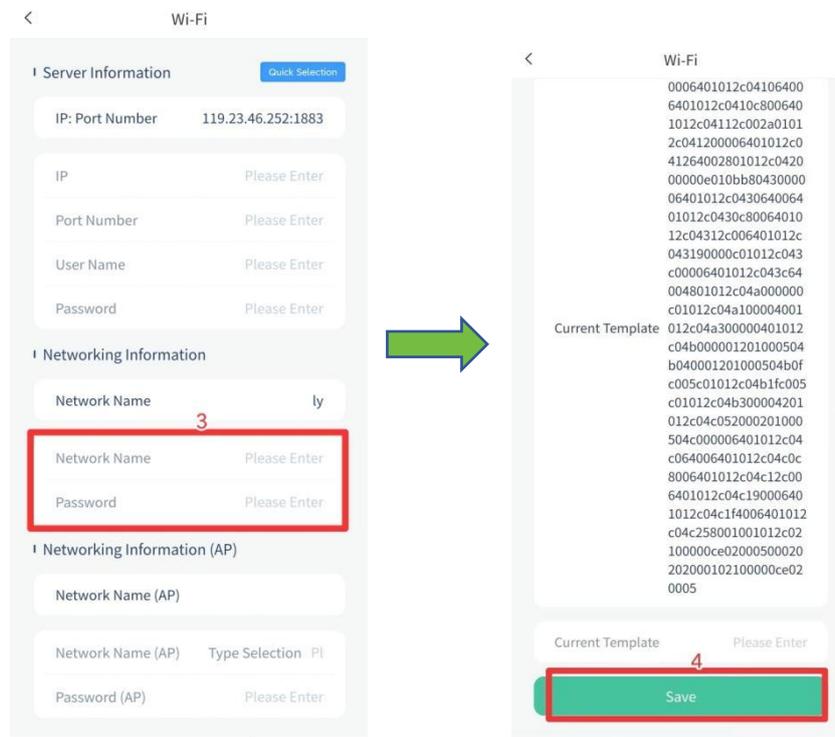


1.3 Home Page

1.3.1 Power station equipment

The home page of the online mode App can monitor the name of the power station, the status of the power station, the local weather, the total operating power of each unit of all equipment under the power station, the battery SOC, the load power consumption, the photovoltaic power generation, the feed amount, the total revenue, and the carbon emission reduction in the past week. The home page only displays the information of the default power station (located in the first line of all power stations).


If you have bound multiple power stations and want to display information about other power stations, go to the Admin page and click the icon of the power station to replace the default power station. If there are too many power stations, you can use the upper right magnifying glass for fuzzy search.

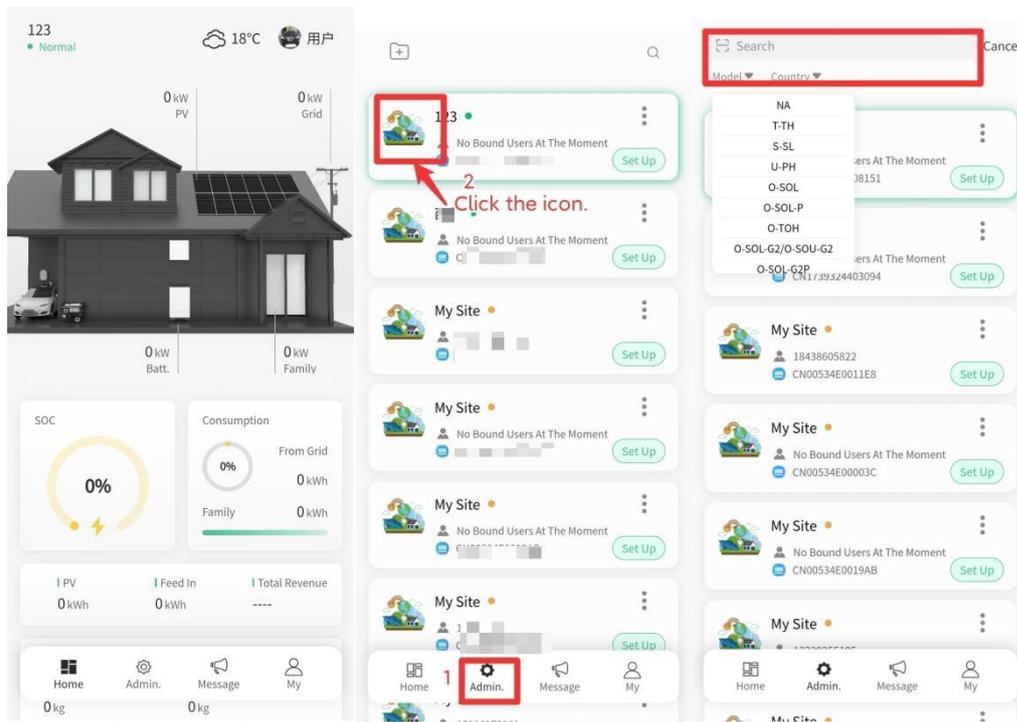

Click the house icon on the home page, and you can see all the equipment information of the power station, the current status of the equipment (offline: gray, running: green, standby: orange), including the SN code, communication code, model, and rated power of the equipment.


Click the corresponding device box under the power station to jump to the chart page of power statistics, SOC statistics, and electricity statistics of each unit of the equipment on that day. By selecting a date, you can view a statistical graph of important information for a given date.

Click the "Details" icon in the upper right corner of the power statistics chart to see the detailed information under each unit branch.

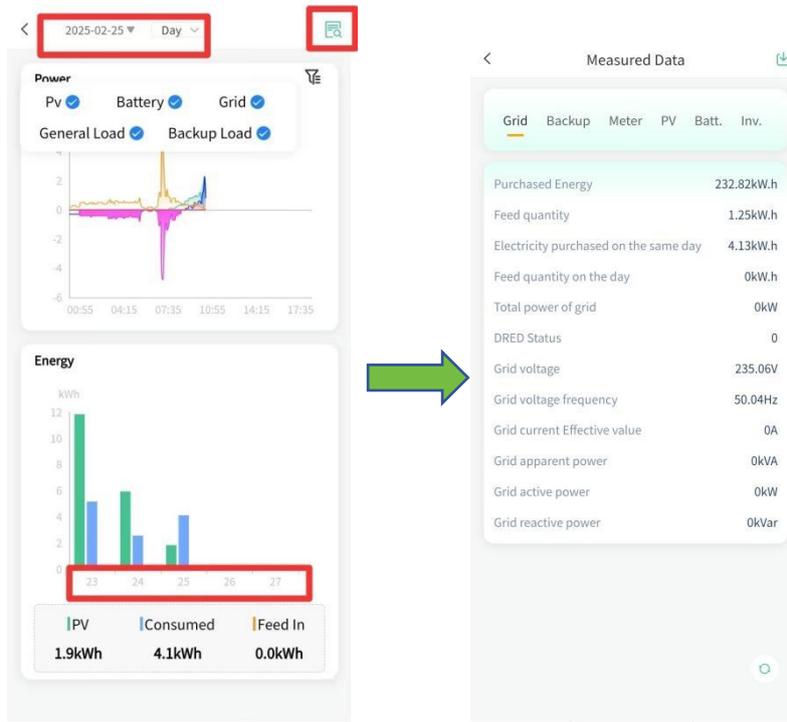


1.3.2 Home Page jump

The data displayed on the home page is the sum of information of all the equipment in the power station. Click the name of each unit to jump to the chart statistics page of each unit in the power station respectively, which includes the key information of all the equipment in the power station.

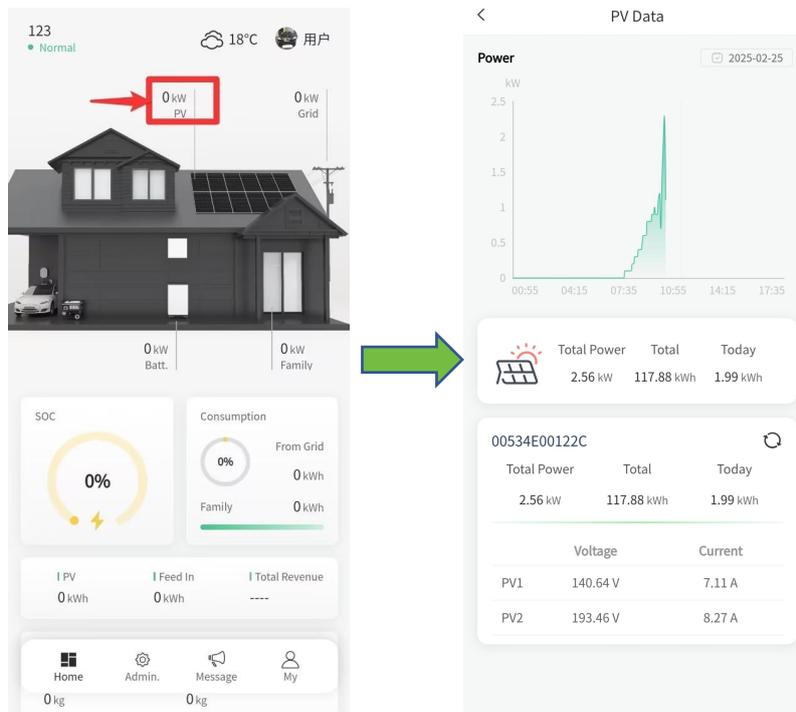

2 Set parameters in online mode

Through Admin > Set Up > Device Info > Parameter Settings, the device Settings page appears, including basic inverter Settings, advanced Settings, Bluetooth network distribution, version information, device naming and operation records, as shown in the following picture:

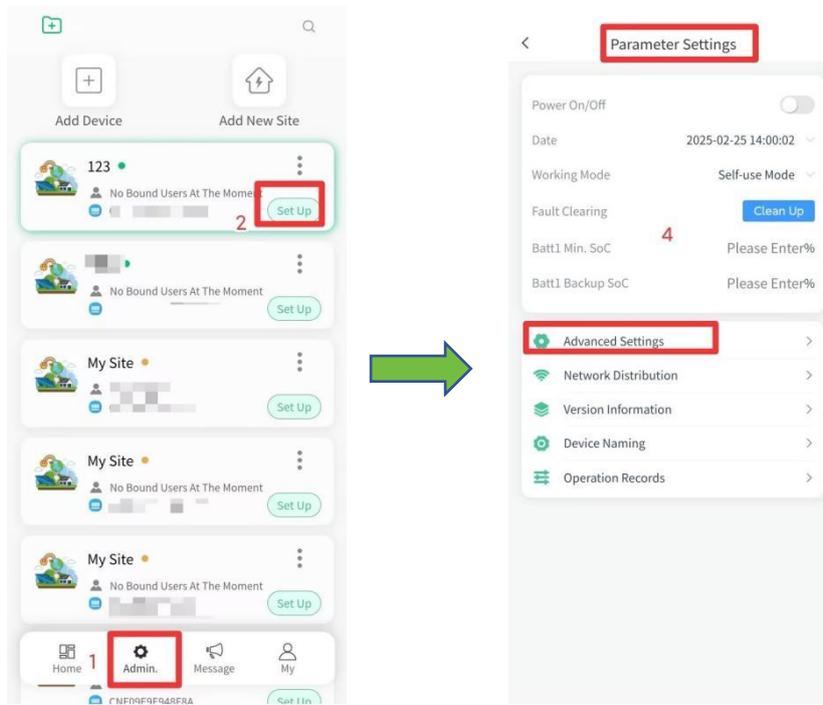


The page for setting parameters is displayed, including on/Off setting, date setting, working mode setting, time and power setting, fault clearing, and minimum battery SOC and minimum backup SOC setting in scheduled charge/discharge mode.

Advanced Settings are available only to O&M vendors. Contact the after-sales service for support.

2.1 Setting the Date

Click on the date and the Settings box will appear
APP will automatically recognize the current date, click Confirm.

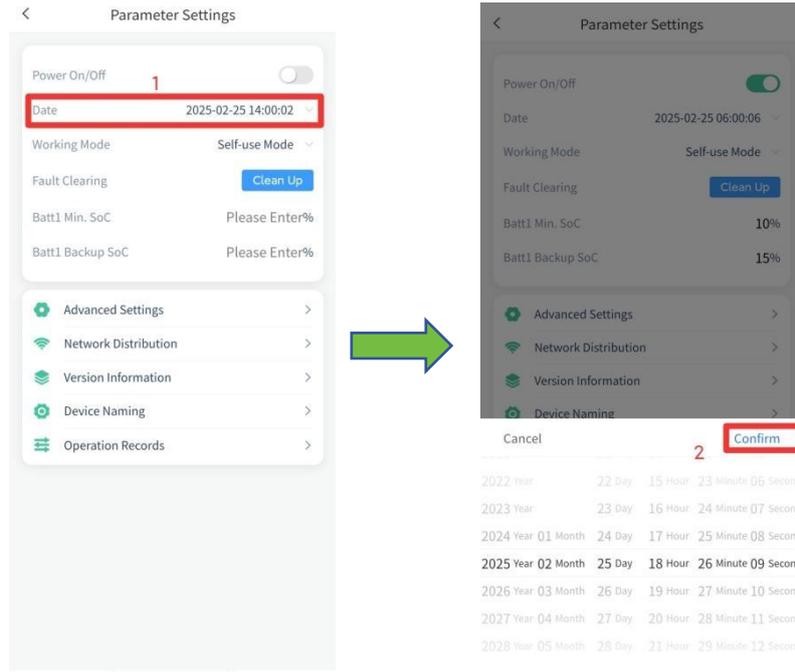

2.2 Setting the Working Mode

When the inverter is powered on for the first time, the default working mode of the inverter is self-use. At present, the inverter has the following five working modes. Users can select the required working mode according to the actual situation. For details about the operation logic, see the user manual of each model.

(1) Spontaneous self-use mode

1. the working mode is set to: spontaneous self-use mode;
2. Click Advanced Settings to enter the Advanced parameter Settings page and click Battery Settings.
3. according to the user's own needs, select the battery access mode, confirm whether the battery is enabled, set the battery type, battery access mode, battery protocol, battery voltage, battery maximum charge and discharge current;
4. Issue the boot command (the switch button is green).

(2) timed charge and discharge mode

- 1.the working mode is set to: timed charge and discharge mode;
- 2.according to the requirements to set the periodic charging and discharging time period (charging and discharging time periods are not allowed to cross and overlap, otherwise the machine will not execute the command), set the charging and discharging power, press the +/- sign to add/delete the charging and discharging time period; Other time modes can be selected for self-use or do not charge.
- 3.you can set a repeat date, effective date and deadline within a week.

4.the user can set the off-grid switching mode.

5. Issue startup instructions.

(3) Backup power mode

1. Set the working mode to backup power mode.

2. Issue startup instructions.

(4) photovoltaic priority charging

1.the working mode is set to photovoltaic priority charging;

2. Issue startup instructions.


(5) Selling point priority mode

1.the working mode is set to sell electricity priority mode;

2. Issue startup instructions.

2.3 Host Advanced Settings (Closed to end users)

Choose Admin > Settings > Device Info > Parameter Settings, tap Advanced Settings, select Host Settings, tap General, and click Load More to view and set inverter device information.

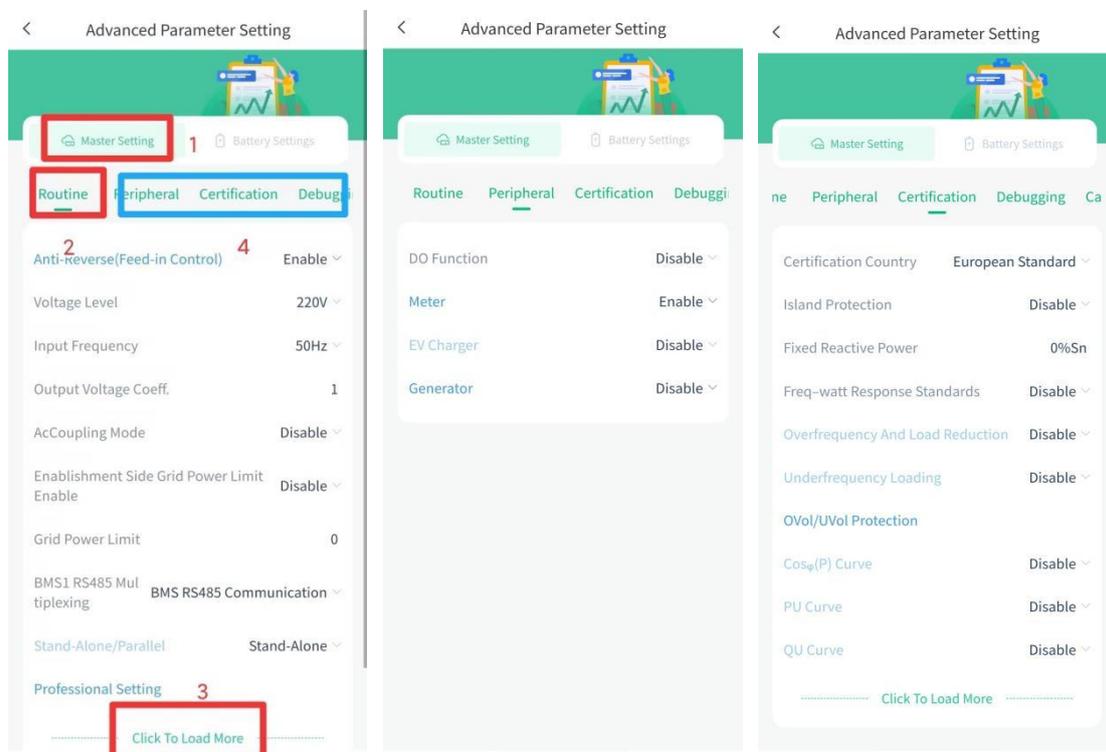

2.4 Viewing Data

In online mode, the refresh time of energy flow diagram is 3 seconds, and the refresh time of other data is 20 seconds, with different delays depending on the network condition.


2.4.1 Alarm Information

You can choose Notification > Current/History to view current alarms, historical alarms, and all alarms.

Each alarm indicates the communication code, power station, occurrence time, and severity of the alarm (red: fault, yellow: alarm, and green: warning). For the fault type, the corresponding solution is available.

You can double-click the alarm severity icon in the upper right corner of the alarm to switch to the home page of the power station where the alarm is generated, facilitating troubleshooting.

1. Click message. All alarms are displayed
2. Click Programme, you can see the solution of the fault
3. Click the icon to return to the home page. The home page displays information about the power station where the alarm device resides
4. Click Search to search the alarm device according to the model, country, communication code, device SN and other keywords

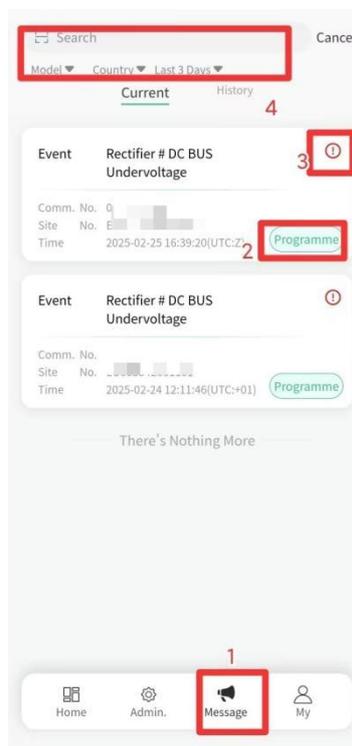


2.4.2 Power & Electricity Statistics

Through the home page (click the icon of the house) > Device List > Device Information, the interface can monitor the power and SOC of each unit of the current power station throughout the day, as well as the daily self-generated electricity, purchased electricity, feed amount, battery charging amount, battery discharge amount and other related information.

Use a graph to show the power values of PV, battery, grid, critical load, general load, and battery SOC for the day, month, year, or all day on a specified date. Click the filter button to filter whether certain power curves are displayed. Press and hold the power graph to display the specific value at the current time.

Use a bar chart to show the daily self-generated electricity, purchased electricity, feed amount, battery charging amount, and battery discharge amount. Long press the power bar chart to display the specific value of each power on the current date.

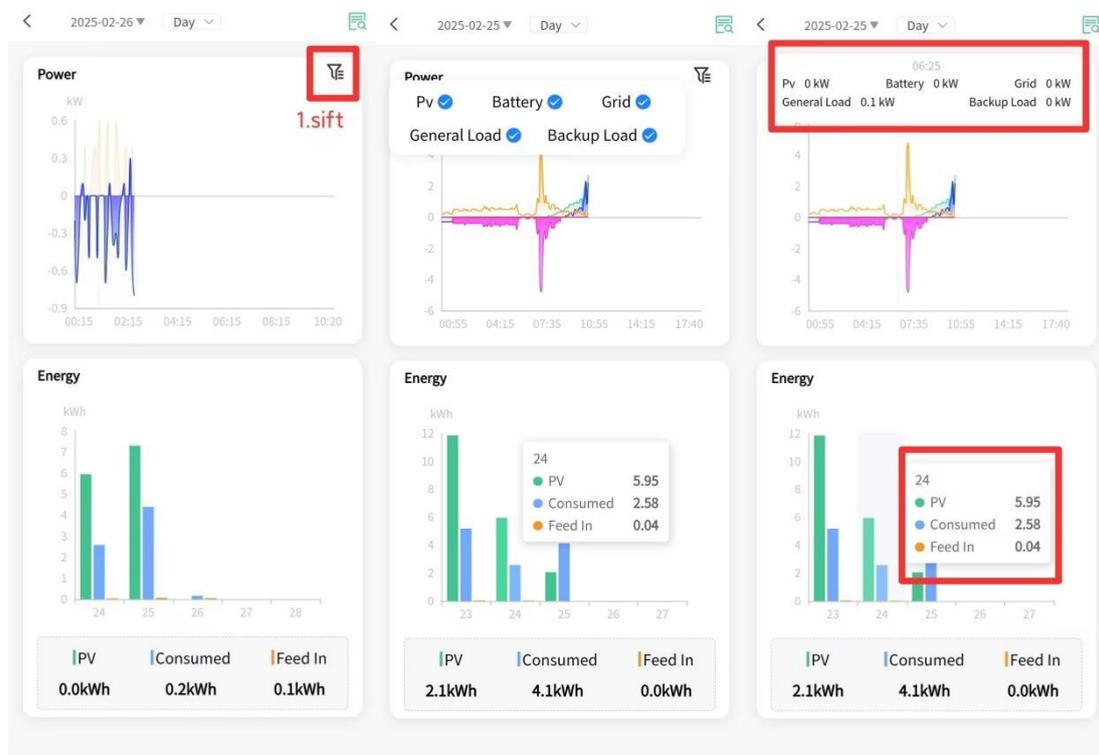

2.4.3 System Measurement Data

From the home page (click the house icon), click the upper right corner to enter the measurement data interface, which can monitor the power grid, emergency load, electricity meter, photovoltaic, battery, inverter, generator, debugging and other related information. Click the "Download" icon in the upper right corner to download the entire report to the local, click the "Refresh" button in the lower right corner to get the latest data.

Measured Data

Grid Backup Meter PV Batt. Inv.

Purchased Energy	232.82kW.h
Feed quantity	1.25kW.h
Electricity purchased on the same day	4.13kW.h
Feed quantity on the day	0kW.h
Total power of grid	0kW
DRED Status	0
Grid voltage	236.14V
Grid voltage frequency	50.06Hz
Grid current Effective value	0A
Grid apparent power	0kVA
Grid active power	0kW
Grid reactive power	0kVar

Measured Data

Grid Backup Meter PV Batt. Inv.

Total load power	0.69kW
Total backup load power	0kW
Total normal load power	0.13kW
Load voltage	236.49V
Load Voltage Frequency	50.06Hz
Load current effective value	0.56A
Load apparent power	0.13kVA
Load active power	0kW
Load reactive power	-0.13kVar

Measured Data

Grid Backup Meter PV Batt. Inv.

Meter Operating Status	Online
Meter Voltage	238.2V
Meter current	3.17A
Meter apparent power	0.51kVA
Meter Active power	0.15kW
Reactive power of electric meter	0.49kVar
Power factor of electric meter	0.29
Three-phase active total power	335.33kW.h
Positive active energy	334.48kW.h
Reverse active energy	0.85kW.h
Forward Reactive Energy	0.89kVar.h
Reverse Reactive Energy	154.07kVar.h
Meter Model	ADL200
Meter Firmware Version	0

Measured Data

Backup Meter PV Batt. Inv. Debu

Photovoltaic 1 voltage	140.09V
Photovoltaic 1 current	6.77A
PV 1 Power	0.95kW
Photovoltaic 2 voltage	180.82V
Photovoltaic 2 current	11.03A
Photovoltaic 2 power	2kW
Total PV power	2.9kW
DCDC status	Power on
PV1 Operating Status	Working
PV2 Operating Status	Working

Measured Data

Backup Meter PV Batt. Inv. Debugging

Total battery power	2.44kW
Batt1 Operating Status	Charge
Battery 1 voltage	54.22V
Battery 1 current	46.8A
Battery 1 Power	2.44kW
Battery 1 SoC	35%
BattCab 1 BMS Operating Status	Online
BattCab 1 Basic Status	Charging
BattCab 1 Cycle	0
BattCab 1 Total Charged Energy	0kW.h
BattCab 1 Total Discharged Energy	0kW.h
BattCab 1 Total Voltage	53.95V
BattCab 1 Total Current	40.6A
BattCab 1 Temperature	13.9°C
BattCab 1 SoC	33%
BattCab 1 SoH	100%
BattCab 1 Max. Voltage of Cell	3.369V
Min. Voltage of Cell in BattCab 1	3.369V

Measured Data


Backup Meter PV Batt. Inv. Debugging

Operating state of inverter	On-Grid
DCAC status	Power on
Inv. voltage	239.26V
Inverter voltage frequency	50.05Hz
Inv. current Effective value	1.32A
Inv. active power	0.12kW
Inv. reactive power	0.29kVar
Inv. apparent power	0.32kVA

2.4.4 System Unit Data

(1) PV data


On the home page > PV > PV Data, you can view the power change, total PV power, current power generation, and total power generation of all photovoltaics in the power station. And the photovoltaic power and electricity summary value of each equipment under the current power station, as well as the voltage and current value corresponding to each PV. Click the refresh button in the upper right corner of the corresponding device communication number box to update this parameter to the latest value immediately.

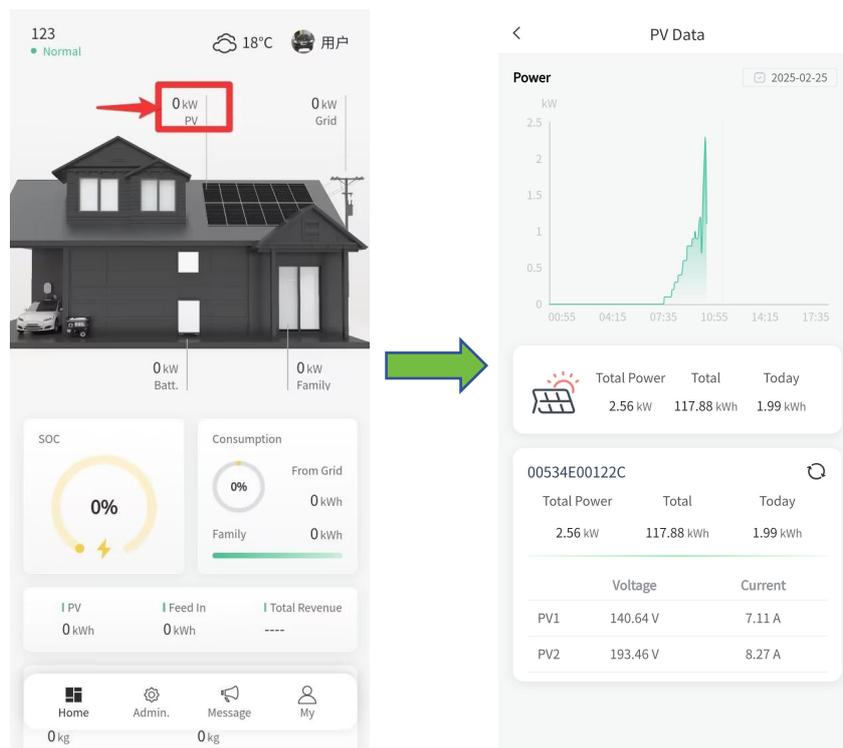

(2) Power grid data

On the home page > Power Grid > Power Grid Data, you can view the waveform diagram of the total power grid power of all devices under the power station and the total power grid power change during the whole day of the day. Long press the waveform to display the actual value of the moment, and the purchased power and feed quantity of the day.


And the current operating status of each inverter device (grid icon: blue > off-grid, green > grid-connected, yellow: standby, gray: offline), active power, grid voltage, frequency, etc. Click the refresh button in the upper right corner of the corresponding device communication number box to update this parameter to the latest value immediately.

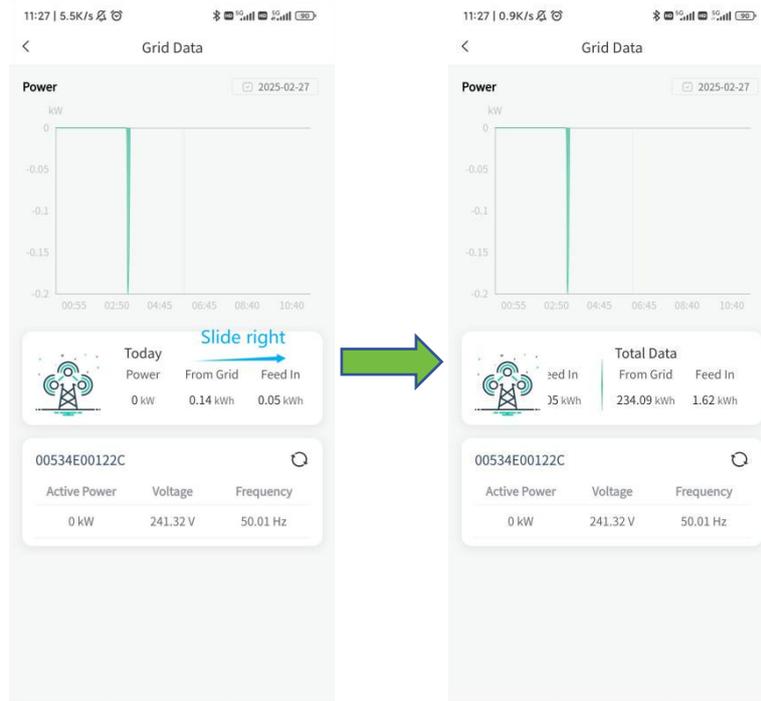

(3) Battery data

Choose Home > Battery > Battery Data to view the waveforms of the total battery power of all devices in the power station, the total battery power of the whole day, and the SOC average value. Hold down the waveform to display the actual value at this time. And how much the battery is charged and discharged today.


The current battery power, voltage, and current of all battery devices in the power station include the battery enabled status or BMS online status (gray: the battery is disabled or offline, yellow: the battery SOC is lower than 50%, and green: the battery SOC is greater than 50%). Click the refresh button in the upper right corner of the corresponding device communication number box to update this parameter to the latest value immediately.

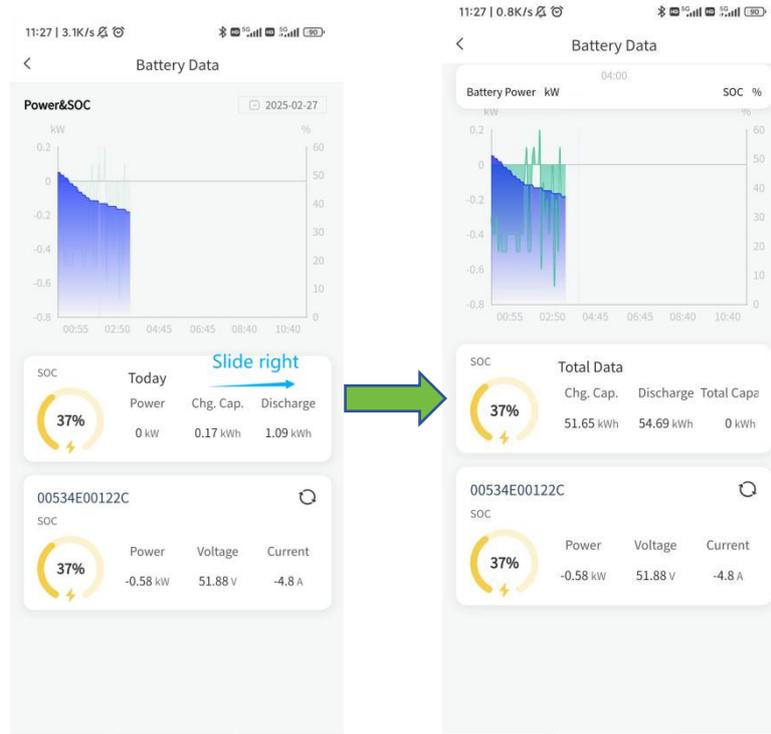

(4) Load data

On the home page > Load > Load Data, you can view the waveform of the total load power of all devices in the power station and the change waveform of the total load power of the whole day on the same day. You can press and hold the waveform to display the actual value at this time. And the current power consumption and total power consumption of the load, the current total power of the load, the general load power, the important load power and the intelligent load power.

And the total active power, reactive power, electricity consumption, voltage, frequency and current of all the equipment under the power station. Click the refresh button in the upper right corner of the corresponding device communication number box to update this parameter to the latest value immediately.

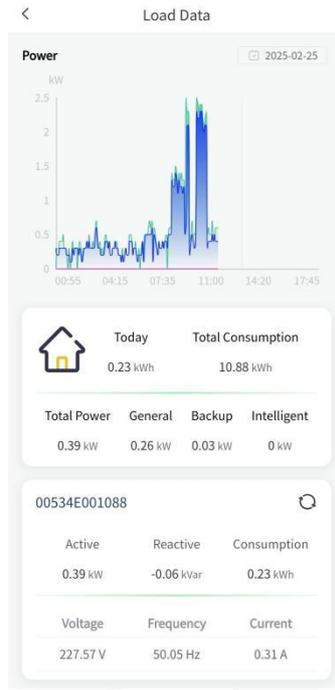

(5) Generator data

By going to Home > Generator > Generator Data, you can view the total power of the motor delivered by the power station, power grid status, generator status, generator operating mode, voltage, frequency and current.

Note: A power station is only allowed to have one generator. The generator on the home page is only displayed when the Advanced Settings - Host Settings - Peripheral, DO function is the generator.

And a convenient setting area to support the generator operation mode, including the generator control mode manual or automatic, as well as SOC start-stop or time-stop. For specific generator operation, see the product manual of each model.




3.Offline Mode

In the case of no network, users can directly connect to the inverter via Bluetooth in offline mode, providing users with a more convenient way to use. In offline mode, the data can be refreshed in real time within 3s without manual refreshing.


3.1 Offline mode operation

Enter the App login interface, click **Offline Mode>Connect Device>Bluetooth Inverter (turn on your phone's Bluetooth) > Click the number on the corresponding WIFI stick to enter.**

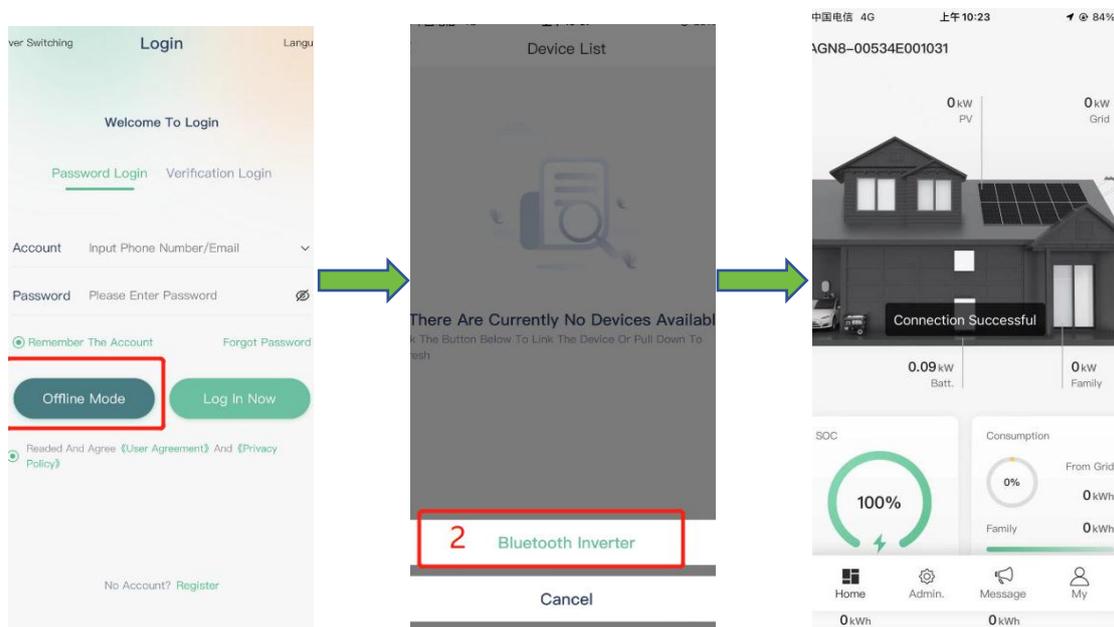

Page 3.1 Binding devices in offline mode

After entering the home page, you can see the communication device number, the operating power of each unit, the battery SOC, the power consumption of the load, the PV power generation, and the power feed to the grid on the same day.

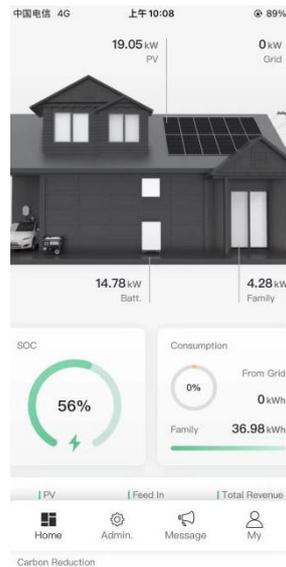

Page 3.2 Offline Mode Home Page

Clicking on the home page house icon, it will take you to the detailed measurement data page. This interface can monitor the information related to grid, emergency load, meter, PV, battery, inverter, generator, commissioning and so on. Click Next to go to the next data page, and click Refresh in the bottom right corner to get the latest value of the current inverter.


Grid	Backup	Meter	PV	Batt.	Inv.	C
Purchased Energy						0kW.h
Feed quantity						0kW.h
Purchased Energy Today						0kW.h
Feed In energy Today						0kW.h
Grid Total power						0kW
DRED Status						0
Grid A phase voltage						0.22V
Grid phase B voltage						0.55V
Grid C phase voltage						0.19V
Grid A-B line voltage						0.46V
Grid BC line voltage						0.55V
Grid CA line voltage						0.18V
Grid voltage frequency						
Grid A phase current effective value						0A

Page 3.3 Offline mode-Measurement data page

3.2 Advanced parameter setting operations

Click Admin to enter the device settings interface, click Advanced Settings to see Host Settings, Battery Settings, users can set the basic parameters according to the country or region where the inverter is located and the actual application scenario of

the inverter.

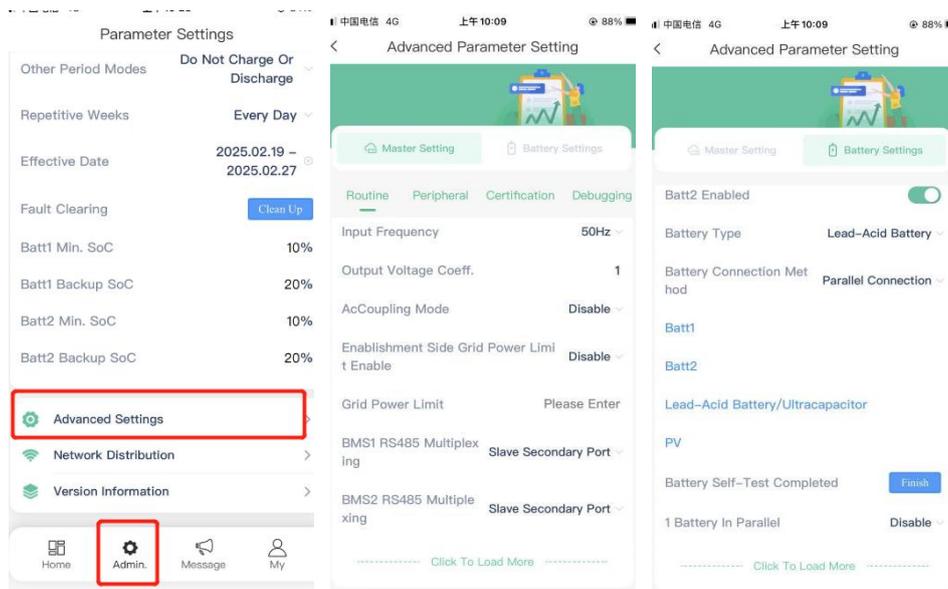

Page 3.4 Offline mode-Parameter setting page

- **Basic Settings**

Basic settings include power on/off settings, date settings, operating mode settings, time charge/discharge mode: time and power settings, fault clearing, minimum battery SOC, and minimum backup SOC settings.

- **Host Settings**

Host settings include settings for general, peripheral, certification, commissioning, and calibration parameters.


- **Battery Settings**

Battery settings include battery enable or prohibit, battery access method, battery protocol, battery voltage, battery maximum and minimum voltage and current settings.

Note: Before sending the power-on command, it is necessary to ensure that the working mode and working parameters match the current system status and have been sent to the inverter.

3.2.1 Setting the date

- Click on the date and the setting box will open
- APP will automatically identify the current date, click to confirm it

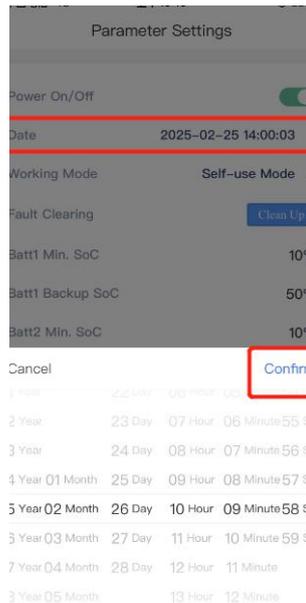

Page 3.5 Offline mode-data settings

3.2.2 Working mode settings

When power on for the first time, the default working mode of the inverter is self-use mode. Currently, the inverter has the following 5 working modes, and the user can choose the required working mode according to the actual situation. Please refer to the user manual of each model for the specific operation logic of the working modes.

(1) Self-use mode

- 1, Set the working mode as: self-use mode;
- 2, Click Advanced, enter the password 123456 to enter the **advanced parameter** setting page, click DC setting;
- 3, According to the user's own needs, select the battery access method, confirm whether the battery and PV are enabled, set the type of battery, the maximum battery charging and discharging current and so on;
- 4, send the power-on command (the on/off button is green).

(2) Timing charge/discharge mode

- 1, Set the working mode to: timed charging and discharging mode;
- 2, according to the demand to set the timed charging and discharging time period (charging and discharging time period is not allowed to cross and overlap, otherwise there will be the case that the machine does not execute the command), set the charging and discharging power, press the + / - sign can be added / deleted charging and discharging time period; other time period mode can be selected to self-generate or not charging and not discharging.
- 3, You can set the repeat date, effective date and cut-off date within a week.
- 4, Users can set the off-grid switching mode.
- 5, Send the power-on command.

(3) Disaster recovery mode

- 1, Set the working mode to the disaster recovery mode;
- 2, Send the power-on command.

(4) PV priority charging

- 1, Set the working mode to the PV priority charging;
- 2, Send the power-on command.

(5) sell power priority mode

- 1, Set the working mode to the sell power priority mode;
- 2, Send the power-on command.

3.2.3 Host Advanced Settings

Through Admin>Set Up>Device Information>Parameter Setting, click 'Advanced Setting' button on the middle column of the page, select Host Setting, click General, and click Load More to view and set the related information of the inverter device.


3.3 View Data

3.3.1 Alarm Information

View all current alarms via Notifications.

Each alarm will indicate the device SN, communication code, occurrence time, alarm severity (red: fault, yellow: alarm, green: prompt), and the solution corresponding to the alarm.

1. Click Message, you can see all the alarm contents.
2. Click the programme, you can see the solution of the fault.
3. Click search, you can enter the name of the alarm, fuzzy to find related alarms.

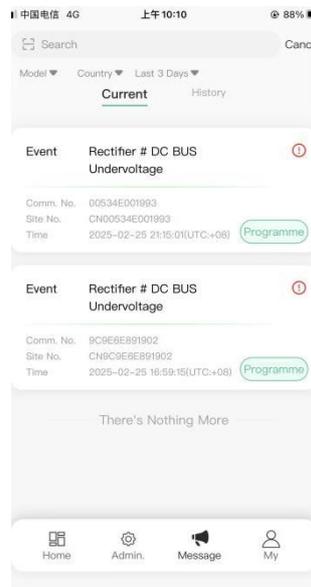


Page 3.6 Offline mode-check the alarm&search

3.3.2 System measurement data

Through the home page (click on the house icon) > Measurement Data, this interface can monitor the grid, emergency load, meter, PV, battery, inverter, generator, commissioning and other related information.

You can select the module you need to view by sliding the title column, and click the corresponding name to jump to the corresponding page. You can also click next and previous to switch pages and get the latest data by clicking the 'Refresh' button at the bottom right corner.

Click any position of the house icon on the home page to jump to the measurement data detail page.

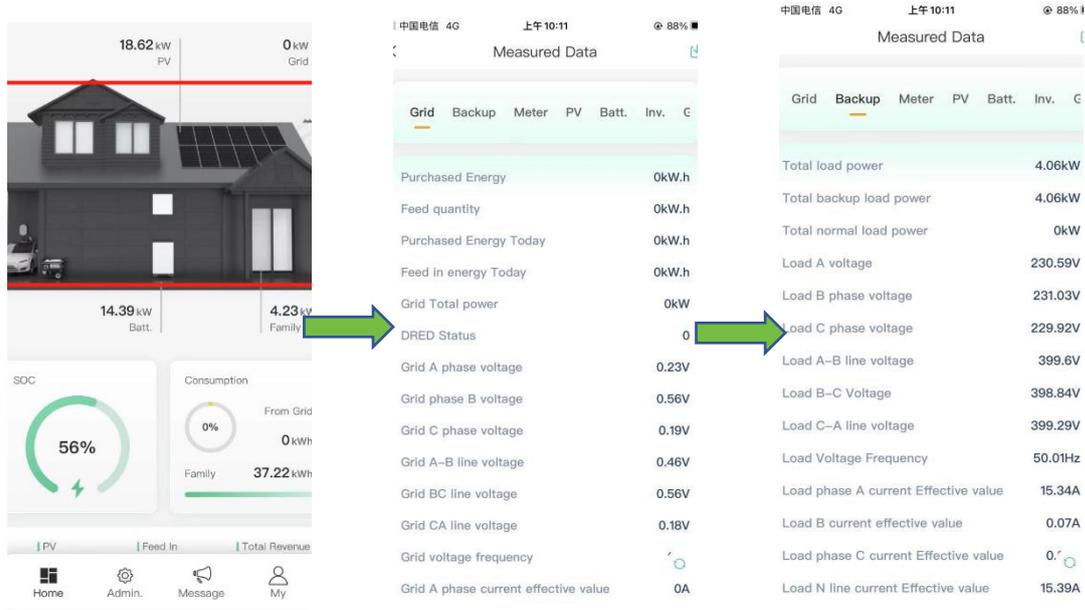


Page 3.7 Offline mode-System measurement data

3.3.3 System unit data

(1)PV data


Through Home>PV>PV Data, you can view the total power, today's power generation and total power generation of the PV unit of the device. and the voltage and current values corresponding to each way PV.

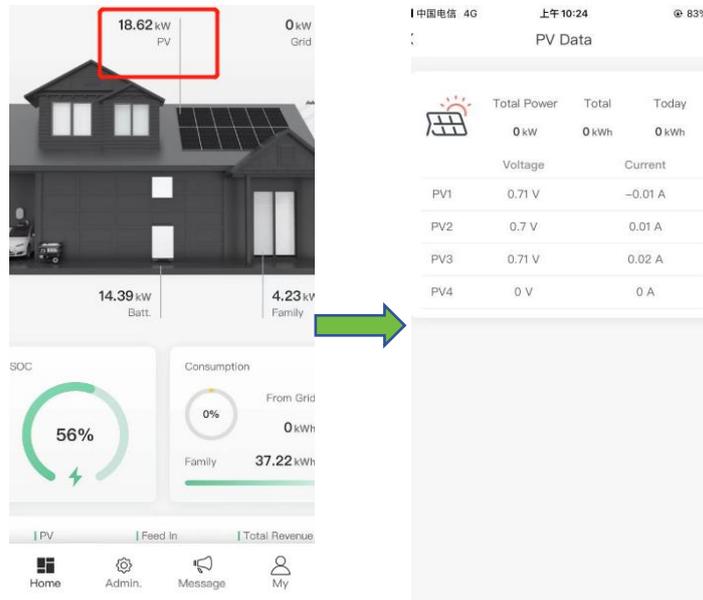

Page 3.8 Offline mode-PV data

(2)Grid data


Through Home > Grid > Grid Data, you can view the total power of the grid, power purchase and feeder of the day for this device. As well as grid active power, grid voltage and frequency.

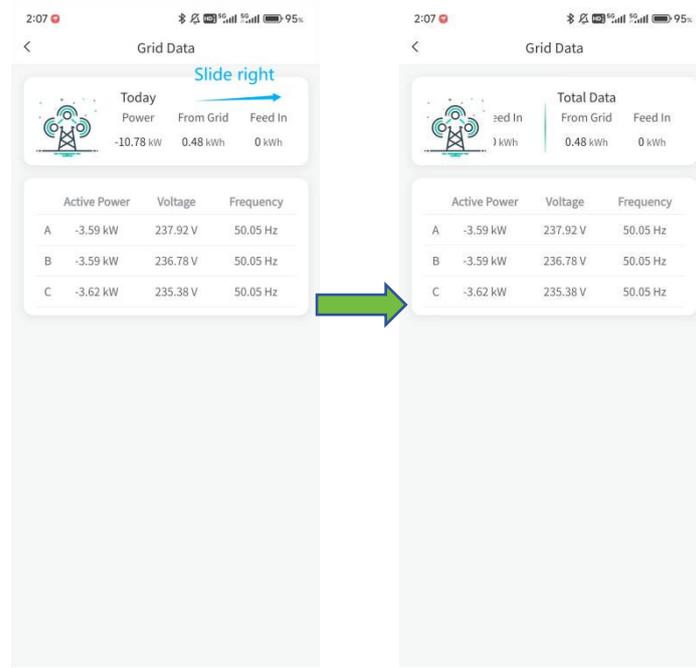

Page 3.9 Offline mode-Grid data

(3)Battery data

Through Home > Battery > Battery Data, you can view the total battery power, SOC, current day charge and discharge of this device. As well as the current power, voltage, and current of each way battery.

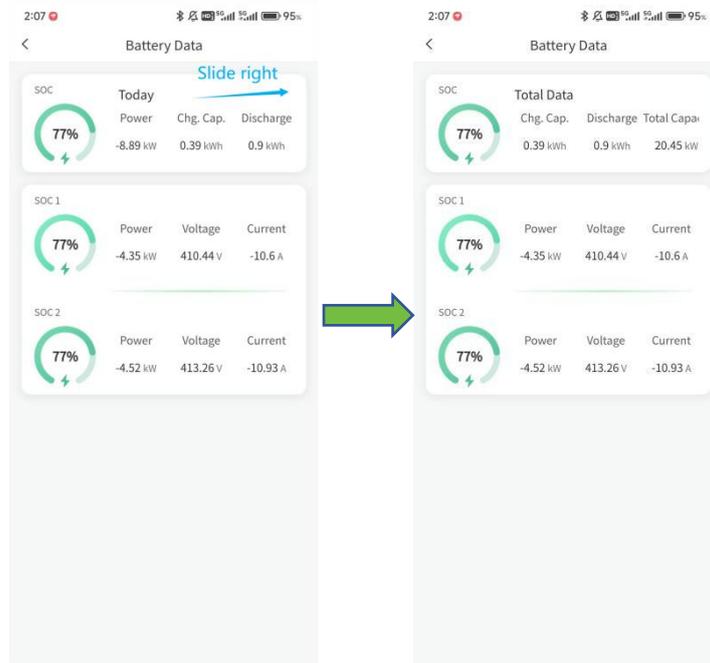


Page 3.10 Offline mode-battery data

(4)Load data

Through Home>Load>Load Data, you can view the load's today's power

consumption and total power consumption, the load's current total power, general load power, important load power, and intelligent load power for this device. As well as the total active power, reactive power, current power consumption, voltage, frequency, and current of the load of this inverter.

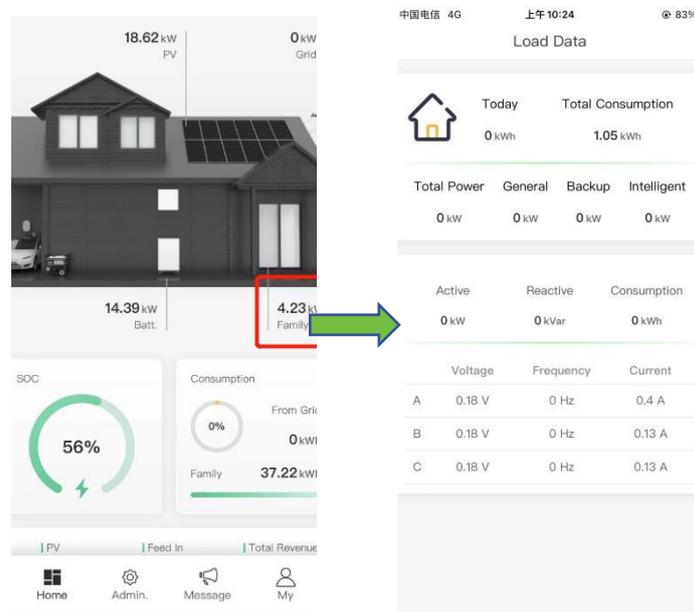


Page 3.11 Offline mode-Load data

(5)Generator data

The Home > Generator > Generator Data allows you to view the total power, grid status, generator status, generator operating mode, voltage, frequency, and current of the unit's generator.

Note: The generator on the home page is only shown when Advanced Settings - Host Settings - Peripheral, DO function is Generator.


As well as support the convenient setting area of generator operation mode, including the control mode of generator manual or automatic, and start/stop according to SOC or start/stop according to time. Specific generator use operation see the product manual of each model.

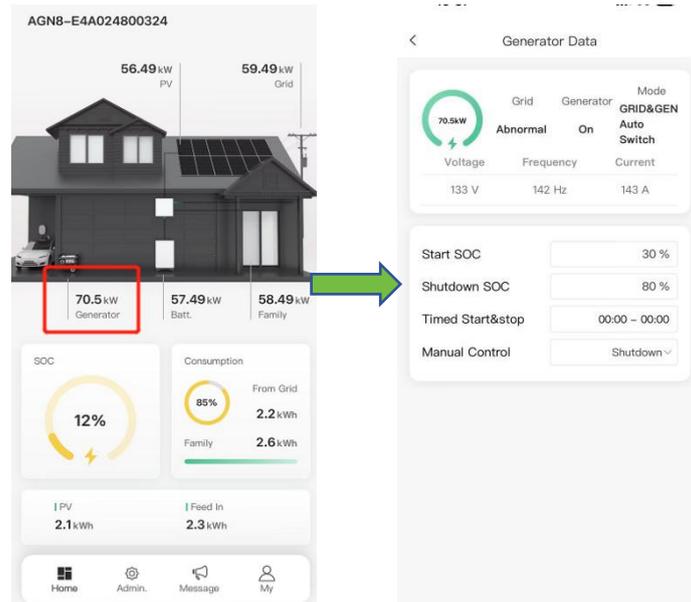

Page 3.12 Offline mode-Generator data

3.3.4 Version information


Through Home>Admin>Version Information>Software Upgrade, you can view the current version information of APP and software version information. If you want to upgrade the code, you can click Software Upgrade, this function needs to contact after-sales confirmation before operation.

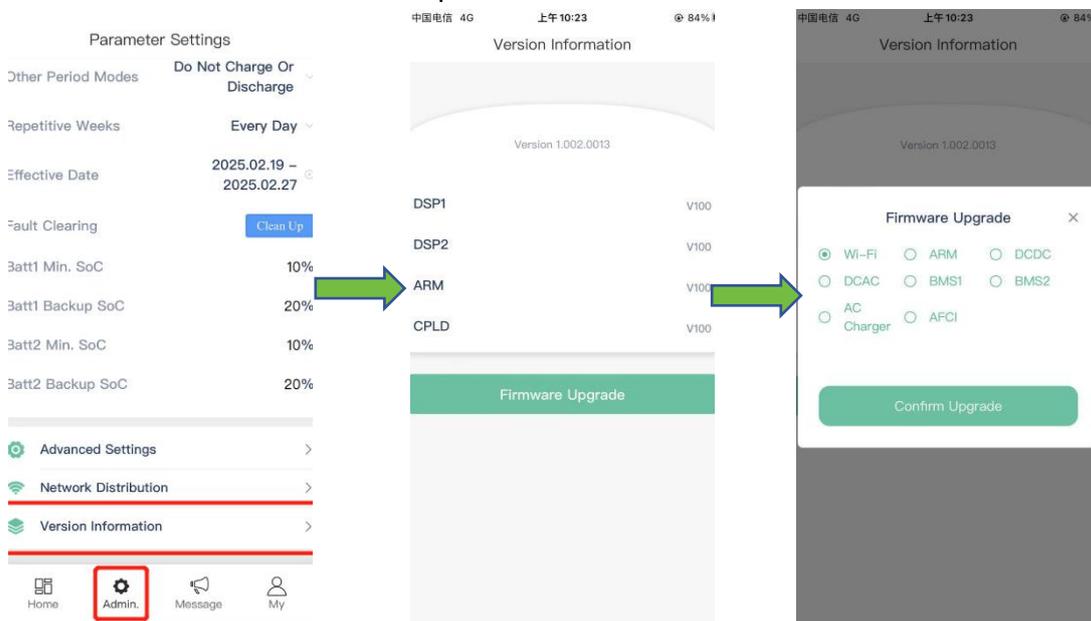

Page 3.13 Version information&software upgrade

3.3.5 Language Settings


You can modify the APP language through Home>My>Language Settings>Select Language.

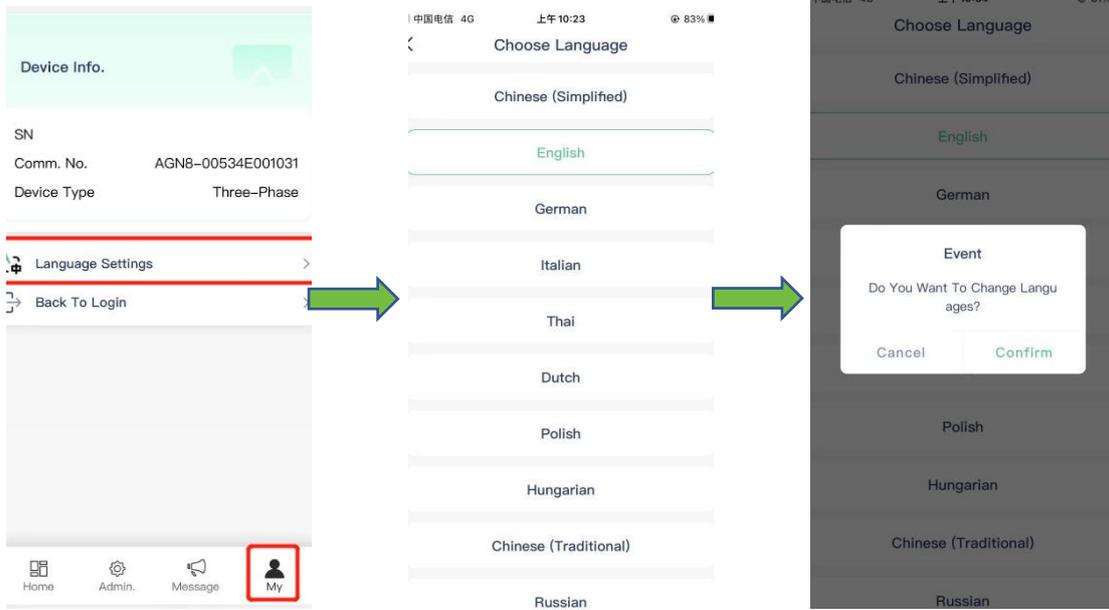

Page 3.14 Language switch

3.3.6 Back to login page

You can switch between APP online mode and offline mode through Home > My > Back to login page.

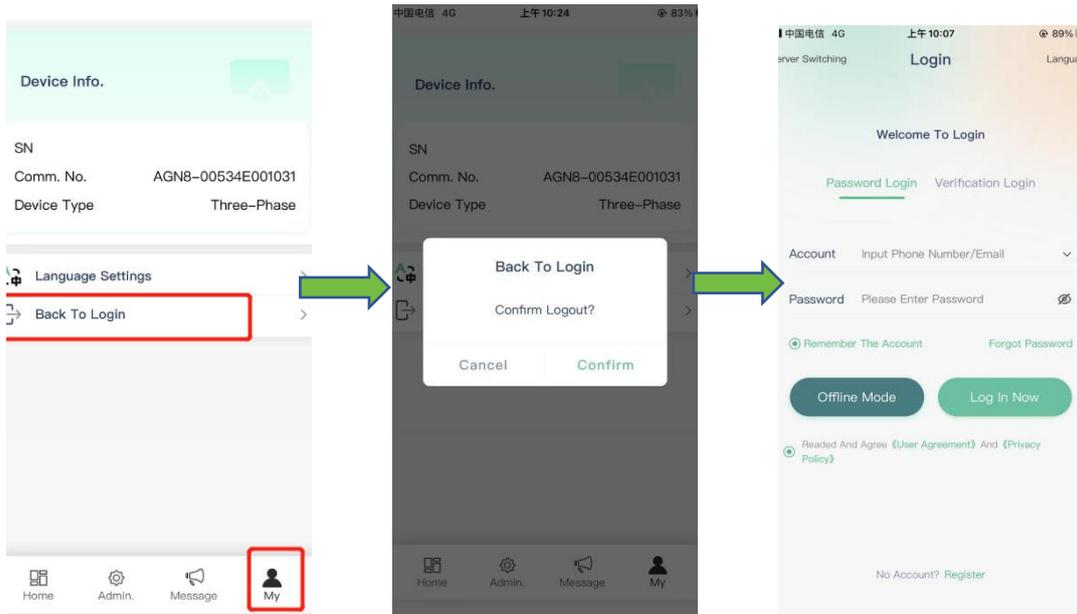

Page 3.15 Back to login page